

## Cecotec Bolero Dresscode 10500 Inverter A (Model 02470)

# Cecotec Bolero Dresscode 10500 Inverter A Washing Machine User Manual

Model: 02470 | Brand: Cecotec

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Cecotec Bolero Dresscode 10500 Inverter A washing machine. Please read this manual thoroughly before using the appliance and keep it for future reference.



Image 1.1: Front view of the Cecotec Bolero Dresscode 10500 Inverter A washing machine, showing the drum, control panel, and 10kg capacity label.

## 2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the appliance is properly grounded.
- Do not allow children to play on or in the appliance.
- Unplug the appliance before cleaning or performing any maintenance.
- Do not operate the appliance if it is damaged or malfunctioning.
- Keep flammable materials away from the appliance.

### 3. PRODUCT OVERVIEW

The Cecotec Bolero Dresscode 10500 Inverter A is a front-load washing machine designed for household use. It features a 10 kg capacity, an Inverter Plus motor for energy efficiency and quiet operation, and a variety of washing programs.

#### 3.1 Key Components

- **Control Panel:** Located at the top front, featuring a rotary knob, digital display, and touch buttons for program selection and settings.
- **Detergent Dispenser:** Compartments for detergent, softener, and pre-wash.
- **Drum:** Stainless steel drum with Pearl Drum texture for gentle and effective washing.
- **Door:** Front-loading door with a secure locking mechanism.
- **Filter:** Easily accessible filter for maintenance.



Image 3.1: Close-up view of the control panel, showing the program selection knob and digital display.

#### 3.2 Dimensions



Image 3.2: Side view of the washing machine illustrating its dimensions: 85 cm height, 63 cm depth, and 60 cm width.

## 4. SETUP AND INSTALLATION

Proper installation is crucial for the performance and longevity of your washing machine. It is recommended to have the appliance installed by a qualified technician.

### 4.1 Unpacking

- Carefully remove all packaging materials.
- Remove the transport bolts from the rear of the machine. These bolts secure the drum during transit and must be removed before use.

## 4.2 Positioning

- Place the washing machine on a firm, level surface.
- Adjust the leveling feet to ensure the machine is stable and does not wobble.

## 4.3 Water and Electrical Connections

- Connect the water inlet hose to a cold water tap.
- Ensure the drain hose is properly installed into a standpipe or sink, preventing kinks.
- Plug the power cord into a grounded electrical outlet. The appliance operates on 230 Volts and 1950 Watts.

## 5. OPERATING INSTRUCTIONS

Follow these steps for optimal washing results.

### 5.1 Loading Laundry

- Open the door and load laundry, ensuring not to overload the 10 kg capacity.
- Close the door firmly.



Image 5.1: Demonstrating the process of loading laundry into the washing machine.

### 5.2 Adding Detergent

- Pull out the detergent dispenser drawer.
- Add appropriate amounts of detergent and softener to their respective compartments.
- Close the dispenser drawer.

### 5.3 Program Selection

Turn the rotary knob on the control panel to select one of the 16 available programs:

- Mix
- Cotton
- Super Rapid (Express 15')
- Eco 40-60
- Wool
- Prewash
- T-shirts (Shirt)

- Sport (Sportswear)
- Intensive
- Bed Linen
- Hypoallergenic (Allergy Care)
- Spin/Drain (Essorage/Drainage)
- Spin (Essorage)
- Drum Clean (Limp. tambor)
- Delicate (Delicados)
- Cotton 20 °C

## 5.4 Special Features

- **SteamMax:** This feature uses steam to penetrate fabric, providing a deep clean and refreshing clothes.



Image 5.2: Visual representation of the SteamMax function, showing steam treating a garment.

- **Pearl Drum:** The drum features a special snowflake-shaped texture designed to improve drying and facilitate garment gliding, ensuring better cleaning and care for your clothes.

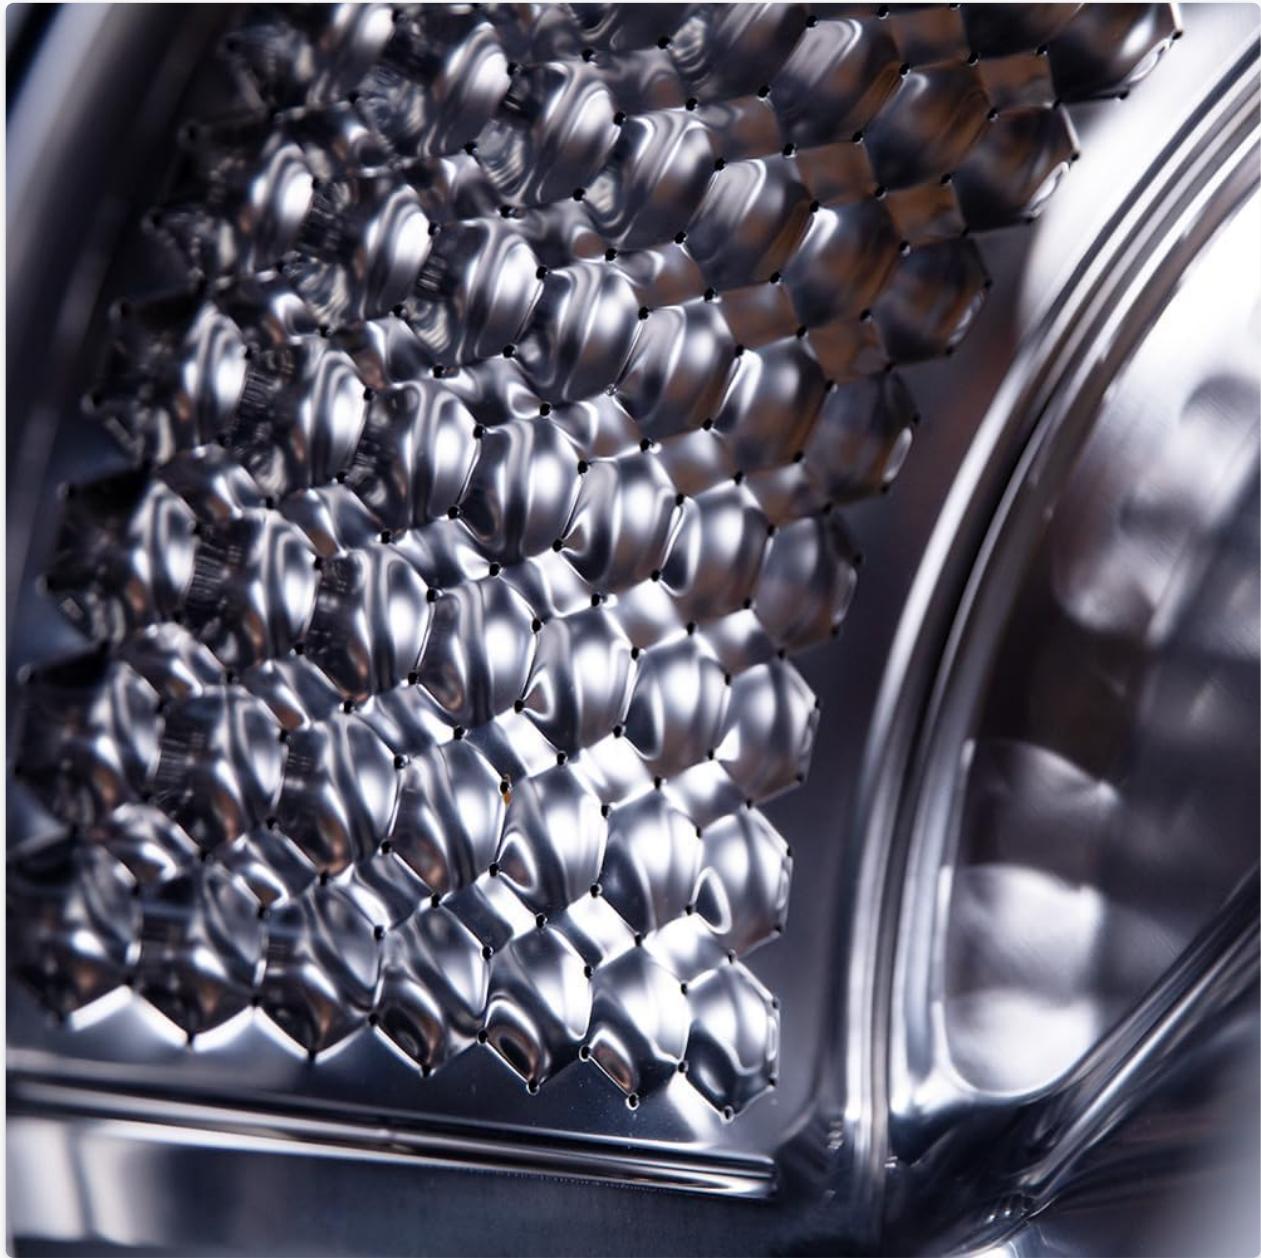


Image 5.3: Detailed view of the Pearl Drum's unique snowflake-like texture.

- **Drum Clean:** A dedicated program to clean the drum, preventing the accumulation of bacteria, dirt, and odors.



Image 5.4: Graphic depicting the Drum Clean cycle, showing water spraying inside the drum for thorough cleaning.

- **Allergy Care:** Before each wash, this function sterilizes with 99.9% steam, focusing on cold water washes to ensure garments are free of germs and bacteria.



Image 5.5: Illustration of the Allergy Care feature, depicting the elimination of germs and bacteria.

- **Delay Start:** Program the washing machine to finish at a desired time, allowing you to schedule washes according to your convenience.
- **Stop&Go Function:** Pause the washing machine during operation to add or remove items.

## 5.5 Starting a Wash Cycle

- After selecting the program and desired options, press the Start/Pause button to begin the cycle.
- The digital display will show the remaining time.

# 6. MAINTENANCE AND CARE

Regular maintenance ensures optimal performance and extends the lifespan of your washing machine.

## 6.1 Cleaning the Exterior

- Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or solvents.

## 6.2 Cleaning the Detergent Dispenser

- Remove the dispenser drawer and rinse it under running water to remove any detergent residue.
- Clean the housing of the dispenser with a brush.

## 6.3 Cleaning the Drum

- Periodically run the 'Drum Clean' program to prevent odors and residue buildup.

## 6.4 Cleaning the Drain Filter

- Locate the drain filter at the bottom front of the machine.
- Place a shallow container beneath the filter to catch any water.
- Carefully unscrew and remove the filter, cleaning any lint or debris.
- Reinsert and tighten the filter securely.

# 7. TROUBLESHOOTING

Refer to this section for solutions to common issues you may encounter.

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged, door not closed, program not selected.	Check power connection, ensure door is latched, select a program and press start.
Water not filling	Water tap closed, inlet hose kinked, water pressure too low.	Open water tap, straighten hose, check household water supply.
Machine vibrates excessively	Transport bolts not removed, machine not level, uneven load.	Remove transport bolts, adjust leveling feet, redistribute laundry in the drum.
Water not draining	Drain hose kinked, drain filter clogged.	Straighten drain hose, clean the drain filter.

If the problem persists after attempting these solutions, please contact customer support.

## 8. SPECIFICATIONS

Feature	Detail
Brand	Cecotec
Model Number	02470
Capacity	10 Kilograms
Spin Speed	1400 rpm
Energy Efficiency Class	A
Motor Type	Inverter Plus
Number of Programs	16
Dimensions (L x W x H)	60 x 30 x 30 cm (Product); 60 x 63 x 85 cm (Approximate overall)
Weight	10 Kilograms (Product); Actual weight may vary.
Voltage	230 Volts
Power	1950 Watts
Loading Type	Front Load
Special Features	Pearl Drum, SteamMax, Allergy Care, Drum Clean, Delay Start, Stop&Go



Image 8.1: The washing machine proudly displaying its Class A energy efficiency rating.



Image 8.2: Diagram illustrating the Inverter Plus motor and its connection to the washing machine drum, highlighting its efficient operation.

## 9. WARRANTY AND SUPPORT

Your Cecotec Bolero Dresscode 10500 Inverter A washing machine comes with a 10-year warranty on the Inverter Motor. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or visit the official Cecotec website.

### 9.1 Customer Support

For technical assistance, spare parts, or service requests, please contact Cecotec customer support through their official channels. Ensure you have your model number (02470) and purchase details ready when contacting support.

	<p><a href="#"><u>Cecotec Bolero 10500 Inverter Washing Machine User Manual</u></a></p> <p>Comprehensive user manual for the Cecotec Bolero 10500 Inverter washing machine, covering safety instructions, installation, operation, maintenance, and troubleshooting.</p>
	<p><a href="#"><u>Cecotec Bolero DressCode Lavadoras: Manual de Instrucciones y Guía de Uso</u></a></p> <p>Manual completo de instrucciones para las lavadoras Cecotec Bolero DressCode (modelos 7610, 8610, 9610, 10610 Inverter). Incluye guías de instalación, operación, seguridad, mantenimiento y especificaciones técnicas.</p>
	<p><a href="#"><u>Manual de Usuario Cecotec Bolero Dresscode Dry 10500 Inverter: Guía Completa</u></a></p> <p>Descubra el manual de usuario para la secadora Cecotec Bolero Dresscode Dry 10500 Inverter y Bolero Dresscode Dry 10500 Inverter Steel. Incluye instrucciones de seguridad, funcionamiento, mantenimiento y especificaciones técnicas.</p>
	<p><a href="#"><u>Manual de Instrucciones: Cecotec Bolero Dresscode 8300/9300 Inverter Max A Lavadora</u></a></p> <p>Guía completa de instrucciones para las lavadoras Cecotec Bolero Dresscode 8300 y 9300 Inverter Max A. Aprenda sobre instalación, funcionamiento, mantenimiento y solución de problemas para optimizar el uso de su electrodoméstico.</p>