

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Cecotec](#) /

› [Cecotec ProClean 5110 Retro Digital Microwave with Grill 20L - User Manual](#)

## Cecotec ProClean 5110

# Cecotec ProClean 5110 Retro Digital Microwave with Grill - User Manual

Model: ProClean 5110

## IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before operating your microwave oven and retain them for future reference. Failure to follow these instructions may result in electric shock, fire, or injury.

- Do not operate the oven when empty.
- Do not attempt to tamper with, or make adjustments or repairs to the door, control panel, safety interlock switches or any other part of the oven.
- Ensure proper ventilation around the appliance.
- Always use microwave-safe cookware.
- Supervise children when they are near the microwave. The child safety lock feature is recommended.

## SETUP AND INSTALLATION

### 1. Unpacking

Carefully remove the microwave oven and all packaging materials. Check for any damage during transit. Do not remove the light brown mica sheet that is attached to the oven cavity to protect the magnetron.

### 2. Placement

- Place the oven on a flat, stable surface capable of supporting its weight.
- Ensure at least 20 cm of free space above the oven, 10 cm at the rear, and 5 cm on both sides for proper ventilation. Do not block any ventilation openings.
- Keep the oven away from heat sources and strong magnetic fields.

### 3. Turntable Installation

Place the roller ring in the center of the oven floor. Position the glass tray securely on top of the roller

ring. Ensure the glass tray is properly seated in the center support.



Image: Interior view of the microwave with the glass turntable and roller ring correctly installed.

#### 4. Power Connection

Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the specifications of the microwave oven.

### OPERATING INSTRUCTIONS

The Cecotec ProClean 5110 features a digital control panel for easy operation.



Image: Digital control panel with display, function buttons, and rotary knob.

## 1. Setting Cooking Time and Power Level

1. Place food in a microwave-safe container on the glass tray and close the door.
2. Press the "Microwave" button to select the desired power level (5 levels available).
3. Use the rotary knob to set the cooking time (up to 60 minutes).
4. Press the "Start" button to begin cooking.

## 2. Grill Function

This microwave includes a grill function for browning and crisping food.

1. Place food on the grill rack (if included) or a heat-resistant dish.
2. Press the "Grill" button.
3. Use the rotary knob to set the grilling time.
4. Press the "Start" button.

## 3. Defrost Function

The defrost mode adapts to various food types for perfect thawing.

1. Place frozen food in the oven.
2. Press the "Defrost" button.

3. Use the rotary knob to set the defrost time or weight (refer to specific instructions in the full manual for weight-based defrosting if applicable).
4. Press the "Start" button.

## 4. Automatic Cooking Programs

The oven features 8 automatic cooking programs for common dishes. Select the desired program and the oven will automatically set the appropriate cooking time and power level.

1. Press the "Auto Menu" button repeatedly to cycle through the 8 programs.
2. Confirm your selection and press "Start".

## 5. End of Cooking Signal

The microwave will emit an audible signal when the cooking cycle is complete.

## 6. Child Safety Lock

To prevent accidental operation by children, activate the child safety lock. Refer to the full manual for specific instructions on how to activate and deactivate this feature, typically by holding a specific button for a few seconds.

## CARE AND MAINTENANCE

### 1. Cleaning the Oven Interior

- Always unplug the oven before cleaning.
- Wipe the interior cavity with a damp cloth after each use. For stubborn stains, use a mild detergent.
- Do not use abrasive cleaners or scouring pads.
- The glass tray and roller ring can be washed in warm soapy water or a dishwasher.

### 2. Cleaning the Exterior

Wipe the exterior surfaces with a soft, damp cloth. Avoid getting water into the ventilation openings.

### 3. Odor Removal

To remove odors, combine a cup of water with the juice of one lemon in a microwave-safe bowl. Heat on high for 5-7 minutes, then let it sit in the oven for a few minutes before wiping clean.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Oven not starting	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure plug is firmly in outlet; Close door securely; Check household fuse/circuit breaker.
Food not heating	Incorrect power level or cooking time set; Microwave-safe cookware not used.	Adjust power/time; Use appropriate cookware.
Turntable not rotating	Turntable not correctly placed; Roller ring obstructed.	Re-position turntable and roller ring; Clean any debris.

Problem	Possible Cause	Solution
Unusual noise during operation	Loose parts; Food container touching oven walls.	Check for loose components; Ensure food container is centered and not touching sides.

If the problem persists after trying these solutions, please contact customer support.

## TECHNICAL SPECIFICATIONS

**Brand:** Cecotec

**Model:** ProClean 5110

**Type:** Digital Microwave with Grill

**Capacity:** 20 Litres

**Microwave Power:** 700 Watts

**Power Levels:** 5

**Timer:** Up to 60 minutes

**Automatic Programs:** 8

**Dimensions (D x W x H):** 35.4 cm x 45.1 cm x 25.8 cm

**Material:** Aluminium

**Installation Type:** Freestanding

**Special Feature:** Grill Function, Defrost Mode, End-of-cooking signal, Child Safety Lock

## WARRANTY INFORMATION

This product is covered by the manufacturer's warranty. Please refer to the warranty card included with your purchase or visit the official Cecotec website for detailed terms and conditions regarding warranty coverage and service.

## CUSTOMER SUPPORT

For technical assistance, spare parts, or any questions regarding your Cecotec ProClean 5110 microwave, please contact Cecotec customer service.

**Website:** [www.cecotec.com](http://www.cecotec.com)

**Contact Information:** Refer to the official website for regional contact details (phone, email).