

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Cecotec](#) /

› [Cecotec ReadyWarm 2070 Max Force Black Fan Heater User Manual](#)

Cecotec ReadyWarm 2070 Max Force (Model 08254)

Cecotec ReadyWarm 2070 Max Force Black Fan Heater

USER MANUAL

Important Safety Instructions

Please read this instruction manual carefully before using the appliance and keep it for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the appliance is unplugged before cleaning or performing any maintenance.
- Do not use this heater in the immediate surroundings of a bath, a shower, or a swimming pool.
- Do not cover the heater. Overheating protection is built-in, but covering can still pose a fire hazard.
- Keep flammable materials such as furniture, curtains, and bedding at least 1 meter (3 feet) from the front and sides of the heater.
- Do not insert any objects into the heater's openings.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Ensure the voltage indicated on the rating label corresponds to the mains voltage in your home.
- The heater features a low oxygen safety shut-off and an effective overheating safety system for your protection.

Product Overview

Familiarize yourself with the components and controls of your Cecotec ReadyWarm 2070 Max Force Black Fan Heater.

Components

- Main Unit with Fan and Heating Element
- Control Dials (Mode Selector, Thermostat)
- Integrated Carry Handle
- Air Inlet and Outlet Grilles



Figure 1: Front view of the Cecotec ReadyWarm 2070 Max Force Black Fan Heater.



Figure 2: Side view of the fan heater, showing its compact design.

Control Panel

The fan heater features two intuitive dials for easy operation.

- **Mode Selector Dial:** Used to switch between Fan (Cool), Low Heat, and High Heat modes, and to turn the unit off.
- **Thermostat Dial:** Used to adjust the desired room temperature.



Figure 3: Close-up of the control dial, showing mode and temperature settings.

Setup

- 1. Unpacking:** Carefully remove the heater from its packaging. Retain the packaging for storage or future transport.
- 2. Placement:** Place the fan heater on a firm, level, and stable surface. Ensure it is positioned at least 1 meter (3 feet) away from walls, furniture, curtains, and other flammable materials. Do not place it directly below a power outlet.
- 3. Power Connection:** Ensure the heater is switched off (Mode Selector dial set to '0'). Plug the power cord into a suitable 230V AC electrical outlet.



Figure 4: Proper placement of the fan heater on a stable surface.

Operating Instructions

Your fan heater offers three operating modes and an adjustable thermostat for optimal comfort.

- 1. Powering On:** With the heater plugged in, turn the Mode Selector dial from '0' to your desired mode.
- 2. Selecting Operating Modes:**
 - **Fan (Cool) Mode:** Turn the Mode Selector dial to the fan symbol. The heater will operate as a fan, circulating cool air without heating.
 - **Low Heat Mode:** Turn the Mode Selector dial to the 'I' symbol. The heater will provide heat at a lower power setting (approximately 1000W).
 - **High Heat Mode:** Turn the Mode Selector dial to the 'II' symbol. The heater will provide heat at its maximum power setting (2000W).
- 3. Adjusting the Thermostat:** Once a heating mode is selected, turn the Thermostat dial clockwise to increase the desired temperature or counter-clockwise to decrease it. The heater will cycle on and off to maintain the set temperature.
- 4. Powering Off:** Turn the Mode Selector dial back to '0'. Unplug the appliance from the power outlet

when not in use for extended periods.

The fan heater operates quietly, making it suitable for use in various environments without causing disturbance.

Maintenance

Regular maintenance ensures the longevity and efficient operation of your fan heater.

Cleaning

- 1. Disconnect Power:** Always unplug the heater from the power outlet and allow it to cool completely before cleaning.
- 2. Exterior Cleaning:** Wipe the exterior surfaces of the heater with a soft, damp cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish.
- 3. Air Inlets/Outlets:** Use a vacuum cleaner with a brush attachment to gently remove dust and debris from the air inlet and outlet grilles. Ensure these areas are clear to maintain proper airflow.
- 4. Drying:** Ensure the heater is completely dry before plugging it back in and using it.

Storage

When not in use, especially during off-season, store the heater in a cool, dry place. It is recommended to store it in its original packaging to protect it from dust and damage.



Figure 5: The integrated handle allows for comfortable movement and storage.

Troubleshooting

If you encounter any issues with your fan heater, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Heater does not turn on.	No power supply; Mode selector is off; Overheating protection activated.	Check if the power cord is securely plugged in. Ensure the Mode Selector dial is set to a heating or fan mode. Unplug the heater, let it cool for 30 minutes, then plug it back in.
No heat output.	Fan (Cool) mode selected; Thermostat set too low.	Ensure a heating mode (Low Heat or High Heat) is selected. Increase the thermostat setting.
Unusual noise or smell.	Dust accumulation; Foreign object inside; First use smell.	Unplug and clean the air inlets/outlets. If a foreign object is suspected, do not operate and contact support. A slight odor during first use is normal and should dissipate.

Problem	Possible Cause	Solution
Heater tips over.	Unstable surface.	The heater has a stability feature to prevent tipping. If it does, ensure it is placed on a flat, stable surface. The tip-over safety switch will automatically turn off the unit if it falls.

Specifications

Technical details for the Cecotec ReadyWarm 2070 Max Force Black Fan Heater.

Feature	Detail
Brand	Cecotec
Model Number	08254
Color	Black
Product Dimensions (L x W x H)	23 x 15 x 28 cm
Item Weight	1.32 Kilograms
Power	2000 Watts
Voltage	230 Volts
Number of Speeds	2 (for heating levels)
Noise Level	10 Decibels
Special Features	Low oxygen safety shut-off, Rapid heating, Lightweight, Electronic thermostat, Energy-efficient
Power Source	Electric Cable
Heating Method	Convection
Recommended Use	Room heating
Mounting Type	Tabletop
Country of Origin	Spain

Warranty and Support

Cecotec products are designed for reliability and performance. For specific warranty details, please refer to the warranty card included with your purchase or visit the official Cecotec website.

Spare Parts Availability: Spare parts for this model are available for up to 10 years from the date of purchase.

For technical support, service, or inquiries, please contact Cecotec customer service through their official channels. Contact information can typically be found on the product packaging or the Cecotec website.