

Cecotec 08432

Cecotec Conga Rockstar 5500 Hurricane ErgoTwice Animal

CORDLESS VACUUM CLEANER USER MANUAL

Model: 08432

1. Important Safety Instructions

Please read all instructions carefully before using the appliance. Retain this manual for future reference.

- This appliance is intended for household use only. Do not use outdoors or on wet surfaces.
- Do not allow children to operate the vacuum cleaner. Close supervision is necessary when used near children.
- Do not pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Turn off the appliance before connecting or disconnecting the battery pack, or before performing any maintenance.
- Use only the charger supplied by the manufacturer to recharge the battery.
- Do not use the appliance if any part is damaged. Contact customer support for repairs.

2. Package Contents

Verify that all components are present in the packaging:

- Main Motor Unit
- Flexible Tube
- Dual Brush Head
- Lithium-Ion Battery (pre-installed or separate)
- Charger Adapter
- 2-in-1 Furniture Accessory
- Corner Accessory
- Wall Mount Bracket
- Special Pet Accessory
- User Manual



Figure 2.1: The Cecotec Conga Rockstar 5500 Hurricane ErgoTwice Animal cordless vacuum cleaner shown with its main unit, flexible tube, floor brush head, and various cleaning accessories including a 2-in-1 tool, corner tool, and pet accessory.

3. Product Overview

The Cecotec Conga Rockstar 5500 Hurricane ErgoTwice Animal is a versatile 3-in-1 cordless vacuum cleaner designed for efficient cleaning of various surfaces. It features a powerful digital motor, cyclonic technology, and a flexible tube for enhanced reach.

Key Components:

- **Main Unit:** Houses the digital motor, dustbin, and battery. Features a digital display for battery status and mode selection.
- **Flexible Tube:** Allows the vacuum to bend, reaching under furniture without excessive bending.

- **Dual Brush Head:** Equipped with two rotating brushes for effective cleaning on both hard floors and carpets.
- **Accessories:** Various tools for specialized cleaning tasks, including pet hair removal.

4. Setup

4.1. Assembly

1. Insert the flexible tube into the main motor unit until it clicks into place.
2. Attach the Dual Brush Head to the other end of the flexible tube, ensuring it locks securely.
3. For handheld use, attach desired accessories directly to the main motor unit.

4.2. Initial Charging

Before first use, fully charge the vacuum cleaner's battery. The battery is a 3000 mAh, 33.6 V Max Lithium-Ion unit.

- Connect the charger adapter to the charging port on the main unit.
- Plug the charger into a power outlet.
- The digital display will indicate charging status. A full charge typically takes 4-5 hours.
- Once fully charged, disconnect the charger.

5. Operating Instructions

5.1. Powering On/Off and Mode Selection

- Press the power button on the main unit to turn the vacuum cleaner on or off.
- Use the mode selection button to cycle through cleaning modes: Eco, Auto, and Turbo.
- The digital display will show the current mode and battery percentage.



Figure 5.1: The digital display on the main unit provides real-time information on battery level and selected cleaning mode (Eco, Auto, or Turbo).

5.2. Cleaning Modes and Autonomy

- **Eco Mode:** Provides up to 90 minutes of autonomy for light cleaning tasks.
- **Auto Mode:** Automatically adjusts suction power based on surface type and dirt level, offering approximately 45 minutes of autonomy.
- **Turbo Mode:** Delivers maximum suction power (180 AW, 30 kPa) for deep cleaning, with approximately 16 minutes of autonomy.

5.3. Using Accessories

The Conga Rockstar 5500 comes with several accessories for versatile cleaning:

- **Dual Brush Head:** Ideal for all floor types. Its omnidirectional design allows for 360-degree movement.
- **Flexible Tube:** Engage the flexible tube system to easily reach under beds, sofas, and other low-clearance areas.



Figure 5.2: The flexible tube allows the vacuum to bend, making it easier to clean under low furniture without needing to stoop or kneel.

- **2-in-1 Furniture and Corner Accessories:** Attach directly to the main unit for cleaning upholstery, shelves, and tight corners.
- **Special Pet Accessory:** Designed for effective removal of pet hair from various surfaces.



Figure 5.3: The specialized pet accessory can be used to effectively remove loose hair from pets, contributing to a cleaner home environment.



Figure 5.4: The main unit can be used in handheld mode with various attachments, such as the brush tool, crevice tool, or upholstery tool, for targeted cleaning.

6. Maintenance

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

6.1. Emptying the Dustbin

- Press the dustbin release button to detach it from the main unit.
- Open the dustbin lid and empty contents into a waste bin.
- Close the lid and reattach the dustbin to the main unit.

6.2. Cleaning Filters

The vacuum uses a washable filter system. Clean filters regularly to maintain suction power.

- Remove the dustbin and locate the filters inside.
- Gently tap the filters to remove loose dust.
- Rinse the filters under running water until clean. Do not use detergents.
- Allow filters to air dry completely for at least 24 hours before reinserting them. Do not use the vacuum

with wet filters.

6.3. Cleaning the Dual Brush Head

- Detach the Dual Brush Head from the flexible tube.
- Remove any tangled hair or debris from the brushes using scissors or a cleaning tool.
- Wipe the brush head housing with a dry cloth.

7. Troubleshooting

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is depleted.	Charge the battery fully.
Reduced suction power.	Dustbin is full.	Empty the dustbin.
	Filters are clogged.	Clean or replace the filters.
	Brush head is obstructed.	Remove any blockages from the brush head.
Brush head not rotating.	Debris tangled in brush.	Clean the brush head and remove any obstructions.
Short battery life.	Using Turbo mode excessively.	Use Eco or Auto mode for longer runtime.
	Battery degradation.	Contact customer support for battery replacement.

8. Specifications

- **Model:** 08432
- **Power:** 630 W
- **Suction Power:** 180 AW / 30 kPa
- **Battery:** 3000 mAh, 33.6 V Max Lithium-Ion
- **Autonomy:** Up to 90 minutes (Eco mode)
- **Charging Time:** 4-5 hours
- **Filter Type:** Washable
- **Dimensions:** 27 x 25 x 121 cm
- **Weight:** 4.5 kg

9. Warranty and Support

This product is covered by a manufacturer's warranty. For detailed warranty terms and conditions, please refer to the warranty card included with your purchase or visit the official Cecotec website.


For technical support, spare parts, or service inquiries, please contact Cecotec customer service through their official channels. Ensure you have your product model number (08432) and proof of purchase

available when contacting support.

For more information, visit the [Cecotec Store on Amazon](#).

© 2023 Cecotec. All rights reserved.

Documents - Cecotec – 08432

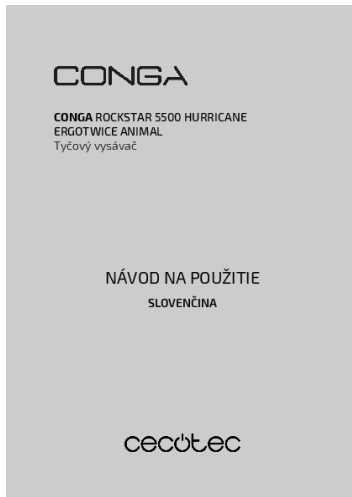

[\[pdf\]](#) User Manual

Ivan Mucha NÁVOD NA POUŽITIE Typ 8INR19 66 Menovitý výkon motora 600W kefy 30W výstup nabíjačky 35 V 0 5 A Hlučnosť 79 dB Page 10 Výrobca si Cecotec Conga Rockstar 5500 Hurricane Ergotwice Animal SK dwn alza cz manual 123949 |||

CONGA ROCKSTAR 5500 HURRICANE ERGOTWICE ANIMAL Tycov vysvac NVOD NA POUZITIE SLOVENCINA 2 BEZPEC ... CHNICK SPECIFIKCIE Produkt: Conga Rockstar 5500 Hurricane ErgoTwice Animal Referencn cslo produktu: **08432** Batria: 29,6 V DC 3000 mAh 88,80 Wh Typ: 8INR19/66 Menovit vkon motora: 600W Menovit vkon kefy...

lang:it score:26 filesize: 208.72 K page_count: 12 document date: 2024-01-25




[\[pdf\]](#) User Manual Instructions Troubleshooting Guide Specifications

CONGA ROCKSTAR 5500 HURRICANE ERGOTWICE ANIMAL May 29 2023 · Inspeccione el cable de alimentación regularmente en busca daños visibles especialmente la clavija y envoltente del cargador Cecotec Conga Rockstar Hurricane Ergotwice Animal CZ DE EN PL dwn alza cz manual 123948 |||

CONGA ROCKSTAR 5500 HURRICANE ERGOTWICE ANIMAL Aspirador vertical/Upright vacuum cleaner **08432**_Conga Rockstar 5500 Hurricane ErgoTwice Animal.indd 1 Manual de instrucciones Instruction manual Manuel d instructions Bedienungsanleitung Manuale di istruzioni Manual de instrues Handleiding Instrukcja ...

lang:es score:24 filesize: 2.03 M page_count: 112 document date: 2023-05-29

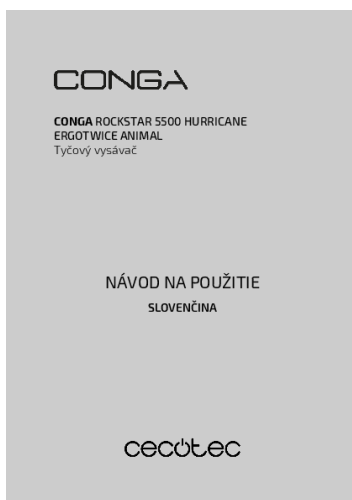

[\[pdf\]](#)

Ivan Mucha Cecotec Conga Rockstar 5500 Hurricane SK NÁĽvod 208 72 kB Ergotwice Animal tyÄovÄ½ vysÄĽvaÄ Nay sk 2297487 cdn nay images orig 7 |||

CONGA ROCKSTAR 5500 HURRICANE ERGOTWICE ANIMAL Tycov vysvac NVOD NA POUZITIE SLOVENCINA 2 BEZPEC ... CHNICK SPECIFIKCIE Produkt: Conga Rockstar 5500 Hurricane ErgoTwice Animal Referencn cslo produktu: **08432** Batria: 29,6 V DC 3000 mAh 88,80 Wh Typ: 8INR19/66 Menovit vkon motora: 600W Menovit vkon kefy...

lang:it score:20 filesize: 259.83 K page_count: 12 document date: 2024-01-25



[pdf] Catalog

Catalogue Conga Rockstar 2023 CECOTEC EN cdn cecotec cloud s3 amazonaws media IFA2023 |||
R O C K S T A R Upright vacuum cleaners Power to infinity and beyond Conga
RockStar is a terrific c ... Jalisco brush. Accessory for corners 2-in-1 accessory. Wall
bracket Instruction manual 8435484**084321** Box 18435484**084328** Master **08432** 32
Discover the range 33 Conga Rockstar 7500 Astral ...
lang:en score:15 filesize: 18.94 M page_count: 23 document date: 2023-08-31