

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Cecotec](#) /

› [Cecotec Bake&Toast 1090 10L Mini Oven Instruction Manual](#)

Cecotec Bake&Toast 1090 (03816)

Cecotec Bake&Toast 1090 10L Mini Oven Instruction Manual

Model: 1090 (03816)

[Safety Instructions](#) [Components](#) [Setup](#) [Operating](#)
[Instructions](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

INTRODUCTION

Thank you for choosing the Cecotec Bake&Toast 1090 10L Mini Oven. This manual provides important information for the safe and efficient use of your appliance. Please read it thoroughly before first use and keep it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.

- A fire may occur if the oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not place any materials other than manufacturer's recommended accessories in this oven when not in use.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, or similar materials.
- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
- Exercise extreme caution when removing tray or disposing of hot grease.
- The appliance has protected quartz heating elements.
- The exterior surfaces of the oven can become very hot during operation. Ensure adequate clearance around the unit.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your Cecotec Bake&Toast 1090 mini oven:

1. Temperature Control Knob (up to 230 °C)
2. Function Selector Knob (if applicable, not explicitly mentioned but common for ovens)
3. Timer Knob (up to 60 minutes with acoustic alarm)
4. Power Indicator Light
5. Double-Glazed Door
6. Baking Tray
7. Grill Rack
8. Handle with Tongs (for safe removal of hot accessories)
9. Crumb Tray (removable for easy cleaning)
10. Quartz Heating Elements (top and bottom)



Figure 1: Front view of the Cecotec Bake&Toast 1090 mini oven, showing the control knobs on the right side and the double-glazed door.

SETUP AND FIRST USE

- Unpacking:** Carefully remove the oven and all accessories from the packaging. Retain packaging for future storage or disposal.
- Placement:** Place the oven on a stable, heat-resistant, and level surface. Ensure there is at least 10-15 cm (4-6 inches) of clearance on all sides and above the oven for proper ventilation. Do not place near flammable materials like curtains.
- Cleaning:** Before first use, wipe the exterior with a damp cloth. Wash the baking tray, grill rack, and handle with tongs in warm, soapy water. Rinse thoroughly and dry completely. Do not immerse the main unit in water.
- First Burn-off:** It is recommended to run the oven empty for about 10-15 minutes at maximum temperature (230 °C) to burn off any manufacturing residues. This may produce a slight odor or smoke, which is normal. Ensure the area is well-ventilated during this process.
- Power Connection:** Plug the power cord into a grounded electrical outlet.



Figure 2: The mini oven positioned on a kitchen counter, demonstrating appropriate placement with clear space around it.

OPERATING INSTRUCTIONS

General Operation

- 1. Prepare Food:** Place your food on the baking tray or grill rack.
- 2. Insert Accessories:** Carefully slide the baking tray or grill rack into the desired rack position inside the oven.
- 3. Set Temperature:** Turn the temperature control knob to your desired temperature, up to 230 °C.
- 4. Set Timer:** Turn the timer knob to the desired cooking time, up to 60 minutes. The power indicator light will illuminate, indicating the oven is operating. The oven will begin heating immediately.
- 5. Monitor Cooking:** The double-glazed door allows for easy monitoring of your food without opening the oven and losing heat.
- 6. Completion:** When the set time elapses, the oven will emit an acoustic alarm and automatically turn off. The power

indicator light will extinguish.

7. **Remove Food:** Using the provided handle with tongs, carefully remove the hot baking tray or grill rack from the oven. Always use oven mitts or heat-resistant gloves.
8. **Manual Shut-off:** To stop cooking before the timer expires, turn the timer knob to the "OFF" position.

Using the Accessories

- **Baking Tray:** Ideal for baking cookies, pastries, or heating small dishes.
- **Grill Rack:** Suitable for toasting bread, grilling small items, or placing oven-safe dishes on.
- **Handle with Tongs:** Use this tool to safely insert and remove the hot baking tray and grill rack, minimizing direct contact with hot surfaces.



Figure 3: A tart baking inside the mini oven, illustrating the use of the baking tray.



Figure 4: Cookies being baked on the tray inside the mini oven, showing the interior space.



Figure 5: Illustration of heat circulation within the mini oven, indicating even cooking for consistent results.

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your oven.

- Always Unplug:** Before cleaning, always unplug the oven from the power outlet and allow it to cool completely.
- Crumb Tray:** The removable crumb tray should be cleaned regularly to prevent grease buildup and potential fire hazards. Slide out the tray, discard crumbs, and wash it in warm, soapy water. Rinse and dry thoroughly before reinserting.
- Interior:** Wipe the interior walls and glass door with a damp cloth and mild detergent. For stubborn stains, a non-abrasive cleaner can be used. Avoid using harsh chemicals or abrasive sponges that could damage the non-stick coating (if present) or surfaces.
- Exterior:** Clean the exterior surface with a soft, damp cloth. Do not use abrasive cleaners or scourers.
- Accessories:** Wash the baking tray, grill rack, and handle with tongs in warm, soapy water. They are generally not

dishwasher safe unless specified.

6. **Do Not Immense:** Never immerse the main oven unit, power cord, or plug in water or any other liquid.



Figure 6: Food cooking inside the mini oven, highlighting the clean interior and visibility through the door.



Figure 7: The removable crumb tray of the mini oven, shown with crumbs, indicating ease of cleaning.

TROUBLESHOOTING

Before contacting customer support, please refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outlet not working; timer not set.	Ensure the oven is securely plugged into a working outlet. Turn the timer knob past the "OFF" position to activate.
Food is not cooking evenly.	Incorrect temperature setting; food placed too close to heating elements; uneven food distribution.	Adjust temperature as needed. Ensure food is centered and not touching heating elements. Rotate food halfway through cooking if necessary.

Problem	Possible Cause	Solution
Smoke or unusual odor during first use.	Manufacturing residues burning off.	This is normal for first use. Ensure good ventilation. It should dissipate after 10-15 minutes of operation.
Exterior of oven is very hot.	Normal operation.	This is expected. Always use caution and avoid touching hot surfaces. Ensure adequate clearance around the oven.
Timer does not sound or oven does not turn off.	Timer malfunction.	If the timer fails, manually turn the oven off by rotating the timer knob to "OFF". Contact customer support if the issue persists.

PRODUCT SPECIFICATIONS

Brand	Cecotec
Model Name	Bake&Toast 1090
Model Number	03816
Capacity	10 Litres
Power	1000 Watts
Temperature Range	Up to 230 °C
Timer	Up to 60 minutes with acoustic alarm
Dimensions (L x W x H)	27 x 37 x 20.5 cm
Weight	2.77 Kilograms
Material	Stainless steel, Glass
Control Type	Button control
Door Style	Double glass
Included Components	Baking tray, grill rack, handle with tongs

WARRANTY AND SUPPORT

Specific warranty information for the Cecotec Bake&Toast 1090 mini oven is not provided in the available product data. Please refer to the warranty card included with your product or contact Cecotec customer service for detailed warranty terms and conditions.

For technical support, spare parts, or service inquiries, please visit the official Cecotec website or contact their customer support channels. Keep your purchase receipt and product model number (03816) handy when contacting support.

