

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Cecotec](#) /
- › [Cecotec Bolero DressCode 10800 Washing Machine User Manual](#)

Cecotec 02787

Cecotec Bolero DressCode 10800 Washing Machine User Manual

Model: 02787 | Brand: Cecotec

1. PRODUCT OVERVIEW

The Cecotec Bolero DressCode 10800 Inverter Steel washing machine is a high-capacity front-load appliance designed for efficient and thorough laundry care. It features advanced technologies to optimize washing performance, reduce energy consumption, and ensure garment protection.



Front view of the Cecotec Bolero DressCode 10800 Inverter Steel washing machine, showcasing its modern design and control panel.

Key Features:

- **10 kg Capacity:** Large capacity for handling significant laundry loads.
- **1400 rpm Spin Speed:** High spin speed for effective water extraction.
- **16 Programs:** A wide variety of wash programs tailored for different fabric types and needs.
- **Class A Energy Efficiency:** Designed for optimal energy savings.
- **Inverter Plus Motor:** Ensures efficient, quiet operation and extended durability.
- **SteamMax Function:** Hygienic steam treatment before the main wash cycle.
- **OnSmart Intelligent Wash:** Automatically selects the ideal wash program.
- **Fuzzy Logic:** Detects load size and optimizes water and wash time.
- **Pearl Drum:** Special drum texture for gentle garment care.
- **Spa Care:** Pre-wash steam sterilization for enhanced hygiene.
- **KidLock:** Child safety lock feature.
- **Smooth Wash:** Ultra-silent wash and spin system.

2. SAFETY INSTRUCTIONS

Before operating the appliance, please read all safety instructions carefully to prevent injury or damage. Keep this manual for future reference.

- Ensure the washing machine is properly grounded.
- Do not allow children to play with or operate the appliance.
- Unplug the washing machine from the power outlet before performing any maintenance or cleaning.
- Do not wash items that are soiled with flammable substances.
- Ensure the water supply hoses are securely connected to prevent leaks.
- Do not open the detergent dispenser or door during a wash cycle, especially when hot water or steam is present.

3. SETUP AND INSTALLATION

Proper installation is crucial for the washing machine's performance and longevity. Follow these steps carefully.

3.1 Unpacking and Inspection

Carefully remove all packaging materials. Inspect the appliance for any damage during transit. Report any damage to your retailer immediately.

3.2 Removing Transport Bolts

Important: Before using the washing machine, you must remove the transport bolts located at the rear of the appliance. Failure to do so will cause excessive vibration and damage during operation.



Rear view of the washing machine, indicating the location of transport bolts that must be removed before first use.

1. Locate the transport bolts on the back panel.
2. Use a wrench to loosen and remove the bolts.
3. Insert the plastic caps provided into the holes.

3.3 Leveling the Appliance

The washing machine must be perfectly level to prevent vibration and noise during operation.



Side view of the washing machine showing its dimensions (85 cm height, 60 cm width, 58 cm depth), essential for proper placement and leveling.

1. Place a spirit level on top of the washing machine.
2. Adjust the adjustable feet at the bottom of the appliance until it is perfectly level.
3. Tighten the lock nuts on the adjustable feet to secure them in place.

3.4 Water and Power Connection

Connect the water inlet hose to a cold water tap and the drain hose to a suitable drain pipe. Plug the power cord into a

grounded electrical outlet.

What's in the Box:

- Washing Machine
- Water Supply Hose
- User Manual
- Transport Bolt Caps

4. OPERATING INSTRUCTIONS

This section guides you through the daily operation of your Cecotec washing machine.

4.1 Control Panel Overview



Detailed view of the washing machine's touch display and rotary knob for program selection.

The washing machine features an intuitive touch display and a central rotary knob for program selection. The display

shows remaining time, selected options, and error codes.

4.2 Program Selection

Turn the rotary knob to select one of the 16 available wash programs. Each program is designed for specific fabric types and soil levels.



Visual representation of the 16 diverse wash programs available, catering to various garment types from delicate to heavy-duty.

4.3 Adding Detergent and Fabric Softener

Open the detergent dispenser drawer and add the appropriate amount of detergent to the main wash compartment and fabric softener to its designated compartment. Refer to detergent packaging for dosage recommendations.

4.4 Starting a Wash Cycle

1. Load laundry into the drum, ensuring not to overload.
2. Close the door firmly.
3. Select the desired program using the rotary knob.
4. Adjust additional options (temperature, spin speed, etc.) using the touch display.
5. Press the Start/Pause button to begin the cycle.

4.5 Special Functions

- **OnSmart:** Press the OnSmart button to activate intelligent wash mode, which automatically selects the best program based on load.
- **DelayStart:** Program the washing machine to start a cycle between 0 and 24 hours later.
- **SteamMax:** This function adds a hygienic steam treatment before the main wash, enveloping and sterilizing the laundry.
- **Fuzzy Logic:** The machine automatically detects the wash load and optimizes water level and wash time for improved performance.
- **Spa Care:** Before each wash, this feature sterilizes laundry with 99.9% steam, particularly effective for cold water washes.
- **Smooth Wash:** Utilizes the ESC system to adjust washing and spinning to an ultra-silent mode.

5. MAINTENANCE AND CARE

Regular maintenance ensures optimal performance and extends the lifespan of your washing machine.

5.1 Drum Cleaning (DrumClean Function)

The DrumClean function allows for automatic cleaning of the drum, ensuring total hygiene and preventing odors.



The Pearl Drum features a unique snowflake-like texture designed to facilitate garment sliding and provide gentle care during washing.

Run the DrumClean program periodically, especially if you notice any unpleasant smells or residue in the drum.

5.2 Cleaning the Detergent Dispenser

Remove the detergent dispenser drawer and rinse it under warm water to remove any detergent or fabric softener residue. Clean the housing of the dispenser with a brush if necessary.

5.3 Cleaning the Door Seal

Regularly wipe the rubber door seal with a damp cloth to remove lint, dirt, and mold buildup. This model features an antibacterial gasket to help prevent germ formation.



The antibacterial gasket around the washing machine door helps prevent the formation of germs and mold inside the appliance.

5.4 Cleaning the Drain Filter

The drain filter should be cleaned periodically to prevent blockages and ensure proper drainage. Refer to the full manual for detailed instructions on accessing and cleaning the filter.

6. TROUBLESHOOTING

If you encounter issues with your washing machine, consult this section before contacting customer service.

Problem	Possible Cause	Solution
Washing machine does not start.	Power cord not plugged in; door not closed properly; program not selected.	Check power connection; ensure door is securely latched; select a program and press Start.
Excessive vibration or noise.	Transport bolts not removed; appliance not level; uneven load.	Ensure transport bolts are removed; level the machine using adjustable feet; redistribute laundry inside the drum.
Water not draining.	Drain hose kinked or blocked; drain filter clogged.	Check drain hose for kinks; clean the drain filter.
Detergent residue in dispenser.	Insufficient water pressure; dispenser clogged.	Check water supply; clean the detergent dispenser.


For more detailed troubleshooting or error codes, please refer to the complete user manual or contact Cecotec customer support.

7. SPECIFICATIONS

Technical details for the Cecotec Bolero DressCode 10800 Inverter Steel washing machine.

Feature	Detail
Model Number	02787
Capacity	10 kg
Max Spin Speed	1400 rpm
Energy Efficiency Class	A

Feature	Detail
Motor Type	Inverter Plus
Dimensions (H x W x D)	85 x 60 x 58 cm
Weight	65 kg
Noise Level (Spin)	76 dB
Water Consumption (per 100 cycles)	51 L

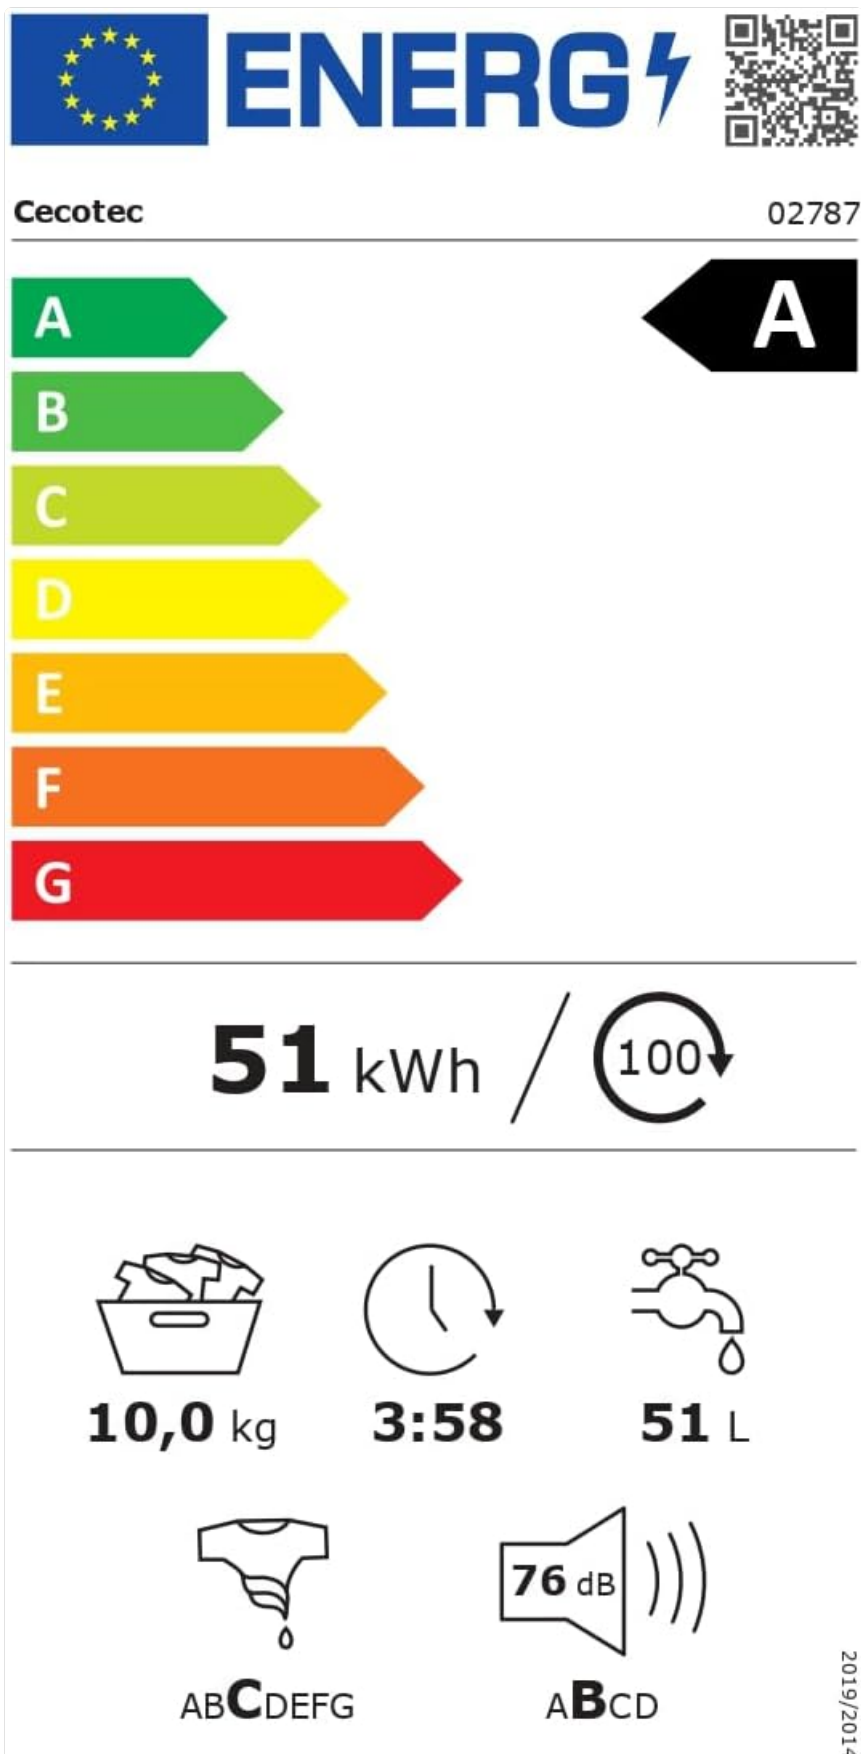

The official energy label for the Cecotec Bolero DressCode 10800, highlighting its Class A energy efficiency, 10 kg capacity, and water consumption.

For more detailed information, visit the [EPREL database](#).

8. WARRANTY AND SUPPORT

Cecotec products are manufactured to high-quality standards. In the unlikely event of a defect, please refer to the warranty information below.

8.1 Warranty Information

This appliance comes with a minimum warranty period of**36 months (3 years)** provided by the manufacturer. This warranty covers manufacturing defects and ensures efficient operation. Please retain your proof of purchase for warranty claims.




8.2 Customer Support

For technical assistance, spare parts, or any questions regarding your Cecotec washing machine, please contact Cecotec customer support. Contact details can typically be found on the official Cecotec website or in the full printed manual that came with your product.

You can also visit the official[Cecotec Brand Store on Amazon](#) for more information and product updates.

© 2024 Cecotec. All rights reserved.

Related Documents - 02787

	<p>Cecotec Bolero DressCode Lavadoras: Manual de Instrucciones y Guía de Uso</p> <p>Manual completo de instrucciones para las lavadoras Cecotec Bolero DressCode (modelos 7610, 8610, 9610, 10610 Inverter). Incluye guías de instalación, operación, seguridad, mantenimiento y especificaciones técnicas.</p>
	<p>Manual de Usuario Lavadora Cecotec Bolero Dresscode Inverter</p> <p>Este documento es el manual de usuario para la serie de lavadoras Cecotec Bolero Dresscode Inverter, incluyendo los modelos 8400, 9400 y 10400. Proporciona instrucciones completas sobre instalación, funcionamiento, seguridad, mantenimiento y resolución de problemas.</p>
	<p>Cecotec Bolero Dresscode Dry Inverter Clothes Dryer User Manual</p> <p>User manual and product information for the Cecotec Bolero Dresscode Dry Inverter series of clothes dryers, including models 8400 and 9400, in standard and steel finishes. Learn about features, operation, and maintenance.</p>



[Cecotec Bolero DressCode 10900 Autodose Inverter: Manual de Usuario y Guía de Instrucciones](#)

Descubra el manual de usuario para la lavadora Cecotec Bolero DressCode 10900 Autodose Inverter. Encuentre instrucciones detalladas, guías de seguridad y especificaciones técnicas para su correcto funcionamiento y mantenimiento.



[Manual de Usuario Lavadora Cecotec Bolero DressCode 8500 Inverter A / Steel A](#)

Manual de usuario completo para las lavadoras Cecotec Bolero DressCode 8500 Inverter A y Steel A. Incluye instrucciones de seguridad, instalación, funcionamiento, mantenimiento, solución de problemas y especificaciones técnicas.



[Cecotec Bolero Wash&Dry: Manual de Instrucciones para Lavadora Secadora](#)

Guía completa de instrucciones para las lavadoras secadoras Cecotec Bolero Wash&Dry 8580 Inverter, 8580 Inverter Ice Blue y 8590 Inverter Steel Max. Incluye información de seguridad, instalación, uso y mantenimiento.