

Cecotec 05862

Cecotec FreeGo Wash Electric Mop 40W User Manual

Model: 05862 | Brand: Cecotec

1. INTRODUCTION

Thank you for choosing the Cecotec FreeGo Wash Electric Mop. This manual provides essential information for the safe and efficient use, maintenance, and troubleshooting of your device. Please read these instructions carefully before first use and keep them for future reference.

Safety Instructions

- Ensure the power supply voltage matches the device's requirements.
- Do not immerse the main unit in water or other liquids.
- Keep the device away from children and pets.
- Use only the original charger and accessories provided by Cecotec.
- Do not use the device to clean flammable or combustible liquids.
- Always unplug the device before cleaning or performing maintenance.
- Avoid using foaming detergents, as they can damage the device.

2. PRODUCT COMPONENTS

Familiarize yourself with the parts of your Cecotec FreeGo Wash Electric Mop:

- Main Unit (Handle, Motor Housing, Battery)
- Jalisco Wet Roller
- Clean Water Tank (420 ml)
- Dirty Water Tank (150 ml)
- Self-Cleaning Base

- Power Adapter/Charger



Figure 2.1: The Cecotec FreeGo Wash Electric Mop, shown with its self-cleaning base and a close-up of the Jalisco wet roller, highlighting its design for efficient floor cleaning.

3. SETUP

3.1 Unpacking and Assembly

1. Carefully remove all components from the packaging.
2. Attach the handle to the main unit until it clicks into place.
3. Ensure the Jalisco wet roller is correctly installed in the mop head.

3.2 Initial Charging

Before first use, fully charge the electric mop.

1. Place the mop on its self-cleaning base.
2. Connect the power adapter to the charging port on the base and then to a power outlet.
3. The charging indicator will illuminate. Allow approximately 3-4 hours for a full charge.
4. A full charge provides up to 30 minutes of operating autonomy.

4. OPERATING INSTRUCTIONS

4.1 Filling the Clean Water Tank

1. Remove the clean water tank from the main unit.
2. Open the tank cap and fill it with clean water. You may add a small amount of non-foaming floor cleaner suitable for electric mops. **Do not use foaming detergents.**
3. Close the cap securely and reinsert the tank into the mop until it clicks.



Figure 4.1: A user demonstrating the removal of one of the water tanks from the mop for refilling or emptying.

4.2 Starting the Mop and Cleaning Process

1. Press the power button to turn on the mop.
2. The Jalisco wet roller will begin to rotate, and the automatic spray function will dispense water onto the floor.
3. Guide the mop across the floor surface to clean. The 40W power and wet roller effectively tackle stubborn dirt.
4. The mop is designed for deep cleaning and can cover large areas thanks to its battery autonomy.



Figure 4.2: A user demonstrating the ease of use of the Cecotec FreeGo Wash Electric Mop while cleaning a floor.



Figure 4.3: A detailed view of the mop's Jalisco wet roller in action, effectively cleaning a liquid spill on a hard floor surface.

4.3 Parking Position

The mop features a convenient parking position, allowing it to stand upright independently when you need to pause during cleaning.



Figure 4.4: The electric mop shown in its convenient self-standing parking position, allowing for temporary pauses during cleaning.

5. MAINTENANCE

5.1 Emptying the Dirty Water Tank

The mop has an auto-stop function that activates when the dirty water tank is full. Empty the tank regularly to ensure optimal performance.

1. Turn off the mop and remove the dirty water tank.
2. Open the tank and dispose of the dirty water.
3. Rinse the tank with clean water and dry it thoroughly.
4. Reinsert the tank into the mop.

5.2 Self-Cleaning Function

Utilize the self-cleaning base for convenient roller maintenance.

1. After cleaning, place the mop on its self-cleaning base.
2. Ensure there is some clean water in the clean water tank.
3. Activate the self-cleaning function (refer to your device's specific button for this function). The mop will automatically clean the roller.



Figure 5.1: The electric mop positioned on its dedicated base, ready for the self-cleaning cycle.

5.3 Cleaning the Roller and Filter

For thorough cleaning, the roller can be removed and washed manually. The filter should also be cleaned regularly.

1. Turn off the mop and remove the roller from the mop head.
2. Rinse the roller under running water until clean. Allow it to air dry completely before reinstallation.
3. Remove the filter (cartridge type) and rinse it under water. Ensure it is completely dry before placing it back.

6. TROUBLESHOOTING

If you encounter any issues with your Cecotec FreeGo Wash Electric Mop, please refer to the following common

problems and solutions:

Problem	Possible Cause	Solution
Mop does not turn on	Battery is low or depleted.	Charge the mop fully.
Poor cleaning performance	Dirty roller or clogged water spray nozzle.	Clean the roller and check for any blockages in the spray nozzle. Ensure clean water tank is filled.
Water leakage	Water tanks not properly installed or damaged.	Ensure both clean and dirty water tanks are securely in place. Check for cracks or damage to the tanks.
Mop stops unexpectedly	Dirty water tank is full.	Empty the dirty water tank.

If the problem persists after trying these solutions, please contact Cecotec customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	Cecotec
Model	05862
Color	Grey
Product Dimensions	68 x 30.5 x 20 cm
Item Weight	6.4 kg
Clean Water Tank Capacity	420 ml
Dirty Water Tank Capacity	150 ml
Wattage	40 watts
Autonomy	30 minutes
Special Features	Foldable, Auto-Stop, Parking Position, Self-Cleaning Base
Filter Type	Cartridge
Recommended Surfaces	Hard floor
Power Source	Battery powered






8. WARRANTY AND SUPPORT

Your Cecotec FreeGo Wash Electric Mop is covered by a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions.

For technical support, spare parts, or any other inquiries, please visit the official Cecotec website or contact their customer service department. Contact information can typically be found on the product packaging or the Cecotec brand store.

© 2023 Cecotec. All rights reserved.

Related Documents - 05862

	<p>Cecotec FreeGo Wash: Manual de Instrucciones y Guía de Uso</p> <p>Manual completo de instrucciones para la fregona eléctrica Cecotec FreeGo Wash. Aprenda sobre instalación, operación, limpieza, mantenimiento y solución de problemas para un uso óptimo.</p>
	<p>Cecotec Conga 11090 Spin Revolution Home&Wash Robot Vacuum Cleaner Manual</p> <p>This manual provides comprehensive instructions for the Cecotec Conga 11090 Spin Revolution Home&Wash robot vacuum cleaner, covering setup, operation, maintenance, and troubleshooting.</p>
	<p>Conga 11090 Spin Revolution Home&Wash Manual de Instrucciones</p> <p>Manual completo para el robot aspirador Cecotec Conga 11090 Spin Revolution Home&Wash. Aprenda sobre seguridad, configuración, modos de limpieza, mantenimiento y solución de problemas para optimizar el rendimiento de su dispositivo.</p>
	<p>Conga 11090 Spin Revolution Home&Wash: Manual de Instrucciones y Uso</p> <p>Manual completo para el robot aspirador y fregasuelos Cecotec Conga 11090 Spin Revolution Home&Wash. Incluye guías de seguridad, operación, mantenimiento, solución de problemas y especificaciones técnicas.</p>
	<p>Cecotec Conga PopStar 2000 Wet & Dry Vacuum Cleaner Manual</p> <p>Instruction manual for the Cecotec Conga PopStar 2000 Wet & Dry vacuum cleaner, covering safety, parts, operation, cleaning, maintenance, troubleshooting, technical specifications, and warranty information.</p>



[Conga 11090 Spin Revolution Home&Wash Robot Vacuum Cleaner User Manual](#)

Comprehensive user manual for the Cecotec Conga 11090 Spin Revolution Home&Wash robot vacuum cleaner, detailing parts, setup, operation modes, cleaning and maintenance procedures, troubleshooting, technical specifications, and disposal guidelines.