

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Kitchen HQ](#) /

› [Kitchen HQ Forget-Me-Not Electric Cooker Instruction Manual](#)

Kitchen HQ 796-139

Kitchen HQ Forget-Me-Not Electric Cooker Instruction Manual

Model: 796-139

INTRODUCTION

Thank you for purchasing the Kitchen HQ Forget-Me-Not Electric Cooker. This compact appliance is designed for preparing small, quick meals with ease. This unit is a manufacturer-refurbished product, which means it has been tested and verified to function like a new item. Please read this manual thoroughly before first use to ensure safe operation and optimal performance.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before operating the cooker.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer support for assistance.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "OFF", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your electric cooker before use.

- Main Cooker Unit with Handle
- Stainless Steel Pot with Nonstick Layer
- Glass Lid
- Power Cord
- Control Switch (OFF/LOW/HIGH)



Figure 1: Overview of the Kitchen HQ Forget-Me-Not Electric Cooker and its components. This image displays the main red cooker unit with its handle, the clear glass lid, and the detachable black power cord.

SETUP

1. **Unpack:** Carefully remove all packaging materials and inspect the cooker for any damage.
2. **Clean:** Before first use, wash the stainless steel pot and glass lid with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
3. **Placement:** Place the cooker on a stable, heat-resistant, and dry surface away from water sources. Ensure there is adequate ventilation around the unit.
4. **Connect Power Cord:** Insert the detachable power cord securely into the power inlet at the back of the cooker unit.



Figure 2: Rear view of the electric cooker, highlighting the power inlet where the detachable cord connects.

OPERATING INSTRUCTIONS

1. **Add Ingredients:** Place your desired ingredients into the stainless steel pot. Do not overfill; ensure contents are below the maximum fill line.
2. **Secure Lid:** Place the glass lid securely on top of the pot.
3. **Plug In:** Plug the power cord into a standard electrical outlet.
4. **Select Heat Setting:** Use the control switch located on the handle to select your desired cooking setting:
 - **LOW:** For gentle simmering or keeping food warm.
 - **HIGH:** For faster cooking or bringing liquids to a boil.



Figure 3: Detail of the control switch on the cooker's handle, showing the "OFF", "LOW", and "HIGH" settings.

5. **Monitor Cooking:** The transparent glass lid allows you to monitor your food without releasing heat.

6. **Turn Off:** Once cooking is complete, switch the control to "OFF" and unplug the unit from the wall outlet.

7. **Serve:** Use caution when serving hot food. The handle may be warm; use oven mitts if necessary.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your electric cooker.

1. **Unplug and Cool:** Always ensure the cooker is unplugged and completely cooled down before cleaning.
2. **Wash Pot and Lid:** The stainless steel pot with nonstick layer and the glass lid are dishwasher safe. Alternatively, wash them by hand with warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry.
3. **Clean Main Unit:** Wipe the exterior of the main cooker unit with a damp cloth. Do not use abrasive cleaners or scouring pads. **Never immerse the main unit in water or any other liquid.**
4. **Storage:** Store the clean and dry cooker in a cool, dry place.

TROUBLESHOOTING

If you encounter issues with your electric cooker, please refer to the following common solutions:

- **Cooker does not turn on:**

- Ensure the power cord is securely plugged into both the cooker and a functioning wall outlet.
- Check if the control switch is set to "LOW" or "HIGH", not "OFF".
- Verify the wall outlet is receiving power by testing it with another appliance.
- **Food is not cooking properly:**
 - Confirm the correct heat setting (LOW or HIGH) is selected for your recipe.
 - Ensure the lid is properly seated to retain heat.
 - Allow adequate time for the cooker to reach temperature and cook food.
- **Power cord connection feels loose:**
 - Ensure the power cord is fully inserted into the cooker's inlet. If the connection remains loose or intermittent, discontinue use and contact customer support.

For issues not covered here, or if the problem persists, please contact customer support.

SPECIFICATIONS

Model Number	796-139
Capacity	5 Cups
Wattage	600 watts
Material	Stainless steel pot with nonstick layer
Color	Black (unit shown in images is red, but product variant is black)
Control Method	Touch (referring to the switch)
Operation Mode	Automatic
Dishwasher Safe Parts	Pot and Lid
Product Dimensions	13.5 x 7.5 x 6 inches
Item Weight	2 pounds
UPC	704335053693

WARRANTY INFORMATION

This Kitchen HQ Forget-Me-Not Electric Cooker, being a manufacturer-refurbished unit, comes with a **1-Year Refurbished Warranty**. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims. For specific terms and conditions, or to initiate a warranty claim, please contact the seller or manufacturer directly.

CUSTOMER SUPPORT

If you have any questions, require assistance, or need to report an issue with your Kitchen HQ Forget-Me-Not Electric Cooker, please contact the retailer or the manufacturer's customer service department. Refer to your purchase documentation for contact details.

