

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Cecotec](#) /

› [Cecotec Conga Rockstar 8.4V Hand Cordless Vacuum Cleaner Instruction Manual](#)

Cecotec Conga Rockstar 8.4V (Model 08373)

Cecotec Conga Rockstar 8.4V Hand Cordless Vacuum Cleaner Instruction Manual

Model: 08373

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Cecotec Conga Rockstar 8.4V Hand Cordless Vacuum Cleaner. Please read it thoroughly before first use and retain it for future reference. This vacuum cleaner is designed for both solid and liquid spills, featuring cyclonic technology and a high-efficiency filter for effective cleaning.

SAFETY INSTRUCTIONS

- Do not immerse the appliance in water or other liquids.
- Keep the appliance away from heat sources and direct sunlight.
- Do not use the appliance to vacuum flammable, explosive, or hot liquids/materials.
- Ensure the charging cable is not damaged and is handled with care.
- This appliance is intended for household use only.
- Supervise children to ensure they do not play with the appliance.
- Disconnect the appliance from the power supply before performing any cleaning or maintenance.
- Only use accessories and spare parts provided or recommended by Cecotec.

PACKAGE CONTENTS

- Cecotec Conga Rockstar 8.4V Hand Cordless Vacuum Cleaner
- Charging adapter
- Crevice tool
- Brush tool
- Liquid nozzle
- Flexible hose
- User Manual



Image: The Cecotec Conga Rockstar 8.4V Hand Cordless Vacuum Cleaner displayed with its various attachments, including a flexible hose, crevice tool, brush tool, and liquid nozzle, illustrating the complete package contents.

SETUP

Charging the Vacuum Cleaner

1. Ensure the vacuum cleaner is switched off before charging.
2. Connect the charging adapter to the charging port located on the vacuum cleaner.
3. Plug the adapter into a standard electrical outlet.

4. The indicator lights on the vacuum cleaner will illuminate to show the charging status. A full charge typically provides up to 20 minutes of operating autonomy.

Attaching Accessories

Select the appropriate accessory for your specific cleaning task. Firmly push the desired nozzle (crevice tool, brush tool, or liquid nozzle) onto the vacuum cleaner's suction opening until it is securely in place. For tasks requiring extended reach or flexibility, first attach the flexible hose to the vacuum cleaner, then attach the desired nozzle to the end of the hose.

OPERATING INSTRUCTIONS

Power On/Off

To turn the vacuum cleaner on or off, press the power button located on the handle. The indicator lights will confirm the power status.

Dry Vacuuming

For dry debris such as dust, crumbs, or dirt, attach the crevice tool for narrow spaces and edges, or the brush tool for upholstery, carpets, and general hard surfaces. Move the vacuum cleaner steadily over the area to be cleaned.



Image: A hand holding the Cecotec Conga Rockstar vacuum cleaner, effectively cleaning spilled coffee grounds from a wooden table, demonstrating its dry vacuuming capability on solid debris.

Wet Vacuuming (Liquids)

For liquid spills, attach the liquid nozzle. It is crucial to ensure the dust tank is empty before vacuuming any liquids. Do not overfill the tank; monitor the liquid level through the transparent container. After vacuuming liquids, empty and clean the tank immediately to prevent odors and maintain hygiene.



Image: The Cecotec Conga Rockstar vacuum cleaner is shown cleaning a spilled liquid, likely milk or water, from a kitchen countertop next to an overturned glass, highlighting its wet vacuuming function.

Vehicle Cleaning

The compact and lightweight design, combined with the various attachments, makes this vacuum cleaner ideal for cleaning vehicle interiors. Use the crevice tool for tight spots between seats and consoles, and the brush tool for fabric seats and floor mats.



Image: A person using the Cecotec Conga Rockstar vacuum cleaner with an attachment to clean the fabric upholstery of a car seat, demonstrating its utility for vehicle interiors.

MAINTENANCE

Emptying the Dust Tank

1. Press the release button to detach the dust tank from the main unit of the vacuum cleaner.
2. Carefully empty the collected dry contents into a waste bin.
3. For liquid waste, pour it out directly into a sink or drain.
4. Reattach the dust tank securely until it clicks into place.



Image: A hand is shown pouring liquid from the transparent dust tank of the Cecotec Conga Rockstar vacuum cleaner into a kitchen sink, illustrating the process of emptying liquid waste after use.

Cleaning the Filter

The vacuum cleaner is equipped with a high-efficiency filter. Regular cleaning of the filter is essential to maintain optimal suction power and appliance performance.

1. Remove the filter from the dust tank after emptying.
2. Gently tap the filter against a hard surface to dislodge loose dust and debris.
3. If necessary, rinse the filter under cool running water. Ensure no detergents or hot water are used, as this can damage the filter material.
4. Allow the filter to air dry completely before reinserting it into the vacuum cleaner. Do not use the vacuum cleaner with a wet filter.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Low suction power	Dust tank is full; Filter is clogged; Nozzle or hose is blocked.	Empty the dust tank; Clean or replace the filter; Clear any visible blockages from the nozzle or hose.
Vacuum cleaner does not turn on	Battery is discharged; Power button not pressed correctly; Appliance malfunction.	Charge the battery fully; Ensure the power button is pressed firmly; If problem persists, contact customer support.
Short operating time	Battery not fully charged; Battery life has degraded over time.	Ensure the battery is fully charged before use; If battery life is significantly reduced, consider battery replacement or contact support.
Liquid leaks from tank	Tank is overfilled; Tank not properly secured; Seal is damaged.	Do not overfill the tank; Ensure the tank is correctly attached and sealed; Inspect seals for damage and replace if necessary.

SPECIFICATIONS

Brand: Cecotec

Model Number: 08373

Voltage: 8.4 Volts

Power: 50 Watts

Suction Power: Up to 4.5 kPa

Autonomy: Up to 20 minutes

Dust Tank Capacity: 500 Milliliters

Noise Level: 62 dB

Filter Type: High-efficiency filter

Dimensions (L x W x H): 43.15 x 14 x 15.5 cm

Weight: 1.1 Kilograms

Features: Lightweight, Cyclonic Technology, Wet & Dry Functionality

WARRANTY AND SUPPORT

For detailed warranty information, technical support, or inquiries regarding spare parts availability, please refer to the official Cecotec website or contact their authorized customer service channels. Spare parts for this model are generally available for up to 10 years from the date of purchase.

Related Documents - Conga Rockstar 8.4V (Model 08373)

	<p><u>Cecotec Conga Rockstar Hand 8.4V Instruction Manual</u> Comprehensive instruction manual for the Cecotec Conga Rockstar Hand 8.4V handheld vacuum cleaner, covering safety, operation, maintenance, troubleshooting, and technical specifications.</p>
	<p><u>Cecotec Conga Rockstar 6500 Century ErgoWet Animal Instruction Manual</u> Comprehensive instruction manual for the Cecotec Conga Rockstar 6500 Century ErgoWet Animal upright vacuum cleaner, covering safety, assembly, operation, cleaning, maintenance, and troubleshooting.</p>
	<p><u>Conga RockStar Micro 6000 & 8000: Manual de Instrucciones y Guía de Usuario</u> Manual completo de instrucciones para los aspiradores de mano Cecotec Conga RockStar Micro 6000 y Conga RockStar Micro 8000. Incluye guías de seguridad, funcionamiento, limpieza, mantenimiento y especificaciones técnicas.</p>
	<p><u>Cecotec Conga Robot Vacuum Cleaners: Ultra-Powerful & Smart Cleaning Solutions</u> Explore the advanced range of Cecotec Conga robot vacuum cleaners, featuring ultra-powerful suction, intelligent navigation, and versatile 4-in-1 cleaning capabilities for a spotless home.</p>
	<p><u>Manual de Instrucciones Conga Rockstar 2500 Thunder Jalisco</u> Guía completa de instrucciones para el aspirador vertical Conga Rockstar 2500 Thunder Jalisco de Cecotec. Aprenda a usar, limpiar y mantener su aspirador para un rendimiento óptimo.</p>



[Cecotec Conga Rockstar 3000 Advance ErgoWet: Посібник користувача](#)

Повний посібник користувача для пилососа Cecotec Conga Rockstar 3000 Advance ErgoWet.

Дізнайтесь про функції, експлуатацію, обслуговування та усунення несправностей.