

[Manuals.plus](#) /

> [Cecotec](#) /

> Cecotec Bolero CoolMarket Combi Origin 294 Refrigerator User Manual

Cecotec 02728

User Manual for Cecotec Bolero CoolMarket Combi Origin 294 Refrigerator

Model: 02728

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Cecotec Bolero CoolMarket Combi Origin 294 Refrigerator. Please read these instructions carefully before using the appliance and keep them for future reference.

The Cecotec Bolero CoolMarket Combi Origin 294 is a 294-liter combined refrigerator with a retro design, featuring Total No Frost technology, Multi Cooling, Ultra Fresh system, and a Convertible Box for optimized food preservation.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Ensure the appliance is properly grounded.
- Do not damage the refrigerant circuit.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- Unplug the refrigerator before cleaning or performing any maintenance.
- Keep ventilation openings clear of obstruction.
- This appliance is intended for household use only.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove all packaging materials. Inspect the refrigerator for any damage. Report any damage to your retailer immediately.

3.2 Placement

Place the refrigerator on a firm, level surface away from direct sunlight and heat sources (e.g., stoves, radiators). Ensure adequate ventilation around the appliance. Maintain a minimum distance from walls as specified in the product dimensions for proper airflow.



Image: The Cecotec Bolero CoolMarket Combi Origin 294 refrigerator positioned in a kitchen, demonstrating its retro design and suitable placement.

3.3 Initial Power-On

After placement, wait at least 2-4 hours before plugging the refrigerator into a power outlet. This allows the refrigerant to settle. Once plugged in, the appliance will begin to cool. Allow it to run for several hours before storing food.

4. OPERATING INSTRUCTIONS

4.1 Temperature Control

The refrigerator features a display for simple and convenient control of both the refrigerator and freezer compartments. Adjust the temperature settings according to your needs.



Image: A close-up view of the internal digital display panel, showing temperature readings and control buttons for the refrigerator.



Image: A hand adjusting the temperature setting on the refrigerator's internal control panel, demonstrating ease of use.

4.2 Total No Frost System

This system prevents ice formation in both the food and the refrigerator, maintaining food and nutrients for a longer period. No manual defrosting is required for the freezer compartment.



Image: A visual comparison showing fresh berries on one side and frosted berries on the other, highlighting the effectiveness of the No Frost system in preventing ice buildup.

4.3 Multi Airflow and Multi Cooling

The Multi Airflow system ensures optimal temperature throughout the compartment, maintaining food life for longer due to uniform cold air distribution. Multi Cooling provides independent cold distribution to prevent mixing of bacteria or odors between compartments.



Image: The interior of the refrigerator with blue arrows indicating the Multi Airflow system, showing how cold air circulates evenly throughout the compartments.

4.4 Convertible Box

The vegetable drawer features a humidity valve and can be converted into a meat and fish drawer with temperatures between 0 and 3 °C via a selector, optimizing storage for different food types.



Image: A close-up of the Convertible Box inside the refrigerator, showing the selector switch to change its function between a vegetable crispser and a meat/fish compartment.

4.5 Ultra Fresh System

The air purification system with carbon filters prevents bad odors and helps preserve your food for longer.

4.6 Fast Freezing

Utilize the Fast Freezing function for ultra-rapid freezing of new items, helping to preserve their quality.

4.7 Eco Mode

Activate Eco Mode to reduce power consumption and optimize energy efficiency.

4.8 Door Alarm

The refrigerator is equipped with a door alarm that alerts you if the door is left open for too long, preventing temperature loss.

Alarma de puerta.

Te avisará cuando tu frigorífico se quede abierto.



Image: An illustration showing the refrigerator with its door ajar and a bell icon, signifying the door alarm feature that alerts users when the door is left open.

5. MAINTENANCE AND CARE

5.1 Cleaning

Regularly clean the interior and exterior of your refrigerator. Unplug the appliance before cleaning. Use a soft cloth and a mild, non-abrasive detergent. Avoid harsh chemicals or abrasive cleaners that could damage surfaces.

- Clean shelves and drawers with warm soapy water.
- Wipe down door seals regularly to ensure a tight seal.
- Clean the condenser coils at the back or bottom of the refrigerator periodically to maintain efficiency.

5.2 Power Outages

In case of a power outage, keep the refrigerator door closed as much as possible to maintain the internal temperature. Food can remain safely stored for several hours depending on the ambient temperature.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Refrigerator not cooling	Power supply issue, thermostat set too high, door not closed properly.	Check power connection, adjust thermostat, ensure door is fully closed.
Unusual noises	Appliance not level, objects touching the back, normal operating sounds.	Adjust leveling feet, move objects away, consult manual for normal sounds.
Water on floor	Drain tube clogged, excessive humidity.	Clear drain tube, ensure proper ventilation and avoid opening door frequently.
Door alarm sounds frequently	Door not closing completely, door seal damaged.	Check for obstructions, inspect and clean door seal, replace if damaged.

If the problem persists after attempting these solutions, please contact customer support.

7. SPECIFICATIONS

Feature	Detail
Model Number	02728
Dimensions (LxWxH)	63.1 x 60.5 x 190.2 cm
Weight	54 kg
Capacity	294 Liters
Energy Class	E
Annual Energy Consumption	239 kWh/annum
Noise Level	41 dB (Class C)
Defrost System	Automatic (Total No Frost)
Number of Doors	2
Installation Type	Freestanding
Color	Blue
Special Features	External ice dispenser, Semi-open door alarm.

For detailed product information and energy label, scan the QR code on the energy label or visit [EPREL Database](#).



Image: The energy efficiency label for the Cecotec refrigerator, showing its Class E rating, 294L capacity, and 239 kWh/annum consumption.

8. WARRANTY AND SUPPORT

This product comes with a 3-year warranty as per manufacturer's terms. Please retain your proof of purchase for warranty claims.

For technical assistance, troubleshooting beyond this manual, or warranty service, please contact Cecotec customer support. You can find contact information on the official Cecotec website or through your retailer.

Visit the official Cecotec store for more information: [Cecotec Store](#)

© 2024 Cecotec. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BQ1KMNLR>

More documents and user manuals: **<https://manuals.plus/>**