

Cecotec Conga Rockstar 2500 Thunder Jalisco

Cecotec Conga Rockstar 2500 Thunder Jalisco Cordless Vacuum Cleaner User Manual

Model: 08426

1. SAFETY INSTRUCTIONS

Please read these safety instructions carefully before using the appliance and keep them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Do not immerse the appliance, power cord, or plug in water or any other liquid.
- Do not use the appliance to vacuum water or wet surfaces.
- Do not vacuum flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Use only the original charger provided with the appliance.
- Do not expose the battery to high temperatures or direct sunlight.
- Ensure the dust tank is properly installed before operation.

2. PRODUCT OVERVIEW

The Cecotec Conga Rockstar 2500 Thunder Jalisco is a versatile 3-in-1 cordless vacuum cleaner designed for efficient cleaning of various surfaces. It functions as a vertical stick vacuum, a broom vacuum, and a handheld vacuum.



Image: The Cecotec Conga Rockstar 2500 Thunder Jalisco vacuum cleaner in its full stick configuration, ready for floor cleaning.

Key features include a powerful 400W digital motor, 30 kPa suction pressure, and a 2200 mAh lithium-ion battery providing up to 65 minutes of autonomy. The Parallel Cyclone System enhances suction efficiency, and the digital display shows battery level and cleaning mode. It comes equipped with a specialized Jalisco brush for effective dust and dirt removal.



Image: The handheld unit of the vacuum cleaner shown with a brush accessory and a crevice tool, demonstrating its versatility.

3. SETUP

3.1 Unpacking and Component Check

Carefully remove all components from the packaging. Verify that all parts listed in the manual are present and undamaged.



Image: All included components, including the main unit, extension tube, floor brush, charger, and various accessories, are displayed.

3.2 Assembly

1. **Attach the Extension Tube:** Insert the extension tube into the main handheld unit until it clicks securely into place.
2. **Connect the Floor Brush:** Attach the Jalisco motorized brush to the other end of the extension tube, ensuring it locks firmly.
3. **Install Dust Tank:** Ensure the dust tank is correctly attached to the main unit.
4. **Attach Accessories:** For handheld use, attach the 2-in-1 accessory or crevice tool directly to the main unit or the extension tube as needed.



Image: The vacuum cleaner fully assembled with the extension tube and Jalisco floor brush, ready for use.

3.3 Initial Charging

Before first use, fully charge the vacuum cleaner. Connect the charger to the charging port on the main unit and plug it into a power outlet. The digital display will indicate the charging status. A full charge typically takes 4-5 hours.

3.4 Wall Mount Installation

The vacuum includes a wall mount for convenient storage. Choose a suitable location near a power outlet. Mark the drilling points, drill holes, insert wall plugs, and secure the mount with screws. The vacuum can then be hung on the mount for storage and charging.



Image: The vacuum cleaner is shown neatly stored on its wall mount, demonstrating a space-saving storage solution.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off

Press the power button on the main unit to turn the vacuum cleaner on. Press it again to turn it off.

4.2 Selecting Operating Modes

The vacuum cleaner features two operating modes: **Eco** and **Turbo**. Use the mode selection button on the digital display to switch between them.

- **Eco Mode:** Provides maximum battery autonomy for everyday cleaning tasks with excellent results.
- **Turbo Mode:** Offers maximum suction power for tackling stubborn dirt and cleaning carpets.



Image: A close-up view of the vacuum's main unit, highlighting the digital display with Eco and Turbo mode indicators.

4.3 Using Attachments

- **Jalisco Motorized Brush:** Ideal for hard floors and carpets, effectively removing dust, mites, and other dirt. The brush has millions of microfibers to capture micro-dirt.
- **2-in-1 Accessory:** Can be used as a brush or a narrow nozzle for cleaning upholstery, curtains, and delicate surfaces.
- **Crevice Tool:** Perfect for reaching tight corners, crevices, and narrow spaces.



Image: A user operating the vacuum cleaner in stick mode on a tiled floor, demonstrating its ease of use for general floor cleaning.



Image: The handheld vacuum unit is used with a brush accessory to clean crumbs from a wooden table, showcasing its versatility for elevated surfaces.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

5.1 Emptying the Dust Tank

1. Ensure the vacuum cleaner is turned off.
2. Press the release button to detach the dust tank from the main unit.
3. Open the dust tank lid and empty the contents into a waste bin.
4. Close the lid and reattach the dust tank to the main unit until it clicks.

5.2 Cleaning the Filter

The vacuum cleaner uses a HEPA filter. It is recommended to clean the filter regularly, especially when suction

power decreases.

1. Remove the dust tank as described above.
2. Carefully remove the filter assembly from the dust tank.
3. Tap the filter gently over a waste bin to remove loose dust.
4. If necessary, rinse the filter under running water. Ensure it is completely dry before reinserting it into the vacuum cleaner. **Do not use the vacuum with a wet filter.**
5. Reassemble the filter and dust tank, then reattach to the main unit.

5.3 Cleaning the Jalisco Brush

Periodically check the Jalisco brush for tangled hair or debris.

1. Turn off the vacuum cleaner and detach the floor brush.
2. Locate the brush release mechanism (usually a latch or button) and remove the brush roll.
3. Use scissors or a brush cleaning tool to remove any tangled hair or fibers from the brush roll.
4. Clean any debris from the brush housing.
5. Reinsert the brush roll and secure it in place.

6. TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is depleted; Power button not pressed correctly	Charge the battery fully; Ensure the power button is pressed firmly.
Reduced suction power	Dust tank is full; Filter is clogged; Brush roll is obstructed; Tube/nozzle is blocked	Empty the dust tank; Clean or replace the filter; Remove obstructions from the brush roll, tube, or nozzle.
Short battery life	Battery not fully charged; Using Turbo mode excessively; Battery degradation	Ensure battery is fully charged; Use Eco mode for longer runtime; Contact support if battery life significantly degrades.
Unusual noise during operation	Obstruction in the brush roll or air path; Damaged component	Check and clear any obstructions; If noise persists, contact customer support.

If the problem persists after attempting these solutions, please contact Cecotec customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	Cecotec
Model Number	08426
Product Dimensions (L x W x H)	68.5 x 14 x 27 cm
Weight	3.85 Kilograms
Power	400 Watts
Voltage	33.6 Volts
Suction Pressure	30 kPa
Number of Speeds	2 (Eco, Turbo)
Noise Level	70 Decibels
Autonomy	Up to 65 minutes
Filter Type	HEPA Filter
Special Feature	Jalisco brush, 3-in-1 functionality
Included Components	1 vacuum, 1 wall mount, 1 rigid tube, 1 charger, 1 2-in-1 motorized brush, 1 elongated accessory for furniture, 1 instruction manual



Image: Visual representation of the vacuum's 400W power output.



Image: Visual representation of the vacuum's 30 kPa suction pressure.



Image: Visual representation of the vacuum's battery autonomy of up to 65 minutes.

8. WARRANTY AND SUPPORT

Cecotec offers a commitment to product quality. Spare parts for this model are available for up to 10 years from the date of purchase.

For warranty claims, technical assistance, or any questions not covered in this manual, please contact Cecotec customer support through their official website or the contact information provided with your purchase documentation. When contacting support, please have your model number (08426) and proof of purchase ready.