

Cecotec Bolero Aguazero 6700

Cecotec Bolero Aguazero 6700 Dishwasher Instruction Manual

Model: Bolero Aguazero 6700

1. INTRODUCTION

Thank you for choosing the Cecotec Bolero Aguazero 6700 Built-in Dishwasher. This manual provides essential information for the safe and efficient use, installation, and maintenance of your appliance. Please read these instructions carefully before operating the dishwasher and keep them for future reference.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Ensure the dishwasher is properly grounded.
- Do not operate the dishwasher if it is damaged. Contact authorized service personnel.
- Keep children away from the dishwasher, especially when it is operating or the door is open.
- Use only detergents and rinse aids specifically designed for automatic dishwashers.
- Do not touch the heating element during or immediately after use.
- Load sharp items so they are not likely to damage the door seal or interior.
- The appliance is designed for domestic use only.



The child lock feature helps prevent unintended operation by children.

3. SETUP AND INSTALLATION

3.1 Unpacking and Placement

Carefully remove all packaging materials. Ensure the dishwasher is placed on a level, stable surface. This is a built-in model designed to integrate seamlessly into your kitchen cabinetry.



Front view of the dishwasher, showing its dimensions of 60 cm width, 60 cm depth, and 84.5 cm height.

3.2 Initial Use

Before the first wash cycle, ensure the following steps are completed:

- Salt Dispenser:** Fill the salt dispenser with dishwasher salt to prevent limescale buildup, especially in hard water areas. Use the provided funnel for easy filling.
- Rinse Aid Dispenser:** Fill the rinse aid dispenser. Rinse aid helps with drying and prevents water spots.
- Detergent Dispenser:** Add the appropriate amount of dishwasher detergent for your first cycle.

4. OPERATING INSTRUCTIONS

4.1 Control Panel Overview

The dishwasher features an XXL FullColor Display with touch controls for intuitive operation.



The XXL FullColor Display allows for easy selection of programs and functions via touch controls.

4.2 Loading the Dishwasher

This dishwasher has a large capacity for up to 15 place settings. It includes an adjustable upper basket and a dedicated cutlery tray.

- **Upper Basket:** The height of the upper basket can be adjusted to accommodate taller items in either the upper or lower basket, such as large pots or delicate glasses.
- **Lower Basket:** Ideal for larger plates, bowls, and pots.
- **Cutlery Tray:** A dedicated upper tray for cutlery ensures thorough cleaning and frees up space in the lower baskets.



The dedicated cutlery tray provides organized and effective cleaning for all your utensils.

4.3 Program Selection

The dishwasher offers 14 programs to suit various washing needs. Select the program that best matches the type and soil level of your dishes.

Examples of programs include:

- **Pots:** For heavily soiled pots and pans.
- **Everyday Dishes:** A standard program for daily loads.
- **Delicate Glasses:** A gentle program for fragile items.

4.4 Special Functions

Enhance your washing experience with these advanced features:

- **O2 Dry:** This function automatically opens the dishwasher door at the end of the wash cycle to facilitate natural and perfect drying of dishes.
- **Turbo Dry+:** Ensures thorough drying by removing hot airflow and moisture before cooling, preventing water spots.

- **Dual Zone Wash:** Applies different water pressure to the upper and lower baskets, allowing you to wash delicate items and heavily soiled pots simultaneously without separation.
- **Extended Storage:** Eliminates odors and prevents humidity and mold on dishes stored inside the dishwasher for up to 72 hours after the cycle.
- **Half Load:** For smaller loads, this function uses half the resources (water and energy) while maintaining effective cleaning results.



The Half Load function optimizes resource consumption for smaller dish loads.

5. MAINTENANCE AND CARE

5.1 Cleaning the Dishwasher

- **Machine Care Program:** Use the dedicated Machine Care program to clean the interior of your dishwasher. This helps protect it from bacteria and odors, extending its lifespan.
- **Filter Cleaning:** Regularly check and clean the filters at the bottom of the dishwasher to ensure optimal performance and prevent blockages.
- **Exterior Cleaning:** Wipe the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners.



The Machine Care program helps maintain hygiene and prevents bacterial growth inside the dishwasher.

6. TROUBLESHOOTING

If you encounter issues with your dishwasher, refer to the following common problems and solutions before contacting service.

Problem	Possible Cause	Solution
Dishes are not clean	Improper loading, insufficient detergent, clogged spray arms, incorrect program selection.	Ensure dishes are loaded correctly, use adequate detergent, clean spray arm nozzles, select a more intensive program.
Detergent not dissolving	Detergent dispenser blocked, old or clumpy detergent, water temperature too low.	Check dispenser for obstructions, use fresh detergent, ensure water supply is hot.

Problem	Possible Cause	Solution
Water spots or streaks on dishes	Low rinse aid level, hard water, incorrect rinse aid dosage.	Refill rinse aid dispenser, adjust rinse aid dosage, ensure salt dispenser is filled.
Dishwasher not starting	Door not closed properly, power supply issue, program not selected.	Ensure door is latched, check power connection, select a program and press start.
Unusual noise during operation	Items obstructing spray arms, foreign objects in the pump.	Rearrange dishes, check for and remove any foreign objects.

7. SPECIFICATIONS

Feature	Specification
Model Name	Bolero Aguazero 6700 Dark B
Model Number	00224
Installation Type	Built-in
Dimensions (W x D x H)	60 x 60 x 84.5 cm
Weight	1 kg (Note: This value may be a placeholder or incorrect, actual weight may vary)
Capacity	15 Place Settings
Energy Efficiency Class	B
Noise Level	42 Decibels
Water Consumption per Cycle	10 Liters
Number of Programs	14
Display Type	LCD (FullColor)
Control Type	Touch
Motor Type	Inverter Plus
Special Features	Turbo Dry+, Dual Zone Wash, O2 Dry, AutoClean, Machine Care
Material	Stainless steel
Included Components	Dishwasher, Lower basket, Upper basket, Cutlery tray, Cutlery basket, Salt funnel, Drain hose, Instruction manual



ENERG⁺



Cecotec


00224



65 kWh / 100



15 x

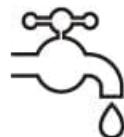

10,0 L



4:48



42 dB

ABCD

2019/2017

EU Energy Label for the dishwasher. For more details, visit the official EPREL database: [EPREL Product Information](#)

8. WARRANTY AND SUPPORT

Cecotec provides a commitment to quality and durability. Spare parts for this appliance are available in the EU for a

period of 10 years from the date of purchase.

For any issues not covered in the troubleshooting section, or for warranty claims, please contact Cecotec customer support. Refer to your purchase documentation for specific warranty terms and contact details.