

Cecotec 03915

Cecotec Power Black Titanium 1300Max B. Blender User Manual

Model: 03915 | Brand: Cecotec

1. IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using the appliance and keep them for future reference. Failure to follow these instructions may result in accidents or damage to the appliance.

- Always ensure the voltage indicated on the appliance matches your mains voltage before connecting.
- Do not immerse the motor unit, cord, or plug in water or any other liquid.
- Keep hands and utensils out of the container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used but only when the blender is not running.
- Blades are sharp. Handle with care when cleaning.
- Unplug from the outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always operate the blender with the lid in place.

2. PRODUCT OVERVIEW

The Cecotec Power Black Titanium 1300Max B. Blender is designed for efficient blending, crushing, and pureeing with its powerful motor and durable titanium blades.



Front view of the Cecotec Power Black Titanium 1300Max B. Blender, showcasing its black and silver base with a clear pitcher and control knob.



The blender positioned on a kitchen counter, surrounded by fresh fruits and liquids, ready for use.

Components:

- **Motor Unit:** The base containing the 1300W motor and control knob.
- **1.5 L Pitcher:** A large capacity pitcher for blending ingredients.
- **Lid:** Secures the pitcher during operation.
- **4-Edge Titanium Blades:** Durable and sharp blades for efficient blending and ice crushing.



A close-up view of the detachable 4-edge titanium blade assembly, held by a hand, showing its sharp design.

3. SETUP

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for future storage or disposal.
2. **Clean:** Before first use, wash the pitcher, lid, and blade assembly in warm, soapy water. Rinse thoroughly and dry. The motor unit should only be wiped with a damp cloth.
3. **Assemble Blades:** Ensure the blade assembly is securely attached to the bottom of the pitcher.
4. **Place Pitcher:** Place the pitcher onto the motor unit, ensuring it is correctly seated and locked into position.
5. **Connect Power:** Plug the power cord into a suitable electrical outlet (230V).

4. OPERATING INSTRUCTIONS

The blender features 2 speeds and a pulse function for versatile blending.



A person adding various fruits and milk into the blender pitcher, preparing for blending.



A close-up of a hand turning the control knob on the blender's base, with fruits visible inside the pitcher.

General Blending:

1. **Add Ingredients:** Place your desired ingredients into the pitcher. Do not exceed the maximum fill line (1.5 L).
2. **Secure Lid:** Place the lid firmly on the pitcher.
3. **Select Speed:** Turn the control knob to one of the 2 available speeds (1 or 2) to begin blending.
4. **Blend:** Blend until desired consistency is achieved.
5. **Stop:** Turn the control knob to the '0' (off) position to stop the blender.

Using the Pulse Function:

The pulse function is ideal for chopping, crushing ice, or when you need short bursts of power.

- With ingredients in the pitcher and the lid secured, turn the control knob to the 'P' (Pulse) position and hold it.
- Release the knob to stop the pulse action. Repeat as needed.



A person operating the blender to crush ice, demonstrating the appliance's capability for hard ingredients.

After Blending:



A person pouring freshly blended juice from the blender pitcher into a drinking glass, showcasing the final product.

- Turn the control knob to '0' and unplug the appliance.
- Remove the lid and carefully pour out the blended contents.

5. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your blender. The pitcher, lid, and blade assembly are dishwasher safe.

Cleaning the Pitcher, Lid, and Blades:

1. **Disassemble:** Unplug the blender. Carefully remove the pitcher from the motor unit. Detach the blade

assembly from the bottom of the pitcher.

2. **Rinse:** Rinse all parts under running water to remove any large food particles.
3. **Wash:** Wash the pitcher, lid, and blade assembly in warm, soapy water using a brush for hard-to-reach areas, or place them in the dishwasher. Handle blades with extreme care.
4. **Dry:** Allow all parts to air dry completely before reassembling or storing.

Cleaning the Motor Unit:

- Ensure the motor unit is unplugged.
- Wipe the exterior of the motor unit with a damp cloth. Do not immerse the motor unit in water or any other liquid.
- Dry thoroughly with a soft cloth.

Storage:

Store the assembled blender in a dry, clean place, away from direct sunlight and heat sources.

6. TROUBLESHOOTING

If you encounter any issues with your blender, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Blender does not turn on.	Not plugged in; pitcher not correctly seated; power outage.	Check power connection; ensure pitcher is locked into place; check household circuit breaker.
Ingredients are not blending smoothly.	Too little liquid; too many ingredients; ingredients are too large.	Add more liquid; reduce ingredient quantity; cut ingredients into smaller pieces. Use pulse function for tough ingredients.
Motor smells or overheats.	Overloading; continuous operation for too long.	Reduce ingredients; allow the blender to cool down for at least 15 minutes before resuming use. Do not operate continuously for more than 1 minute.
Leakage from the bottom of the pitcher.	Blade assembly not tightened properly; seal damaged.	Ensure blade assembly is securely tightened; check the seal for damage and replace if necessary.

7. SPECIFICATIONS

Brand:	Cecotec
Model Number:	03915
Power:	1300 Watts

Voltage:	230 Volts
Capacity:	1.5 Liters
Number of Speeds:	2
Control Type:	Knob
Blade Material:	Titanium
Product Dimensions (D x W x H):	16.5 x 38.5 x 19.7 cm
Item Weight:	1.92 Kilograms
Dishwasher Safe Parts:	Pitcher, Lid, Blade Assembly
Material Free Type:	Phthalate-free, BPA-free

8. WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including the duration of the warranty and details on how to make a claim.

For technical support, spare parts, or any inquiries regarding your Cecotec Power Black Titanium 1300Max B. Blender, please visit the official Cecotec website or contact their customer service department. Contact information can typically be found on the product packaging or the official brand website.

EU Spare Part Availability Duration: 10 Years
