

Cecotec Bolero Dresscode 7410 Inverter Steel

Cecotec Bolero Dresscode 7410 Inverter Steel Washing Machine

User Manual

INTRODUCTION

Thank you for choosing the Cecotec Bolero Dresscode 7410 Inverter Steel Washing Machine. This appliance is designed to provide efficient and reliable laundry care with advanced features such as an Inverter Plus Motor, SteamMax function, and a variety of washing programs. This manual provides essential information for the safe and effective use, installation, operation, maintenance, and troubleshooting of your new washing machine. Please read it thoroughly before first use and keep it for future reference.



A detailed front view of the Cecotec Bolero Dresscode 7410 Inverter Steel washing machine, showcasing its dark grey finish, large circular door, and digital control panel. Energy efficiency ratings and key features like Steam Max and Inverter Motor are visible on the front.

SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Ensure the appliance is properly grounded.
- Do not operate the washing machine if the power cord or plug is damaged.
- Keep children and pets away from the appliance during operation. The **Kid Lock** function is available for safety.
- Do not wash items that have been cleaned, washed, soaked, or spotted with combustible or explosive substances.
- Always unplug the appliance before cleaning or performing maintenance.
- Do not open the detergent dispenser or the door during a wash cycle, especially when the water temperature is high.
- Ensure the water supply hoses are securely connected to prevent leaks.

SETUP AND INSTALLATION

Unpacking

Carefully remove all packaging materials. Ensure all included components are present: 1 x Washing Machine, 1 x Water Supply Hose, 1 x Manual, Transport Feet. Remove all transport bolts and packing from the rear of the machine before use. Failure to do so may cause severe vibration and damage.

Placement

Place the washing machine on a firm, level surface. Adjust the transport feet to ensure the machine is stable and balanced. Proper leveling reduces vibration and noise during operation.



This image displays the Cecotec washing machine from a side perspective, highlighting its compact dimensions: 85 cm height, 60 cm width, and 50 cm depth, crucial for installation planning.

Water Connection

Connect the supplied water inlet hose to the water tap and the corresponding inlet valve on the back of the washing machine. Ensure connections are tight to prevent leaks.

Electrical Connection

Plug the power cord into a grounded electrical outlet. The washing machine operates on 1850 Watts. Ensure your electrical supply matches the requirements of the appliance.

Initial Use

Before washing clothes for the first time, run a complete wash cycle without laundry and detergent to clean the drum and internal components. Use the **Drum Clean** function for this purpose.

OPERATING INSTRUCTIONS

Control Panel Overview

The washing machine features an intuitive control panel with an LED display and a rotary dial for program selection, along with various function buttons.



A close-up view of the washing machine's control panel, showing a hand adjusting the program dial. The LED display shows '3:48', indicating remaining time, and various program options are visible around the dial.

Loading Laundry

Open the front-load door and place your laundry inside the drum. Do not overload the machine; the maximum capacity is 7 kg. For optimal results, ensure clothes are loosely packed.



A person is shown loading red laundry into the drum of the Cecotec washing machine. The front-load design is clearly visible, emphasizing ease of access for adding or removing items.

Adding Detergent

Pull out the detergent dispenser drawer and add the appropriate amount of detergent and fabric softener to their respective compartments. Refer to your detergent packaging for recommended dosages.

Program Selection

Turn the program dial to select one of the 16 available washing programs. These programs are designed for various fabric types and soil levels, including:

- **Cotton:** For durable cotton items.
- **Eco:** Energy-saving program for normally soiled cottons.
- **Delicate:** For delicate fabrics requiring gentle care.
- **Heavy Duty:** For heavily soiled items.
- **Spin:** For draining water and spinning clothes.

Special Functions

- **SteamMax Function:** This function envelops laundry with steam, effectively penetrating each garment to sterilize and eliminate stains and odors.



An artistic close-up of fabric fibers, showing a stain being lifted by steam and water bubbles, visually representing the effectiveness of the SteamMax function in penetrating and cleaning garments.

- **Allergy Care Program:** Utilizes steam and high temperatures to sterilize clothes, ideal for sensitive skin or allergy sufferers.



The interior of the washing machine drum contains various clothes, with a blue circular icon featuring a stylized virus symbol, indicating the Allergy Care function designed for hygienic cleaning.

- **Diamond Care Drum:** The drum's unique diamond shape protects your garments during washing, ensuring gentle yet effective cleaning.
- **Delay Start Function:** Program the start of the wash cycle between 0 and 24 hours in advance to suit your schedule.
- **Stop&Go Function:** Pause the washing machine during operation to add or remove garments, offering flexibility during each wash.
- **Adjustable Spin Speed:** You can regulate the spin speed up to 1200 rpm, adapting to your fabrics and specific needs for optimal drying.

Elige tu lavadora ideal.

6 kg	Hasta 2 usuarios
7 kg	Hasta 3 usuarios
8 kg	Hasta 4 usuarios
9 kg	Hasta 5 usuarios
10 kg	Hasta 6 usuarios
12 kg	Más de 6 usuarios

*Nuestra recomendación es orientativa y dependerá del nivel de uso de cada usuario.

A washing machine is visible in a laundry room setting, with a large '1200 rpm' overlay, emphasizing its high spin speed capability for efficient water extraction and faster drying of clothes.

- **Eco Mode:** Reduces consumption and noise by using a gentler washing power.
- **Kid Lock Technology:** Provides a safety lock for children, preventing them from controlling the washing machine and preventing accidents.

Starting a Cycle

After selecting the program and any desired special functions, press the Start/Pause button to begin the wash cycle.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your washing machine.

Cleaning the Drum

The washing machine features a **Drum Clean** function that automatically cleans the drum, preventing the

accumulation of bacteria and unpleasant odors. It is recommended to run this cycle periodically.



A clear view of the stainless steel drum interior, showcasing its unique diamond-shaped texture, which is designed to protect fabrics during washing and is also relevant for the Drum Clean function.

Cleaning the Detergent Dispenser

Remove the detergent dispenser drawer and rinse it under running water to remove any detergent residue. Clean the housing of the dispenser with a brush.

Cleaning the Filter

Locate the drain pump filter, usually at the bottom front of the machine. Place a shallow container underneath to catch any water. Unscrew the filter cover and carefully remove any lint or foreign objects. Clean the filter and reinsert it securely.

Exterior Cleaning

Wipe the exterior of the washing machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.

TROUBLESHOOTING

If you encounter issues with your washing machine, refer to the following common problems and solutions before contacting customer service.

Problem	Possible Cause	Solution
Washing machine does not start.	Power cord not plugged in; door not closed properly; program not selected; Kid Lock activated.	Check power connection; ensure door is latched; select a program; deactivate Kid Lock.
No water intake.	Water tap closed; water inlet hose kinked or blocked.	Open water tap; straighten hose; clean filter in hose connection.
Water not draining.	Drain hose kinked or blocked; drain pump filter clogged.	Straighten drain hose; clean drain pump filter.
Excessive vibration/noise.	Transport bolts not removed; machine not level; uneven load.	Remove transport bolts; adjust leveling feet; redistribute laundry inside drum.
Detergent residue in dispenser.	Insufficient water pressure; dispenser clogged.	Check water pressure; clean detergent dispenser.

If the problem persists after trying these solutions, please contact Cecotec customer support.

SPECIFICATIONS

Feature	Value
Brand	Cecotec
Model Number	02173
Capacity	7 Kilograms
Product Dimensions (D x W x H)	51.5 x 59 x 85.5 cm
Product Weight	55.5 Kilograms
Energy Efficiency Class	A
Annual Energy Consumption	45 Kilowatt-hours (per 100 cycles)
Water Consumption	45 Liters (per cycle)
Wattage	1850 Watts

Feature	Value
Maximum Spin Speed	1200 RPM
Noise Level (Spin)	76 dB
Drum Material	Stainless Steel
Installation Method	Freestanding
Control Type	Push Button / Rotary Dial
Display Type	LED
Special Features	High Efficiency, Drum Clean, Delay Start, Inverter Motor, Vibration Reduction



ENERG



Cecotec

02173



45 kWh /



7,0 kg



3:28



45 L



A B C D E F G



76 dB
A B C D

2019/2014

An image of the official product information sheet, detailing various technical specifications and compliance data for the Cecotec Bolero Dresscode 7410 washing machine, including energy consumption, noise levels, and dimensions.

The EU energy label for the Cecotec Bolero Dresscode 7410 washing machine, displaying its 'A' energy efficiency rating, annual

energy consumption (45 kWh/100 cycles), water consumption (45 L/cycle), capacity (7.0 kg), and noise level (76 dB).

For more detailed information, refer to the official EPREL database: <https://eprel.ec.europa.eu/qr/1829606>

WARRANTY AND SUPPORT

Product Warranty

The Cecotec Bolero Dresscode 7410 Inverter Steel Washing Machine comes with a minimum warranty period of 3 years offered by the supplier. Please retain your proof of purchase for warranty claims.

Spare Parts Availability

Spare parts for this appliance are available in the EU for a duration of 10 years from the date of purchase.

Customer Support



For technical assistance, warranty claims, or any other inquiries, please visit the official Cecotec website or contact their customer service department. You can find more information and contact details on the [Cecotec Brand Store on Amazon](#).


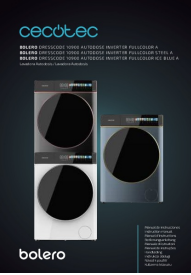


OFFICIAL PRODUCT VIDEOS

No official product videos were found in the provided data for this model.


© 2024 Cecotec. All rights reserved.

Related Documents - Bolero Dresscode 7410 Inverter Steel

	<p>Cecotec Bolero DressCode Lavadoras: Manual de Instrucciones y Guía de Uso</p> <p>Manual completo de instrucciones para las lavadoras Cecotec Bolero DressCode (modelos 7610, 8610, 9610, 10610 Inverter). Incluye guías de instalación, operación, seguridad, mantenimiento y especificaciones técnicas.</p>
	<p>Manual de Usuario Lavadora Cecotec Bolero DressCode 8500 Inverter A / Steel A</p> <p>Manual de usuario completo para las lavadoras Cecotec Bolero DressCode 8500 Inverter A y Steel A. Incluye instrucciones de seguridad, instalación, funcionamiento, mantenimiento, solución de problemas y especificaciones técnicas.</p>

	<p>Bolero DressCode Washing Machine Manuals</p> <p>Instruction manual for the Bolero DressCode 6000, 7000, and 8000 washing machines by Cecotec. Includes safety instructions, operation, cleaning, maintenance, and troubleshooting.</p>
	<p>Cecotec Bolero DressCode 10900 Autodose Inverter: Manual de Usuario y Guía de Instrucciones</p> <p>Descubra el manual de usuario para la lavadora Cecotec Bolero DressCode 10900 Autodose Inverter. Encuentre instrucciones detalladas, guías de seguridad y especificaciones técnicas para su correcto funcionamiento y mantenimiento.</p>
	<p>Manual de Instrucciones: Cecotec Bolero Dresscode 8300/9300 Inverter Max A Lavadora</p> <p>Guía completa de instrucciones para las lavadoras Cecotec Bolero Dresscode 8300 y 9300 Inverter Max A. Aprenda sobre instalación, funcionamiento, mantenimiento y solución de problemas para optimizar el uso de su electrodoméstico.</p>
	<p>Cecotec Bolero Dresscode Dry Inverter Clothes Dryer User Manual</p> <p>User manual and product information for the Cecotec Bolero Dresscode Dry Inverter series of clothes dryers, including models 8400 and 9400, in standard and steel finishes. Learn about features, operation, and maintenance.</p>

[\[pdf\]](#) User Manual Instructions Troubleshooting Guide Specifications Warranty manualLAVADORA CECOTEC 02172 BOLERO DRESSCODE 7410 7KG 1200RPM A INVERTER BCOmanualcomercialprieto WebRoot Store Shops ComercialPrieto 663B 7113 3116 DC1A 62B0 0A6E 2802 E13E DOCS manual bolero dresscode inverter a steel aSi el cable de alimentación está dañado debe ser sustituido por Servicio Asistencia Técnica Cecotec o personal cualificado similar con fin LAVADORA BCOmediamedia adeo mkp 21185766739d1d4171d44171c94a8f56 mediacomercialprieto aBedienungsanleitungSi fin Cecotec Bolero DressCode 8410 Frontlader Preisvergleich Geizhals ÖsterreichLAVADORA BCOmediav1media mediagzhls at blob ldb 6 f b 5fec50d6adbe5313b36af8ecec6a1b1ff19dcomercialprieto ||| ||| BOLERO DRESSCODE 7410 INVERTER A/STEEL A BOLERO DRESSCODE 8410 INVERTER A/STEEL A BOLERO DRESSCODE 9410 INVERTER A/STEEL A BOLERO DRESSCODE 10410 INVERTER A/STEEL A Lavadora/ Washing machine Manual de instrucciones Instruction manual Manuel ||| BOLERO DRESSCODE 7410 INVERTER A/STEEL A BOLERO DRESSCODE 8410 INVERTER A/STEEL A BOLERO DRESSCODE 9410 INVERTER A/STEEL A BOLERO DRESSCODE 10410 INVERTER A/STEEL A Lavadora/ Washing machine Manual de instrucciones Instruction manual Manuel Bedienungsanleitung Manuale di istruzioni Ma... lang:it **score:58** filesize: 3.92 M page_count: 127 document date: 2024-03-13

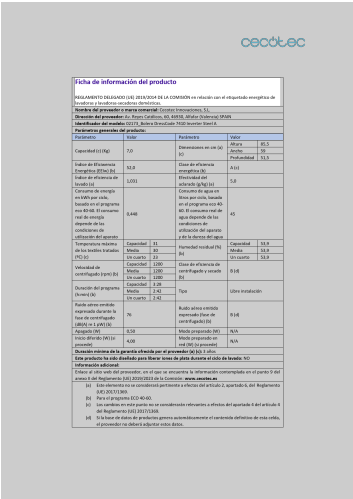

[\[pdf\]](#) User Manual Instructions Troubleshooting Guide Specifications Warranty Descargar manual de usuario Bolero Dresscode 9410 Inverter A Lavadora carga frontal Cecotec bolero dresscode inverter a user cdn cecotec cloud media files ||| BOLERO DRESSCODE 7410 INVERTER A/STEEL A BOLERO DRESSCODE 8410 INVERTER A/STEEL A BOLERO DRESSCODE 9410 INVERTER A/STEEL A BOLERO DRESSCODE 10410 INVERTER A/STEEL A Lavadora/ Washing machine Manual de instrucciones Instruction manual Manuel d instructions Bedienungsanleitung Manuale di istruzioni Ma... lang:it **score:53** filesize: 3.92 M page_count: 127 document date: 2024-03-13

[\[pdf\]](#) FICHA TÉCNICA 02173 Roberto Cortina Ficha de producto Bolero DressCode 7410 Inverter Steel A Lavadora carga frontal Cecotec bolero dresscode inverter steel a productenergyinformation 0 spec url es cdn cecotec cloud media files ||| Ficha de informacin del producto REGLAMENTO DELEGADO UE 2019/2014 DE LA COMISIN en relacin con el etiquetado energtico de lavadoras y lavadoras-secadoras domsticas. Nombre del proveedor o marca comercial: Cecotec Innovaciones, S.L. Direccin del proveedor: Av. Reyes Catlicos, 60, 46930, Alfafar ... lang:es **score:30** filesize: 107.17 K page_count: 1 document date: 2024-02-05

