

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [KENT](#) /
- › [KENT Hot Pot Auto Electric Kettle with Water Dispenser User Manual](#)

KENT Hot Pot

KENT Hot Pot Auto Electric Kettle with Water Dispenser User Manual

Model: Hot Pot | Brand: KENT

1. INTRODUCTION

Thank you for choosing the KENT Hot Pot Auto Electric Kettle with Water Dispenser. This appliance is designed to provide convenient access to hot water for various household needs, including making tea, coffee, and preparing food. Please read this manual carefully before operating the appliance to ensure safe and efficient use. Keep this manual for future reference.



Image 1.1: The KENT Hot Pot Water Boiler Dispenser, a versatile appliance for hot water needs.

2. PRODUCT OVERVIEW

2.1 Key Features

- **4 Liters Capacity:** Boils and stores a large quantity of water, suitable for multiple uses.
- **Powerful 750W:** Ensures super-fast boiling for quick access to hot water.
- **Stainless Steel Inner Pot:** Provides durability and ensures hygienic water storage.
- **Cool-Touch Plastic Exterior:** Designed for safe handling and prevents burns.
- **Unique Reboil Function:** Keeps already boiled water warm for extended periods.
- **Overheating Protection:** Features an auto shut-off mechanism to prevent overheating and dry boiling.
- **Clear Water Level Gauge:** Allows easy monitoring of the water level inside the pot.

2.2 Components

Familiarize yourself with the various parts of your KENT Hot Pot for proper operation.



Image 2.1: The KENT Hot Pot, highlighting its auto shut-off feature for safety.

AUTO SHUT-OFF

Prevents over-heating
and dry boiling



Image 2.2: Top view of the KENT Hot Pot with the lid open, revealing the stainless steel inner pot and control panel.

- **Handle:** For safe transportation of the appliance.
- **Steam Vent:** Releases steam during boiling.
- **Pressure Plate:** Part of the lid mechanism.
- **Lid Opening Lever:** Used to open the appliance lid.
- **Boil Indicator:** Illuminates when water is boiling.
- **Keep Warm Indicator:** Illuminates when the appliance is in keep warm mode.
- **Spout:** Where hot water is dispensed.
- **Water Indicator:** Transparent gauge to view water level.
- **Refill Mark:** Indicates maximum and minimum water levels.
- **Dispense Button:** Activates water dispensing.
- **Reboil Button:** Initiates the reboil function.

3. SETUP

1. **Unpacking:** Carefully remove the appliance from its packaging. Retain the packaging for future storage or transport.

2. **Initial Cleaning:** Before first use, wipe the exterior with a damp cloth. Fill the inner pot with water up to the maximum level, boil it, and then discard the water. Repeat this process 2-3 times to remove any manufacturing residues.
3. **Placement:** Place the KENT Hot Pot on a stable, flat, heat-resistant surface, away from direct sunlight, heat sources, and moisture. Ensure there is adequate ventilation around the appliance.
4. **Power Connection:** Ensure the power cord is securely plugged into a suitable electrical outlet. The appliance operates on 750 Watts.

4. OPERATING INSTRUCTIONS

4.1 Filling with Water

1. Open the lid using the lid opening lever.
2. Fill the inner pot with fresh, clean water. Do not fill below the minimum mark or above the maximum refill mark indicated on the water level gauge.
3. Close the lid securely.



Image 4.1: The 4-liter capacity of the KENT Hot Pot, featuring a durable stainless steel inner pot.

4.2 Boiling Water

1. After filling and closing the lid, ensure the appliance is plugged into a power outlet.
2. The appliance will automatically begin the boiling process. The "Boiling" indicator light will illuminate.
3. Once the water reaches boiling temperature (approximately 95 degrees Celsius), the "Boiling" indicator will turn off, and the appliance will switch to "Keep Warm" mode. The "Keep Warm" indicator will illuminate.

SUPER FAST BOILING

Powerful 750 W, keep water warm for extended periods



Image 4.2: The KENT Hot Pot in operation, illustrating its 750W super-fast boiling capability.

4.3 Keep Warm Function

After boiling, the appliance automatically enters "Keep Warm" mode to maintain the water temperature. The "Keep Warm" indicator light will remain on.

4.4 Reboil Function

If the water has cooled down and you wish to reboil it, press the **REBOIL** button. The appliance will reboil the water and then return to "Keep Warm" mode.

REBOIL FUNCTION

Keeps the already boiled water warm for a longer period



Image 4.3: A close-up view of the control panel, highlighting the Reboil and Dispense buttons.

4.5 Water Dispensing

To dispense hot water, place a cup or container under the spout and press the **DISPENSE** button. Release the button to stop dispensing.



Image 4.4: The KENT Hot Pot dispensing hot water into a glass.

4.6 Safety Precautions

- Do not touch hot surfaces. Use handles and knobs.
- Always ensure the lid is securely closed during operation.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Unplug from the outlet when not in use and before cleaning.
- Keep out of reach of children.
- Do not operate if the cord or plug is damaged, or if the appliance malfunctions.

5. MAINTENANCE AND CLEANING

5.1 Regular Cleaning

1. Always unplug the appliance and allow it to cool completely before cleaning.
2. Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
3. The inner pot can be cleaned with a soft brush or sponge and mild detergent. Rinse thoroughly.
4. Do not immerse the main body of the appliance in water.

5.2 Descaling

Over time, mineral deposits (limescale) may build up inside the inner pot, especially in hard water areas. This can affect performance and efficiency. Descale the appliance regularly (e.g., monthly or as needed).

1. Fill the pot with a mixture of water and white vinegar (1:1 ratio) or a commercial descaling solution according to product instructions.
2. Allow the solution to soak for at least 30 minutes, or boil the solution if recommended by the descaling product.
3. Pour out the solution and rinse the inner pot thoroughly several times with fresh water to remove any residue and vinegar smell.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outage; faulty outlet.	Check power connection; verify power supply; try a different outlet.
Water not boiling or heating slowly.	Limescale buildup; insufficient water; faulty heating element.	Descal the appliance; ensure water is above minimum level; contact customer support if issue persists.
Water dispensing is slow or weak.	Limescale buildup in spout; low water level.	Descal the appliance; ensure adequate water level.
Appliance automatically shuts off.	Overheating protection activated (e.g., dry boiling).	Unplug, allow to cool, then refill with water. Ensure water is always above minimum level during operation.

If you encounter issues not listed here or if solutions do not resolve the problem, please contact KENT customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	KENT
Model Number	Hot Pot
Colour	Silver
Material	Stainless Steel (Inner Pot), Plastic (Outer Body)

Feature	Detail
Capacity	4 Liters
Wattage	750 Watts
Power Source	Corded Electric
Upper Temperature Rating	95 Degrees Celsius
Item Weight	2 kg 940 g
Item Dimensions (LxWxH)	29 x 21 x 38 Centimeters

8. WARRANTY AND SUPPORT

The KENT Hot Pot Auto Electric Kettle comes with a **1-year warranty** on the product from the date of purchase. Please retain your purchase receipt as proof of warranty.

For warranty claims, technical assistance, or any product-related inquiries, please contact KENT customer support. Contact details can typically be found on the official KENT website or on the product packaging.

Manufacturer/Importer: KENT RO SYSTEM LTD, E-6,7, & 8, Sector-59, NOIDA, UTTAR PRADESH, INDIA
PIN-201309