

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Vactidy](#) /

› **Vactidy Nimble T8 Robot Vacuum Cleaner User Manual**

Vactidy T8

Vactidy Nimble T8 Robot Vacuum Cleaner User Manual

Model: T8 | Brand: Vactidy

INTRODUCTION

Thank you for choosing the Vactidy Nimble T8 Robot Vacuum Cleaner. This 2-in-1 device is designed to provide efficient and convenient cleaning for your home, combining powerful vacuuming with effective mopping capabilities. Please read this manual thoroughly before using the product to ensure proper operation, maintenance, and to maximize its performance and lifespan.

PRODUCT OVERVIEW

The Vactidy Nimble T8 features advanced GyroNav Tech for intelligent navigation, multiple cleaning modes, and smart control options via a mobile app, Amazon Alexa, Google Home, and SIRI. It is equipped with a 250ml dustbin and a 230ml water tank, making it suitable for various floor types, including hard floors and low-pile carpets.



Image: The Vactidy Nimble T8 robot vacuum cleaner, its remote control, and a smartphone displaying the control app interface. This image illustrates the main components and control methods.

PACKAGE CONTENTS

Upon unboxing, please verify that all components are present and in good condition:

- Vactidy Nimble T8 Robot Vacuum Cleaner
- Charging Dock
- Power Adapter
- Remote Control (with AAA battery included)
- Dustbin (250ml)
- Water Tank (230ml)
- Side Brushes (spare set included)
- Mop Pad (spare included)

- Cleaning Tool
- User Manual

SETUP GUIDE

1. Charging Dock Placement

Place the charging dock against a wall in an open, uncluttered area. Ensure there is at least 0.5 meters (1.6 feet) of clear space on both sides of the dock and 1.5 meters (4.9 feet) in front of it. Plug the power adapter into the charging dock and then into a wall outlet. The indicator light on the dock will illuminate.

2. Initial Charging

Place the robot vacuum onto the charging dock, ensuring the charging contacts on the robot align with those on the dock. The robot will begin charging automatically. For first-time use, fully charge the robot for approximately 4-5 hours until the indicator light turns solid green.

3. Installing Side Brushes

Flip the robot over. Press the side brushes onto their respective posts until they click into place. Ensure they are securely attached.

4. Installing Dustbin or Water Tank

Depending on your cleaning needs, slide either the dustbin or the water tank into the designated slot at the rear of the robot until it clicks securely.

OPERATING INSTRUCTIONS

1. Powering On/Off

- To Power On: Press and hold the power button on the robot or remote control until the indicator lights illuminate.
- To Power Off: Press and hold the power button until the indicator lights turn off.

2. Connecting to the Vactidy App

Download the "Vactidy" app from the App Store (iOS) or Google Play Store (Android). Follow the in-app instructions to connect your robot. This typically involves creating an account, adding a device, and connecting to your home Wi-Fi network (2.4GHz only).



Image: A smartphone screen showing the Vactidy app, which allows users to control the robot vacuum, schedule cleanings, and select cleaning modes. This demonstrates the smart app control feature.

3. Cleaning Modes

The Vactidy Nimble T8 offers four distinct cleaning modes:

- **Auto Cleaning:** The robot intelligently navigates and cleans the entire accessible area in a zigzag pattern. This is the default and most commonly used mode.
- **Room Cleaning:** Ideal for cleaning a specific room. The robot will focus its cleaning efforts within the boundaries of the selected room.
- **Edge Cleaning:** The robot cleans along the walls and furniture edges, ensuring thorough cleaning of hard-to-reach areas.
- **Spot Cleaning:** For concentrated cleaning of a small, heavily soiled area. The robot will clean in a spiral pattern around the starting point.



Upgraded GyroNav Tech

Image: The Vactidy Nimble T8 robot vacuum cleaning a floor in an organized zigzag pattern, illustrating its efficient navigation. This highlights the GyroNav Tech for systematic cleaning.

4. Mopping Function

To use the mopping function:

1. Fill the water tank with clean water. Do not use cleaning solutions that are not approved for robot vacuums.
2. Attach the mop pad securely to the water tank.

3. Slide the filled water tank into the robot.
4. Select a cleaning mode. You can adjust the water flow level (4 levels available) via the Vactidy app to control the mop pad's humidity.

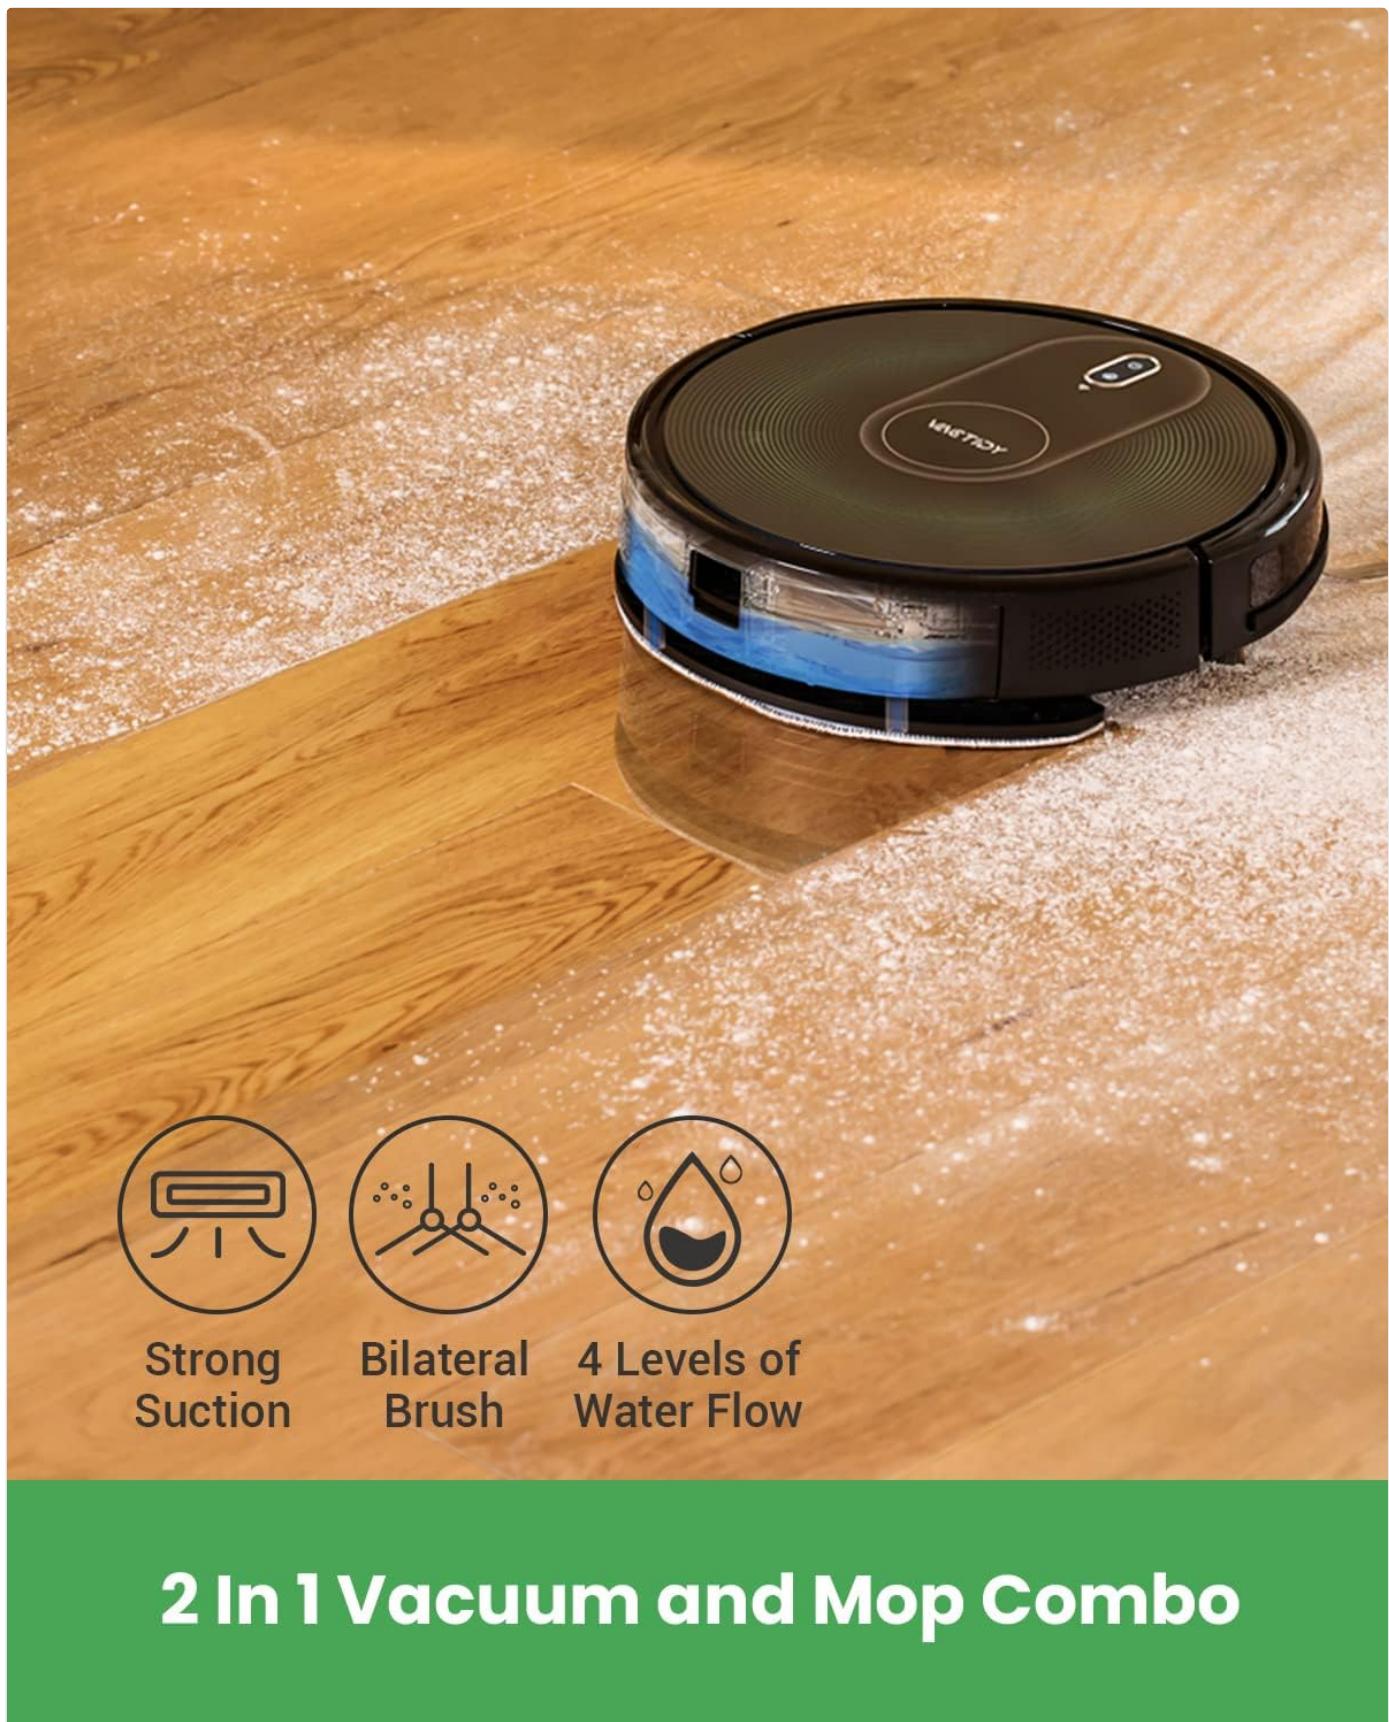


Image: The Vactidy Nimble T8 robot vacuum actively mopping a wooden floor, with visible dust particles around it. This image demonstrates the 2-in-1 vacuum and mop combo feature.

5. Carpet Boost Feature



The Vactidy Nimble T8 automatically detects carpets and increases suction power to Max mode for deeper cleaning. This feature ensures effective debris removal from low-pile carpets.



Image: The Vactidy Nimble T8 robot vacuum moving from a hard floor onto a carpet, illustrating its automatic carpet boost feature where suction power increases for deeper cleaning. This highlights its adaptability to different floor types.

6. Voice Control Integration

The robot is compatible with Amazon Alexa, Google Home, and SIRI. Once connected via the Vactidy app, enable the Vactidy skill/action in your voice assistant app. You can then use voice commands such as "Alexa, tell Vactidy to start cleaning" or "Hey Google, ask Vactidy to go home."

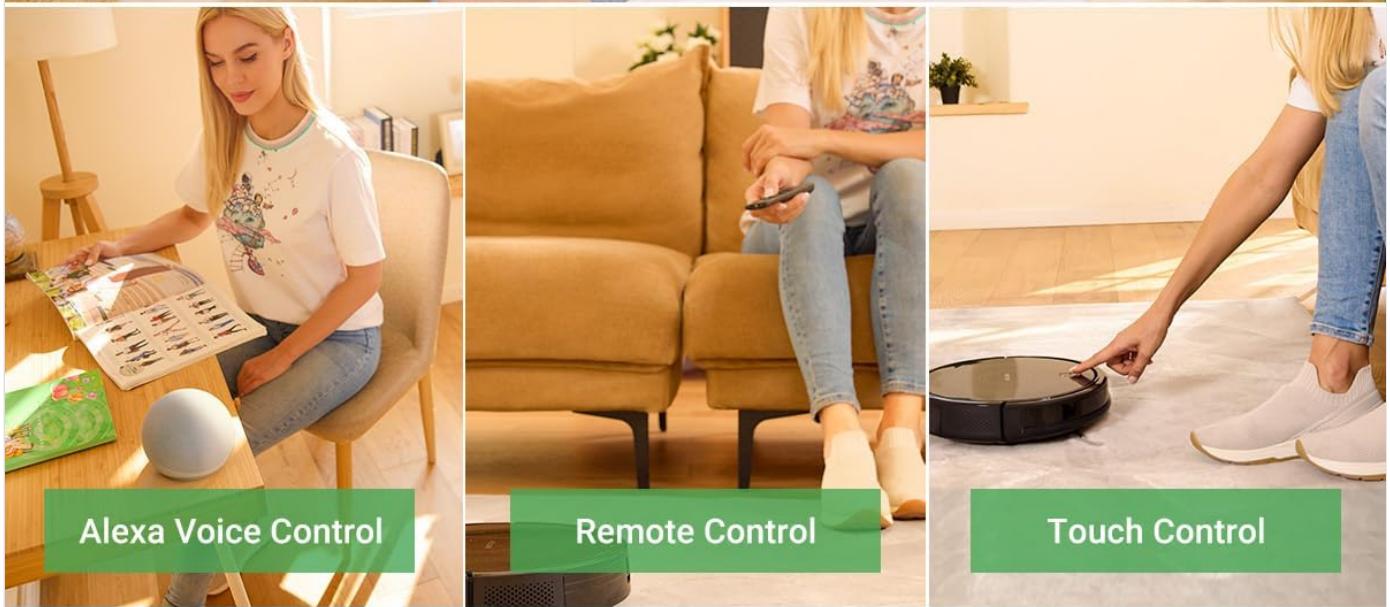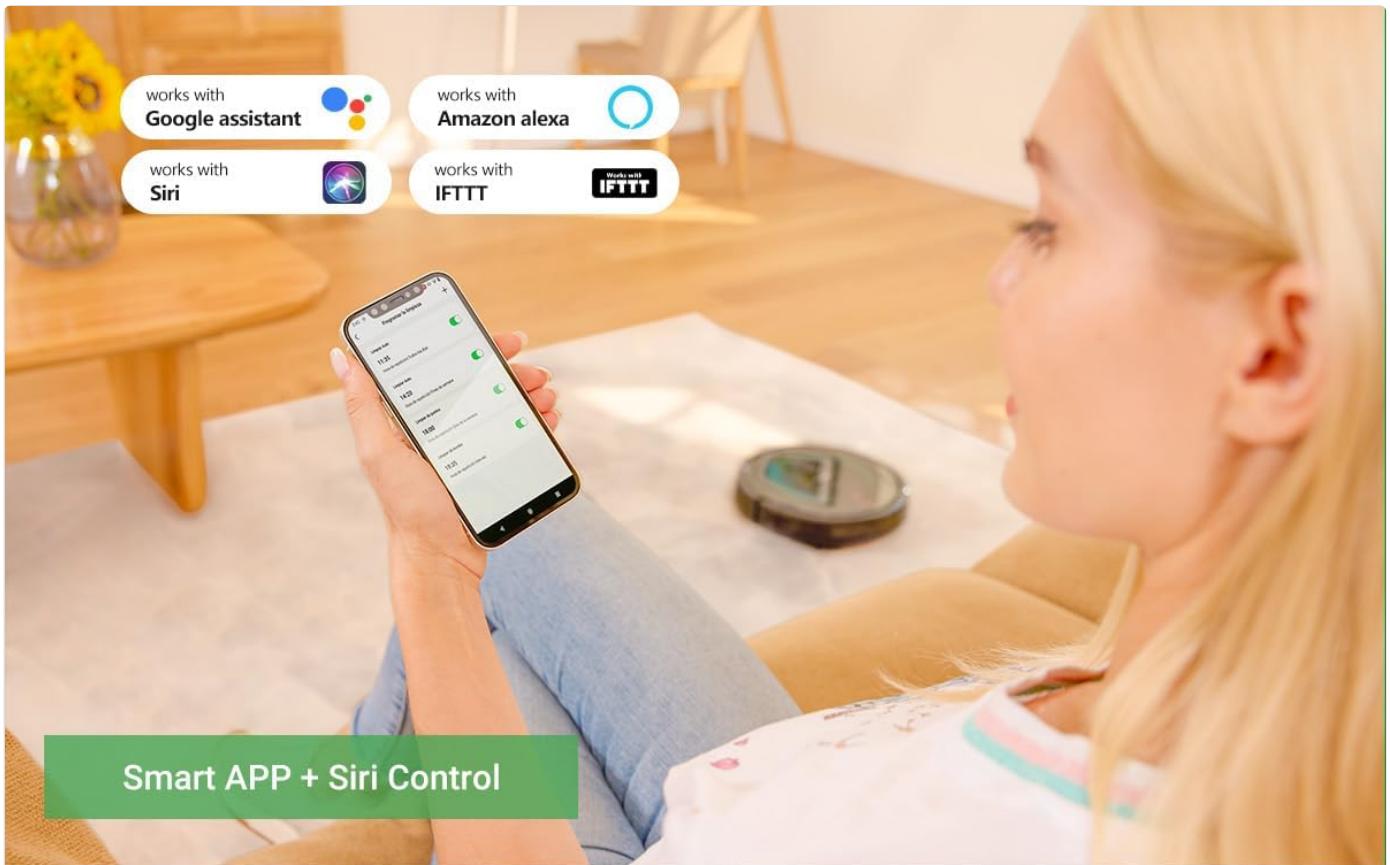

Various Smart Interactions and Controls

Image: A woman interacting with her smartphone, which displays the Vactidy app interface, alongside icons representing Google Assistant, Amazon Alexa, and Siri. This illustrates the various smart control options available for the robot vacuum.

MAINTENANCE

Regular maintenance is crucial for optimal performance and longevity of your Vactidy Nimble T8. Perform these steps regularly:

1. Emptying the Dustbin

Empty the dustbin after each cleaning cycle or when the "full" indicator appears in the app. Open the robot's top cover, remove the dustbin, open its lid, and discard the debris. Clean the filter with the provided cleaning tool or a soft brush.

2. Cleaning the Water Tank and Mop Pad

After mopping, empty any remaining water from the tank. Remove and rinse the mop pad thoroughly with clean water. Allow both to air dry completely before reassembling.

3. Cleaning Side Brushes and Roller Brush

Periodically remove hair and debris tangled around the side brushes and the main roller brush. Use the cleaning tool to cut and remove tangled hair. Replace brushes if they are worn or damaged.



Deeper Clean with Roller Brush

Image: A comparative image showing a robot vacuum with only a suction port versus the Vactidy Nimble T8 with a roller brush, demonstrating how the roller brush effectively picks up debris for a deeper clean. This illustrates the advantage of the roller brush design.

4. Cleaning Sensors and Charging Contacts

Wipe the anti-drop sensors, anti-collision sensors, and charging contacts on both the robot and the charging dock with a clean, dry cloth. Dust and debris can interfere with their functionality.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Robot does not turn on.	Low battery; Power button not pressed long enough.	Charge the robot fully; Press and hold the power button for 3 seconds.
Robot cannot find charging dock.	Dock is obstructed; Dock is unplugged; Robot is too far from dock.	Ensure clear space around dock; Plug in the dock; Manually place robot closer to dock.
Poor cleaning performance.	Dustbin full; Filter clogged; Brushes tangled.	Empty dustbin; Clean/replace filter; Clean brushes.
Robot gets stuck frequently.	Obstacles; Sensors dirty.	Clear obstacles (cables, rugs); Clean sensors.
App connection issues.	Incorrect Wi-Fi password; Router too far; 5GHz Wi-Fi network.	Verify password; Move robot closer to router; Ensure 2.4GHz Wi-Fi is used.

SPECIFICATIONS

Feature	Detail
Model Number	T8 (8801420202-DI)
Dimensions (L x W x H)	30.6 x 30.6 x 7.35 cm (12.05 x 12.05 x 2.89 inches)
Weight	3.61 kg (7.96 lbs)
Dustbin Capacity	250 ml
Water Tank Capacity	230 ml
Battery Type	Lithium-ion
Max Runtime	Up to 100 minutes
Noise Level	Less than 60 dB (in quiet mode)
Navigation Technology	GyroNav Tech
Connectivity	Wi-Fi (2.4GHz), Remote Control, Voice Control (Alexa, Google Home, SIRI)
Filter Type	HEPA

IMPORTANT SAFETY INFORMATION

Before using your Vactidy Nimble T8, please review the following safety precautions:

- Do not use the robot in environments with open flames or flammable materials.
- Keep loose cables, curtains, and other objects that could entangle the robot out of its path.
- Do not allow children or pets to operate the robot without supervision.

- Do not expose the robot or charging dock to water or excessive moisture.
- Only use the original power adapter and charging dock provided with the product.
- Ensure the robot is turned off and unplugged before performing any maintenance or cleaning.

WARRANTY AND SUPPORT

Vactidy provides a standard warranty for the Nimble T8 robot vacuum cleaner. Please refer to the warranty card included in your package for specific terms and conditions, including warranty period and coverage details. For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact Vactidy customer service through the contact information provided on the official Vactidy website or within the Vactidy app.

Note: Information regarding spare parts availability is currently unavailable.