Replacement Remote Control

Generic Replacement Remote Control User Manual

For Twin Star Electric Fireplace Heater Models: 23II210GRA-A003, 25EF023GRA, 26EF022GRA, 26EF022SRA, 26EF023GRA

1. Introduction

This manual provides essential instructions for the operation and maintenance of your new Generic Replacement Remote Control. This remote is designed to be compatible with various Twin Star Electric Fireplace Heater models, ensuring seamless control of your appliance.

The remote control is pre-programmed and requires no additional setup or pairing. Simply insert batteries, and it will be ready for use with your compatible fireplace heater.

Compatible Models:

- Twin Star 23II210GRA-A003
- Twin Star 25EF023GRA
- Twin Star 26EF022GRA
- Twin Star 26EF022SRA
- Twin Star 26EF023GRA
- Classic 3D Electric Fireplace Heater Stove Heater (models listed above)

2. SAFETY INFORMATION

Please read and understand the following safety precautions before using the remote control:

- Battery Handling: Always use the correct type and size of batteries (2 AAA batteries).
- Polarity: Ensure batteries are inserted with correct polarity (+ and -). Incorrect installation can cause damage.
- **Mixing Batteries:** Do not mix old and new batteries, or different types of batteries (e.g., alkaline and rechargeable).
- **Disposal:** Dispose of used batteries according to local regulations. Do not incinerate batteries.
- **Storage:** Remove batteries if the remote control will not be used for an extended period to prevent leakage.
- Water Exposure: Keep the remote control away from water and excessive moisture.

• Children: Keep batteries and the remote control out of reach of small children.

3. PACKAGE CONTENTS

Upon opening the package, you should find the following item:

• 1 x Generic Replacement Remote Control

Note: Batteries (2 AAA) and additional instructions are not included in the package and must be purchased separately.

4. SETUP

4.1. Battery Installation

- 1. Locate the battery compartment on the back of the remote control.
- 2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
- 3. Insert two (2) AAA batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
- 4. Replace the battery compartment cover by sliding it back into position until it clicks securely.



Image 4.1: Back of the remote control with the battery cover removed, illustrating the correct orientation for AAA battery insertion.



Image 4.2: Back of the remote control with the battery cover securely in place.

Once batteries are installed, the remote control is ready for immediate use. No programming or pairing is required.

5. OPERATING INSTRUCTIONS

Point the remote control directly at the infrared receiver on your Twin Star Electric Fireplace Heater. Ensure there are no obstructions between the remote and the fireplace.



Image 5.1: Front view of the remote control with button layout.

5.1. Button Functions

Button	Function
Orange Power Button	Turns the fireplace heater ON or OFF.
Flame Icon Button	Controls the flame effect settings (e.g., brightness, intensity). Press repeatedly to cycle through options.
Thermometer Icon Button	Adjusts the thermostat or temperature settings. Press repeatedly to cycle through temperature levels or modes.
Hourglass Icon Button	Activates or adjusts the timer function. Press repeatedly to set desired operating duration.
Infinity Loop Icon Button	May control additional features such as heat settings (low/high) or other continuous modes. Refer to your fireplace heater's original manual for specific functionality.

Note: Specific functions of each button may vary slightly depending on the exact model of your Twin Star Electric Fireplace Heater. Refer to your fireplace's original user manual for detailed information on its features.

6. MAINTENANCE

6.1. Cleaning the Remote Control

- Wipe the remote control with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the surface or internal components.

6.2. Battery Replacement

If the remote control's range decreases or it becomes unresponsive, it is likely time to replace the batteries. Follow the battery installation steps outlined in Section 4.1.

- Always replace both AAA batteries at the same time.
- Ensure proper polarity when inserting new batteries.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control is not working.	Dead or incorrectly installed batteries.	Replace batteries with new AAA batteries, ensuring correct polarity.
Remote control has limited range or intermittent response.	Weak batteries. Obstruction between remote and fireplace.	Replace batteries. Ensure a clear line of sight to the fireplace's infrared receiver.

Problem	Possible Cause	Solution
Specific button functions do not work as expected.	Compatibility issue with a specific fireplace model feature.	While this remote is broadly compatible, some advanced features of your specific fireplace model might not be fully supported. Refer to your fireplace's original manual.

If troubleshooting steps do not resolve the issue, ensure your fireplace heater is functioning correctly with its original controls (if available) or contact the manufacturer of your fireplace heater for assistance.

8. Specifications

• Product Type: Replacement Remote Control

• Brand: Generic

• Compatible Devices: Twin Star Electric Fireplace Heaters (Models: 23II210GRA-A003, 25EF023GRA, 26EF022GRA, 26EF022SRA, 26EF023GRA)

• Power Source: 2 x AAA Batteries (not included)

• Special Feature: No Programming Required

• Max Number of Supported Devices: 1 (per remote)

9. WARRANTY AND SUPPORT

As a generic replacement product, specific warranty information or direct manufacturer support for this remote control is typically not provided. Please refer to the retailer's return policy for any issues with the product upon receipt.

For support regarding the operation of your Twin Star Electric Fireplace Heater, please consult the original manual provided with your fireplace or contact the fireplace manufacturer directly.

Related Documents - Replacement Remote Control



Replacement Remote Control Button Guide for SA32B45, LD32CGB18, K4117H32H

Detailed guide to the button functions of replacement remote controls compatible with models SA32B45, LD32CGB18, and K4117H32H. Maps original button labels to their functions on the replacement remote.



<u>Duraflame 48HF201CGT Electric Fireplace User Manual and Installation Guide</u>

Comprehensive user manual and installation guide for the Duraflame 48HF201CGT electric fireplace, covering safety instructions, setup, operation, troubleshooting, and replacement parts.

duraflame



Duraflame DFI-470-04 Electric Fireplace Heater User Manual and Installation Guide

Comprehensive user manual, installation guide, and troubleshooting information for the Duraflame DFI-470-04 electric fireplace heater. Includes safety instructions, operation details, maintenance, and warranty information.



Twin-Star Electric Fireplace User Manual and Operation Guide

Comprehensive guide for Twin-Star International Home Furnishings electric fireplaces, covering setup, operation, troubleshooting, maintenance, and warranty information for models like 18EF031GRA.



<u>Duraflame DFI041ARU-07 Electric Fireplace Heater: User Manual, Safety, and Troubleshooting Guide</u>

User manual and troubleshooting guide for the Duraflame DFI041ARU-07 electric fireplace heater. Provides operating instructions, safety warnings, installation details, product specifications, warranty information, and maintenance tips.



StyleWell Electric Fireplace Use and Care Guide

This guide provides essential information for the safe operation, assembly, care, and troubleshooting of the StyleWell Electric Fireplace (model 18WM390-17008). It includes safety warnings, warranty details, and replacement parts information.