

pepape EA433 2KM Micro

pepape 433.92MHz Remote Control User Manual

For Crawford Normstahl EA433 2KS, EA433 2KM, EA433 4KS, RCU 433-2K, RCU 433-4K, N002800, T433-4

1. INTRODUCTION

This manual provides instructions for the pepape 433.92MHz remote control, designed as a replacement for various Crawford Normstahl garage door openers. Please read this manual carefully before use to ensure proper setup and operation.

2. PACKAGE CONTENTS

- 2 x pepape 433.92MHz Remote Controls
- 1 x User Manual

3. COMPATIBILITY

This remote control is compatible with the following Crawford Normstahl garage door opener models operating at 433.92MHz:

- Crawford Normstahl EA433 2KS
- Crawford Normstahl EA433 2KM
- Crawford Normstahl EA433 4KS
- Crawford Normstahl RCU 433-2K
- Crawford Normstahl RCU 433-4K
- Crawford Normstahl N002800
- Crawford Normstahl T433-4

Important Note:


This remote is a replacement product, not an original accessory. Always verify compatibility with your existing garage door opener before purchase and programming.




This image illustrates the pepape remote control and its compatibility with several Crawford Normstahl remote models, confirming the range of supported devices.

4. PRODUCT FEATURES

- **Frequency:** 433.92 MHz for reliable signal transmission.
- **2 Channels:** Two independent buttons allow control of two separate garage door openers or functions.
- **Durable Design:** Constructed with a robust ABS housing for longevity.
- **Blue Indicator Light:** Provides visual feedback during operation.
- **Portable:** Compact and lightweight design with a metal keychain for easy carrying.

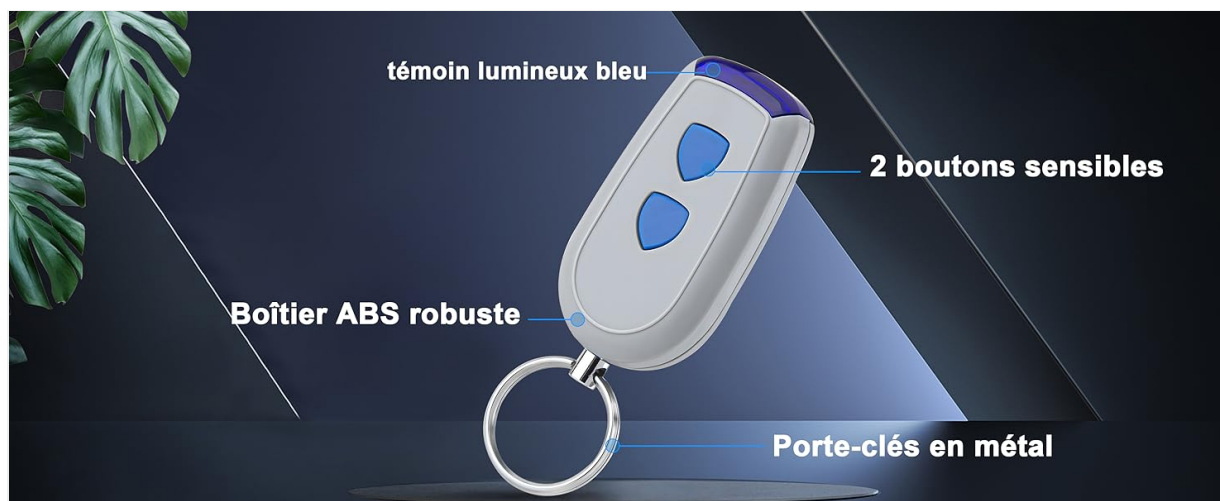

This image details the key components and features of the remote control, including the blue indicator light, two buttons, durable ABS casing, and metal keychain.

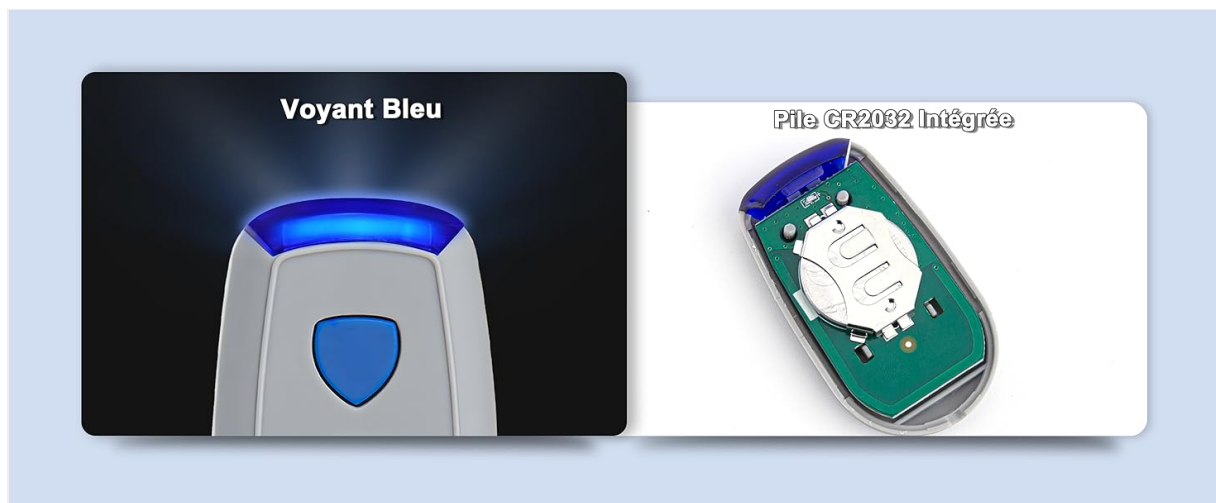

This image provides a closer look at the blue indicator light and the internal structure, confirming the presence of an integrated CR2032 battery.

5. SETUP

5.1 Battery Installation/Replacement

The remote control comes with a CR2032 lithium metallic battery pre-installed. If replacement is needed, follow these steps:

1. Carefully open the remote control casing using a small screwdriver.
2. Remove the old CR2032 battery.
3. Insert a new CR2032 battery with the positive (+) side facing up.
4. Close the casing securely.

Schritte zur Installation der Batterie



This image demonstrates the process of opening the remote control and accessing the battery compartment for installation or replacement.

5.2 Programming the Remote Control

This remote control must be programmed to your existing garage door opener's receiver. The programming procedure varies depending on the specific model of your Crawford Normstahl garage door opener.

Please refer to the instruction manual of your original Crawford Normstahl garage door opener for detailed programming steps.

Typically, programming involves:

- Locating the 'Learn' or 'Program' button on your garage door opener's motor unit.
- Pressing and releasing the 'Learn' button.
- Within a short timeframe (usually 30 seconds), pressing the desired button on your new pepape remote control.
- The opener's light may flash or click to confirm successful programming.

6. OPERATING INSTRUCTIONS

Once programmed, operating the remote control is straightforward:

- Point the remote control towards your garage door opener.

- Press the programmed button to activate your garage door.
- The blue indicator light on the remote will illuminate when a button is pressed, indicating signal transmission.



This image shows the remote control being used to operate a garage door, demonstrating its primary function.

7. MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Avoid using harsh chemicals or abrasive cleaners.
- **Battery Life:** The CR2032 battery typically lasts for an extended period. If the remote's range decreases or the indicator light dims, it may be time to replace the battery.
- **Storage:** Store the remote in a dry place, away from extreme temperatures and direct sunlight.

8. TROUBLESHOOTING

- **Remote not working:**
 - Check if the blue indicator light illuminates when a button is pressed. If not, replace the battery.
 - Ensure the remote is properly programmed to your garage door opener. Refer to Section 5.2.

- Verify that your garage door opener is receiving power and functioning correctly with its original remote.
- **Reduced range:**
 - Replace the battery.
 - Ensure there are no obstructions between the remote and the garage door opener's receiver.
 - Avoid sources of radio interference (e.g., other wireless devices).
- **Accidental activation:**
 - Ensure buttons are not being accidentally pressed while in a pocket or bag. The compact design is shown in this image:



This image highlights the remote's light and portable design, showing its dimensions and how it can be carried conveniently.

9. SPECIFICATIONS

Brand	pepape
Model Number	EA433 2KM Micro

Frequency	433.92 MHz
Number of Buttons	2
Special Features	2 Channels
Battery Type	CR2032 Lithium Metallic (Included)
Rechargeable Battery	No
Maximum Range	10 Meters

10. CUSTOMER SUPPORT

For any questions, technical assistance, or support regarding your pepape remote control, please contact the manufacturer or your retailer. Refer to your purchase documentation for specific contact information.