

[Manuals.plus](#) /

› [Bergner](#) /

› Bergner Click&Cook Red Edition Frying Pan Set Instruction Manual

## Bergner BG-31605-RD

# Bergner Click&Cook Red Edition Frying Pan Set Instruction Manual

MODELS: BG-31605-RD (RED, 22 CM & 26 CM)

## Introduction

---

This manual provides essential instructions for the safe and efficient use of your Bergner Click&Cook Red Edition Frying Pan Set. This set includes two non-stick frying pans (22 cm and 26 cm diameter) and one removable ergonomic handle. The pans are constructed from pressed aluminum, featuring a non-stick coating, and are compatible with all types of cooktops, including induction. The removable handle allows for oven use and convenient storage.



Image: The Bergner Click&Cook Red Edition Frying Pan Set, showing two red pans stacked with the black removable handle placed on top.

## Setup

---

1. **Unpacking:** Carefully remove all components from the packaging. Inspect for any damage.
2. **Initial Cleaning:** Before first use, wash the pans and handle with warm soapy water. Rinse thoroughly and dry completely.
3. **Attaching the Handle:** Align the handle's attachment mechanism with the pan's handle receiver. Press the release button on the handle and slide it onto the pan until it clicks securely into place. Ensure the handle is firmly attached before lifting or cooking.
4. **Detaching the Handle:** To remove the handle, press the release button and slide the handle away from the pan.



Image: A hand demonstrating how to attach the removable handle to a Bergner frying pan.

## Operating Instructions

---

- **Cooktop Use:** These pans are suitable for all cooktop types, including induction, ceramic, gas, halogen, and electric. Place the pan centrally on the heat source.
- **Heat Settings:** Use low to medium heat for most cooking tasks. High heat can damage the non-stick coating over time and is generally not necessary due to the efficient heat distribution of pressed aluminum.
- **Oven Use:** The pans are oven safe. **Always remove the handle before placing the pan in the oven.** The handle is not designed for oven temperatures.
- **Utensils:** To protect the non-stick coating, use wooden, silicone, or plastic utensils. Avoid metal utensils that can scratch the surface.
- **Preheating:** Preheating the pan for a short period on low to medium heat before adding food can improve cooking results.



Image: A Bergner frying pan with its removable handle attached, ready for use on a cooktop.

## Maintenance

---

- **Cleaning:** The pans are dishwasher safe. For best results and to prolong the life of the non-stick coating, hand washing with warm soapy water and a soft sponge is recommended. Avoid abrasive cleaners or scouring pads.
- **Handle Cleaning:** The removable handle can be washed by hand with warm soapy water. Do not immerse the handle in water for extended periods.
- **Storage:** The pans are designed for easy stacking to save space. To protect the non-stick surface when stacking, place a soft cloth or paper towel between the pans. Store the handle separately or attached to the top pan.
- **Non-Stick Coating Care:** Avoid overheating empty pans. Allow pans to cool completely before washing.



Image: Two Bergner Click&Cook frying pans stacked neatly, with the removable handle placed on top, illustrating space-saving storage.

## Troubleshooting

---

### Food Sticking to Pan:

**Possible Cause:** Pan not properly preheated, too high heat, or damaged non-stick coating.

**Solution:** Ensure pan is preheated on medium heat. Avoid using excessively high heat. Use appropriate cooking oils or fats. If the coating is visibly damaged, consider replacing the pan.

### Handle Not Attaching Securely:

**Possible Cause:** Handle not aligned correctly or release button not fully pressed.

**Solution:** Re-align the handle with the pan's receiver. Ensure the release button is fully depressed while sliding the handle into place until you hear a click. Check for any debris in the attachment mechanism.

### Pan Warping:

**Possible Cause:** Sudden temperature changes (e.g., placing a hot pan under cold water).

**Solution:** Always allow pans to cool down gradually before washing. Avoid extreme temperature shocks.

## Specifications

Feature	Detail
Model Number	BG-31605-RD
Material	Pressed Aluminum
Coating	Non-Stick
Color	Red
Pan Sizes	22 cm, 26 cm
Number of Pieces	3 (2 pans, 1 removable handle)
Handle Material	Plastic
Cooktop Compatibility	Induction, Ceramic, Gas, Halogen, Electric
Oven Safe	Yes ( <i>without handle</i> )
Dishwasher Safe	Yes
Item Weight	1.1 Kilograms



Image: The underside of a Bergner frying pan, highlighting its induction-compatible base.

## Warranty and Support

---

Specific warranty details are not provided in the product data. For information regarding warranty coverage, terms, and conditions, please refer to the official Bergner website or contact Bergner customer service directly.

For further assistance or inquiries, please visit the [Bergner Store on Amazon](#) or their official corporate website.

