

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Timex](#) /
- › [Timex Standard Chronograph Watch TW2V43900 User Manual](#)

### Timex TW2V43900

# Timex Standard Chronograph Watch User Manual

Model: **TW2V43900** | Brand: **Timex**

## INTRODUCTION

Thank you for choosing the Timex Standard Chronograph Watch, model TW2V43900. This manual provides essential information for the proper setup, operation, maintenance, and troubleshooting of your new timepiece. Please read this manual thoroughly to ensure optimal performance and longevity of your watch.





**Image 1:** Front view of the Timex Standard Chronograph Watch (TW2V43900) featuring a vibrant green dial, three subdials, and a black fabric strap. The watch has a silver-tone case and white hour markers.

## SETUP

### 1. Setting the Time and Date

1. **Pull the Crown:** Gently pull the crown (the knob on the side of the watch) out to position 2 (first click) to set the date, or position 3 (second click) to set the time.
2. **Set the Time:** Rotate the crown in position 3 to move the hour and minute hands. Set the time to the desired hour, ensuring AM/PM is correct if your watch has a 24-hour indicator or date changes at midnight.
3. **Set the Date:** If applicable, push the crown to position 2 and rotate it to adjust the date.
4. **Push the Crown In:** Once the time and date are set, push the crown back into position 1 (normal operating position) to start the watch.

### 2. Adjusting the Strap

The watch features a durable fabric strap. To adjust the fit, simply use the buckle to secure the strap comfortably around your wrist. Ensure it is snug but not overly tight to allow for proper circulation.



**Image 2:** The Timex Standard Chronograph Watch (TW2V43900) displayed on a wrist, showcasing its size and how the black fabric strap fits. The green dial is clearly visible.

## OPERATING THE CHRONOGRAPH

---

Your Timex Standard Chronograph watch is equipped with a stopwatch function for measuring elapsed time.

- **Start/Stop:** Press the top pusher (button) located at the 2 o'clock position to start the chronograph. Press it again to stop the chronograph.
- **Reset:** While the chronograph is stopped, press the bottom pusher (button) located at the 4 o'clock position to reset the chronograph hands to zero.
- **Subdials:** The watch features multiple subdials. Typically, one subdial tracks seconds, another minutes, and a third may track hours for the chronograph function. Refer to the specific dial markings for precise readings.

## Water Resistance

This watch has a water resistance rating of **50 meters (160 feet)**. This means it is suitable for short periods of recreational swimming, but not for diving or snorkeling. Avoid operating the crown or pushers when the watch is wet or submerged to prevent water ingress.

- **Do NOT** operate the crown or pushers underwater.
- **Do NOT** expose to hot water or steam (e.g., hot tubs, saunas).
- Rinse with fresh water after exposure to salt water.

## MAINTENANCE

---

### Cleaning Your Watch

To maintain the appearance of your watch, wipe the case and crystal with a soft, damp cloth. For the fabric strap, a mild soap solution and a soft brush can be used, followed by thorough rinsing and air drying. Avoid harsh chemicals or abrasive materials.

### Battery Replacement

Your quartz watch is powered by a battery. When the watch stops or the second hand begins to jump erratically (often indicating a low battery), it is time for a battery replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance.

### Storage

When not in use, store your watch in a cool, dry place, away from direct sunlight and extreme temperatures. The original watch box can be used for safe storage.



**Image 3:** The black Timex watch box, designed for safe storage and presentation of the timepiece. The Timex logo is visible on the top surface.

## TROUBLESHOOTING

---

- **Watch Not Running:**

Ensure the crown is fully pushed in to position 1. If it still does not run, the battery may need replacement.

- **Time is Incorrect:**

Reset the time as described in the "Setup" section. If the time consistently loses or gains significantly, the watch may require servicing.

- **Chronograph Hands Not Resetting to Zero:**

Press the reset pusher firmly. If they remain misaligned, consult a watch technician for adjustment.

- **Water Inside the Watch:**

If you notice condensation or water droplets inside the crystal, immediately take the watch to a qualified

service center. Do not attempt to dry it yourself, as this can cause further damage.

## SPECIFICATIONS

Feature	Detail
Model Number	TW2V43900
Case Size	41mm
Case Thickness	12.5 millimeters
Crystal Type	Mineral
Band Material	Fabric
Movement	Quartz
Water Resistance	50m (160ft)
Item Shape	Round
Manufacturer	Timex
First Available Date	March 24 2024



## WARRANTY AND SUPPORT





Your Timex Standard Chronograph Watch (TW2V43900) comes with a **1-year warranty** from the date of purchase, covering manufacturing defects. Please retain your proof of purchase for warranty claims. For warranty service, technical support, or inquiries about your watch, please contact Timex customer service directly. Contact information can typically be found on the official Timex website or within the original booklet that accompanied your watch.

**Important:** Any unauthorized repair or alteration to the watch may void the warranty.

© 2024 Timex. All rights reserved.

### Related Documents - TW2V43900

	<p><a href="#">Timex Kids Digital Watch User Guide - Operation and Features</a></p> <p>Comprehensive user guide for the Timex Kids digital watch (model 791-095007). Covers features, basic operations, setting time and date, chronograph, alarm, timer, INDIGLO night light, water resistance, strap adjustments, battery information, and warranty details.</p>
	<p><a href="#">Timex T100 User Guide: Operation, Features, and Maintenance</a></p> <p>Official user guide for the Timex T100 watch, detailing how to set time, date, use the chronograph, timer, alarms, Indiglo night-light, and information on water resistance and warranty.</p>

	<p><a href="#">Timex Ironman Watch User Manual</a></p> <p>Comprehensive user manual for the Timex Ironman watch, detailing features, operations, and maintenance. Covers time, chronograph, timer, alarms, occasions, INDIGLO night-light, water resistance, and warranty.</p>
	<p><a href="#">Руководство по эксплуатации часов Timex</a></p> <p>Подробное руководство по эксплуатации часов Timex, охватывающее настройку времени, использование хронографа, водонепроницаемость, регулировку браслета и функции подсветки INDIGLO® для различных механизмов Timex.</p>
	<p><a href="#">Timex Watch User Manual: Features, Operation, and Settings</a></p> <p>Comprehensive user manual for Timex watches, covering features, basic operation, time/date settings, chronograph, timer, alarms, INDIGLO night-light, water resistance, and battery safety.</p>
	<p><a href="#">Timex T200 User Guide: Features, Operation, and Care</a></p> <p>Comprehensive user manual for the Timex T200 watch, covering basic operation, chronograph, interval timer, alarms, INDIGLO® night-light, water resistance, and warranty information.</p>

Documents - Timex – TW2V43900

no relevant documents