

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Eureka](#) /

› [Eureka AK10 Pro Cordless Vacuum Cleaner User Manual](#)

Eureka AK10 Pro

Eureka AK10 Pro Cordless Vacuum Cleaner User Manual

Model: AK10 Pro

INTRODUCTION

Thank you for choosing the Eureka AK10 Pro Cordless Vacuum Cleaner. This manual provides essential information for the safe operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and keep it for future reference.

The Eureka AK10 Pro is a high-performance cordless stick vacuum cleaner designed for efficient cleaning. It features a powerful 450W BLDC motor, delivering up to 29000 Pa of suction power. With a runtime of up to 60 minutes, a foldable tube for hard-to-reach areas, and an intelligent LED display, it is ideal for various cleaning tasks, including pet hair removal.

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

- Read all instructions before using this vacuum cleaner.
- Do not leave the appliance unattended when plugged in. Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be

present.

- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Store your appliance indoors in a cool, dry area.

PACKAGE CONTENTS

Ensure all items are present and in good condition upon unpacking:

- Eureka AK10 Pro Main Unit
- Motorized Mini Brush
- 2-in-1 Crevice Tool
- Wall Mount
- Extension Tube
- Power Adapter/Charger
- User Manual



150AW Forte Puissance d'Aspiration

Avec 3 modes d'aspiration et un moteur BLDC innovant l'aspirateur AK10 Pro peut traiter parfaitement toutes les situations dans le nettoyage

Image: Eureka AK10 Pro main unit and included accessories.

SETUP AND ASSEMBLY

1. Assembling the Vacuum Cleaner

1. Insert the extension tube into the main unit until it clicks into place.
2. Attach the floor brush head to the other end of the extension tube, ensuring it clicks securely.
3. For handheld use, attach desired accessories (e.g., 2-in-1 crevice tool, mini motorized brush) directly to the main unit.



Tube Pliable – Non Plus Besoin de se Baisser

Tube pliable à 180°, économisez l'énergie pendant le nettoyage.

Image: Illustration of assembling the main unit, extension tube, and floor brush.

2. Charging the Battery

The Eureka AK10 Pro features a removable battery for convenient charging. Before first use, fully charge the battery.

- To charge the battery while attached to the vacuum: Connect the power adapter to the charging port on the main unit and plug it into a wall outlet.
- To charge the removable battery separately: Detach the battery from the main unit and connect the power adapter directly to the battery charging port. Plug into a wall outlet.
- The LED display will indicate charging status. A full charge takes approximately 3 to 3.5 hours.



Image: The removable battery being charged, both attached to the vacuum and separately.

OPERATING INSTRUCTIONS

1. Power On/Off and Suction Modes

- Press the power button to turn the vacuum cleaner on or off.
- The intelligent LED display shows the current suction mode and battery level.
- Touch the LED screen to cycle through the three cleaning modes:
 - **Eco Mode:** For light cleaning and maximum runtime (up to 60 minutes).
 - **Standard Mode:** For everyday cleaning tasks.
 - **Boost Mode:** For stubborn dirt and deep cleaning, providing maximum suction power (29000 Pa).



Le Meilleur Ami d'Une Famille d'Animaux de Compagnie

Mini brosse motorisée pour aspirer et éliminer des poussières
de type pollen.

Image: The intelligent LED display showing real-time cleaning visualization and touch control for speed adjustment.

2. Using the Foldable Tube

The unique foldable tube allows you to clean under low furniture without bending down.

- Press the hinge release button on the extension tube to fold it.
- Adjust the angle to reach under sofas, beds, and tables.
- Return the tube to its straight position until it locks for standard cleaning.



Visualisation du Nettoyage en Temps Réel & Contrôle Tactile Intelligent

L'écran intelligent OLED vous montre le processus de nettoyage.

Image: The vacuum cleaner demonstrating the foldable tube feature for cleaning under furniture.

3. Using Accessories

The Eureka AK10 Pro comes with various attachments for specialized cleaning:

- **Motorized Mini Brush:** Ideal for removing pet hair and dust from upholstery, stairs, and car interiors. Attach directly to the main unit.
- **2-in-1 Crevice Tool:** Use the narrow end for tight spaces and corners, or slide the brush attachment down for dusting surfaces.
- **Extension Tube:** Provides extended reach for high areas or floor cleaning.



8*2500mAh
Batterie Détachable



8-60Minutes
Autonomie



3-3,5h
Temps de Charge

Batterie de Chargement Amovible

Batterie amovible de grande capacité

Image: Various accessories including the 2-in-1 crevice tool and mini motorized brush, demonstrating their use for different cleaning needs.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

1. Emptying the Dustbin

- Press the dustbin release button to detach the dustbin from the main unit.
- Hold the dustbin over a trash can and press the bottom release latch to empty its contents.
- Reattach the dustbin securely until it clicks.

2. Cleaning the Filters

The Eureka AK10 Pro features a 5-stage high-efficiency filtration system, including a HEPA filter. Clean filters regularly to maintain suction power.

1. Remove the dustbin and then carefully remove the filter components (pre-filter, mesh filter, HEPA filter).
2. Tap off loose dirt from the filters.
3. Rinse the washable filters under cold running water until the water runs clear. Do not use hot water or detergents.
4. Allow all filter components to air dry completely for at least 24 hours before reassembling. Do not use the vacuum with wet filters.
5. Reassemble the filters and dustbin in reverse order.

3. Cleaning the Brush Roll

- Turn off the vacuum and detach the floor brush head.
- Locate the brush roll release tab or cover. Open it to access the brush roll.
- Remove any tangled hair or debris from the brush roll using scissors or a cleaning tool.
- Reinsert the brush roll and close the cover securely.

TROUBLESHOOTING

If you encounter issues with your Eureka AK10 Pro, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is not charged or not properly installed.	Ensure the battery is fully charged and correctly inserted into the main unit.
Low suction power.	Dustbin is full, filters are clogged, or there is a blockage in the tube/brush head.	Empty the dustbin. Clean or replace filters. Check for and remove any blockages in the extension tube or brush head.
Brush roll not spinning.	Brush roll is tangled with hair/debris or obstructed.	Turn off the vacuum and remove any obstructions from the brush roll. Ensure it is properly reinstalled.
Short runtime.	Battery not fully charged or operating in Boost mode frequently.	Ensure the battery is fully charged. Use Eco or Standard mode for longer cleaning sessions. Battery capacity may decrease over time.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	Eureka
Model Number	AK10 Pro
Power	450 Watts
Voltage	29.6 Volts

Feature	Detail
Suction Power	29000 Pa (Boost Mode)
Number of Speeds	3 (Eco, Standard, Boost)
Noise Level	82 Decibels
Runtime	Up to 60 minutes (Eco Mode)
Charging Time	3 to 3.5 hours
Special Features	60-minute runtime in ECO mode, Removable battery, 5-stage filtration system, Foldable tube, Intelligent LED screen
Filter Type	HEPA Filter
Recommended Surface	Carpet, Hard floors, Tile, Wood floors
Power Source	Battery Powered
Included Components	Mini power brush, 2-in-1 crevice tool, Wall mount, Extension tube
Item Weight	3 Kilograms
Product Dimensions (L x W x H)	21.8 x 11 x 120 cm

WARRANTY AND SUPPORT

Eureka products are manufactured to the highest quality standards. For information regarding warranty coverage, please refer to the warranty card included in your product packaging or visit the official Eureka website.

For technical support, spare parts, or service inquiries, please contact Eureka customer service. Contact details can typically be found on the Eureka website or in your product documentation.

