

[Manuals.plus](#) /

› [Logitech G](#) /

› Logitech G PRO X TKL LIGHTSPEED Wireless Gaming Keyboard User Manual

Logitech G 920-012127

Logitech G PRO X TKL LIGHTSPEED Wireless Gaming Keyboard

Model: 920-012127

Brand: Logitech G

INTRODUCTION

The Logitech G PRO X TKL LIGHTSPEED Wireless Gaming Keyboard is engineered for competitive gaming, offering an ultra-portable tenkeyless design with advanced features. This manual provides detailed instructions for setting up, operating, maintaining, and troubleshooting your keyboard to ensure optimal performance.



Figure 1: Logitech G PRO X TKL LIGHTSPEED Wireless Gaming Keyboard. This image displays the full keyboard with its RGB lighting active, showcasing its compact tenkeyless layout and media controls.

WHAT'S IN THE BOX

Verify that all items are present in the packaging before proceeding with setup.

- PRO X TKL Gaming Keyboard
- USB LIGHTSPEED adapter
- Adapter extension
- USB-A to USB-C charging and data cable
- Carrying case

SETUP

Follow these steps to set up your Logitech G PRO X TKL keyboard.

1. Charging the Keyboard

Before first use, it is recommended to fully charge the keyboard. Connect the supplied USB-A to USB-C cable to the keyboard's USB-C port and the other end to a powered USB port on your computer or a USB wall adapter. The battery indicator light will show charging status.

2. Connectivity Options

The PRO X TKL keyboard offers three connectivity modes: LIGHTSPEED Wireless, Bluetooth, and Wired USB.

LIGHTSPEED Wireless (Recommended for Gaming)

1. Locate the USB LIGHTSPEED adapter. It may be stored in the keyboard's dedicated slot or within the packaging.
2. Plug the LIGHTSPEED adapter into an available USB port on your computer. For optimal signal, use the included adapter extension cable to position the adapter closer to the keyboard.
3. Ensure the keyboard's power switch (located on the top edge) is set to the LIGHTSPEED mode (indicated by the LIGHTSPEED logo).
4. The keyboard should automatically connect. The connection status indicator on the keyboard will confirm successful pairing.

LIGHTSPEED WIRELESS



**CHAMPIONSHIP-
PROVEN RELIABILITY**

Figure 2: LIGHTSPEED Wireless Connectivity. This image highlights the LIGHTSPEED wireless technology, emphasizing its speed and reliability for gaming.

Bluetooth Connectivity

1. Ensure your computer's Bluetooth is enabled.
2. Set the keyboard's power switch to Bluetooth mode (indicated by the Bluetooth logo).
3. Press and hold the Bluetooth pairing button on the keyboard (refer to the keyboard layout for exact location, often near the power switch) until the indicator light blinks rapidly.
4. On your computer, search for Bluetooth devices and select "PRO X TKL" from the list to pair.

Wired USB Connection

Connect the USB-A to USB-C cable directly from the keyboard to your computer's USB port. The keyboard will function in wired mode and charge simultaneously.

3. Software Installation (Logitech G HUB)

For full customization of RGB lighting, programmable keys, and game mode controls, download and install the Logitech G

HUB software from the official Logitech G website (www.logitechg.com/ghub).

OPERATING INSTRUCTIONS

Understand the key functions and controls of your PRO X TKL keyboard.

Basic Keyboard Usage

The keyboard functions as a standard QWERTY layout keyboard for typing and general computer use. The tenkeyless design removes the numeric keypad for a more compact form factor, ideal for competitive gaming setups that require more mouse space.

Game Mode Control

Activate Game Mode to disable certain keys (e.g., Windows key) that might interrupt gameplay. This can be configured and toggled via the Logitech G HUB software or a dedicated key on the keyboard (often indicated by a joystick icon).

Media Controls and Volume Roller

Dedicated media keys (Play/Pause, Stop, Previous, Next) and a volume roller are located on the top right of the keyboard for convenient audio control without exiting your application or game.


LIGHTSYNC RGB Lighting

Customize the per-key RGB lighting using Logitech G HUB. You can choose from various effects, colors, and synchronize lighting with other Logitech G LIGHTSYNC-enabled devices.

Programmable Keys

Utilize Logitech G HUB to assign custom functions, macros, or keybinds to specific keys, enhancing your productivity and gaming performance.

TENKEYLESS DESIGN

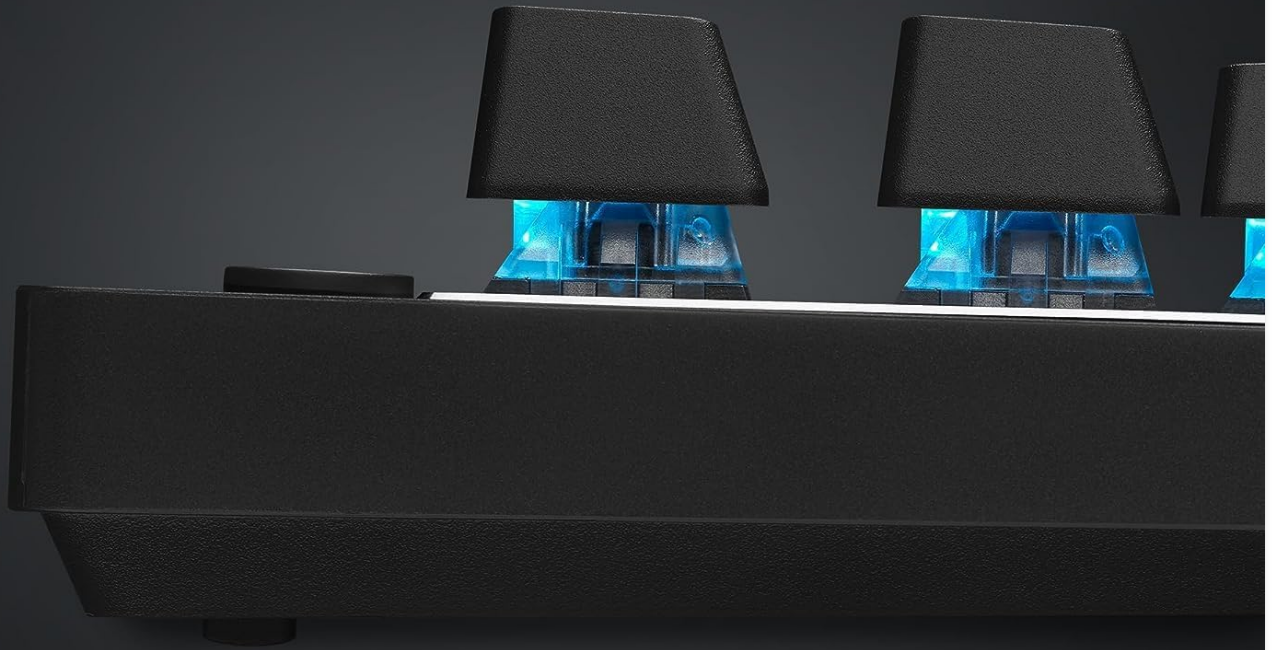

CHOOSE YOUR SWITCH TYPE



GX BROWN
TACTILE



GX RED
LINEAR



GX BLUE
CLICKY

Figure 3: PRO-LEVEL PERFORMANCE Features. This image provides an overhead view of the keyboard, labeling key features such as LIGHTSPEED, Bluetooth, USB options, Game Mode controls, media controls, volume roller, RGB lighting with LIGHTSYNC, and 3P compatibility.

FEATURES OVERVIEW

The PRO X TKL keyboard is designed with specific features to enhance your gaming and typing experience.

Tenkeyless (TKL) Design

The compact TKL form factor removes the numeric keypad, providing more desk space for mouse movement, which is crucial in competitive gaming. This design also makes the keyboard highly portable.

GX Brown Tactile Switches

This specific model features GX Brown tactile switches, which provide a noticeable bump feedback upon actuation, offering a balance between typing and gaming. They are quieter than clicky switches but provide more feedback than linear switches.

PRO-LEVEL PERFORMANCE



Figure 4: Choose Your Switch Type. This image shows a close-up of the keyboard's keycaps and switches, illustrating the different GX switch types available: GX Brown Tactile, GX Red Linear, and GX Blue Clicky. This model is equipped with GX Brown Tactile switches.

Dual-Shot PBT Keycaps

The keyboard is equipped with durable dual-shot PBT keycaps. PBT (Polybutylene Terephthalate) plastic is known for its resistance to wear, shine, and fading, ensuring the legends remain clear over extended use.

MAINTENANCE

Proper maintenance helps extend the lifespan and performance of your keyboard.

Cleaning

- **General Cleaning:** Use a soft, lint-free cloth slightly dampened with water or a mild cleaning solution to wipe down the keycaps and chassis. Avoid harsh chemicals or abrasive materials.
- **Dust Removal:** Use compressed air to remove dust and debris from between the keycaps. For deeper cleaning, keycaps can be carefully removed using a keycap puller (not included) to clean the switch area.

Battery Care

To maximize battery life, avoid fully discharging the keyboard frequently. Recharge the keyboard when the battery indicator shows low power. Store the keyboard in a cool, dry place when not in use for extended periods.

TROUBLESHOOTING

If you encounter issues with your keyboard, try the following solutions:

Problem	Possible Solution
Keyboard not responding (Wireless)	Ensure the keyboard is charged. Verify the power switch is in the correct mode (LIGHTSPEED or Bluetooth). For LIGHTSPEED, ensure the USB adapter is securely plugged in and try a different USB port. For Bluetooth, ensure Bluetooth is enabled on your device and re-pair the keyboard. Move the keyboard closer to the receiver/device to reduce interference.
RGB lighting not working or incorrect	Ensure Logitech G HUB software is installed and up to date. Check lighting settings within G HUB. Try resetting the lighting profile.
Keys not registering or double-typing	Clean under the affected keycap using compressed air. Ensure Logitech G HUB is updated. Try connecting the keyboard via wired USB to rule out wireless interference.
Software (G HUB) not detecting keyboard	Restart your computer. Reinstall Logitech G HUB. Ensure the keyboard's firmware is up to date via G HUB.

SPECIFICATIONS

Feature	Detail
Model Number	920-012127
Product Dimensions	5.91"L x 13.86"W x 1.34"H (15 x 35.2 x 3.4 cm)
Item Weight	5.3 ounces (150.3 grams)
Connectivity Technology	LIGHTSPEED Wireless (RF), Bluetooth, USB-C Wired
Keyboard Switches	GX Brown Tactile

Feature	Detail
Keycaps	Dual-shot PBT
Backlighting	LIGHTSYNC RGB (Per-key customizable)
Battery Type	1 Lithium Polymer battery (included)
Compatible Devices	Gaming Console, PC
Recommended Uses	Gaming, Office
Special Features	Portable, Rechargeable, Wireless, Media Controls, Volume Roller, Game Mode

WARRANTY AND SUPPORT

For detailed warranty information, technical support, and additional resources, please visit the official Logitech G support website. You can find FAQs, driver downloads, and contact information for customer service there.
Official Logitech G Support: support.logitech.com

© 2023 Logitech G. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BQB5H6NQ>

More documents and user manuals: <https://manuals.plus/>