

SOKANY SK-8012

SOKANY SK-8012 8-Liter Digital Touch Screen Air Fryer User Manual

Model: SK-8012

1. INTRODUCTION

Thank you for choosing the SOKANY SK-8012 Digital Touch Screen Air Fryer. This appliance is designed to provide a healthier way to cook your favorite foods, using rapid air circulation technology to fry, roast, grill, and bake with little to no oil. Please read this manual thoroughly before operating the appliance and retain it for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.

- **Read all instructions:** Familiarize yourself with the appliance's features and operation before use.
- **Hot surfaces:** The appliance surfaces become hot during use. Do not touch hot surfaces. Use handles or knobs.
- **Electrical safety:** Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting. Do not immerse the cord, plug, or appliance in water or other liquid.
- **Children and supervision:** Close supervision is necessary when any appliance is used by or near children.
- **Ventilation:** Do not block any ventilation openings. Place the appliance at least 10 cm away from walls or other objects to ensure proper air circulation.
- **Power cord:** Do not let the power cord hang over the edge of a table or counter, or touch hot surfaces.
- **Maintenance:** Do not attempt to repair the appliance yourself. Contact qualified service personnel for examination, repair, or adjustment.
- **Intended use:** Use the appliance only for its intended household purpose.

3. PRODUCT OVERVIEW

The SOKANY SK-8012 Air Fryer features a sleek design with a digital touch screen for easy operation. It includes a removable basket for convenient food preparation and cleaning.



Figure 1: SOKANY SK-8012 Air Fryer showing overall dimensions (53cm Depth, 35cm Width, 35cm Height).

Components:

- **Main Unit:** Houses the heating element and fan.
- **Frying Basket:** Removable, non-stick coated basket for holding food.
- **Handle:** For safely removing and inserting the frying basket.
- **Digital Touch Screen Control Panel:** For setting temperature, time, and selecting cooking presets.
- **Air Inlet:** Located on the top of the appliance.
- **Air Outlet:** Located at the rear of the appliance for hot air exhaust.

4. SETUP AND FIRST USE

1. **Unpack:** Carefully remove the air fryer and all packaging materials.
2. **Clean:** Wipe the exterior of the appliance with a damp cloth. Wash the frying basket and any removable accessories with hot water, dish soap, and a non-abrasive sponge. Rinse thoroughly and dry completely.
3. **Placement:** Place the air fryer on a stable, heat-resistant, and level surface. Ensure there is at least 10 cm of free space behind and above the appliance for proper ventilation.
4. **Power Connection:** Plug the power cord into a grounded wall outlet (220V).
5. **Initial Run (Optional):** For the first use, it is recommended to run the air fryer empty for about 10-15 minutes at 180°C (350°F) to eliminate any manufacturing odors. A slight smell or smoke may occur, which is normal. Ensure good ventilation during this process.

5. OPERATING INSTRUCTIONS

The SOKANY SK-8012 Air Fryer features a digital touch screen for intuitive control.

Basic Operation:

1. **Prepare Food:** Place the ingredients you wish to cook into the frying basket. Do not overfill the basket to ensure even cooking.
2. **Insert Basket:** Slide the frying basket back into the main unit until it clicks securely into place.
3. **Power On:** Plug the appliance into a power outlet. The digital display will illuminate.
4. **Set Temperature and Time:** Use the digital touch screen to adjust the desired cooking temperature (with temperature control feature) and time. Many models offer preset functions for common foods.
5. **Start Cooking:** Press the start button to begin the cooking process. The air fryer will automatically preheat if necessary.
6. **Shake/Flip (Optional):** For some foods, it is recommended to shake or flip the ingredients halfway through the cooking time to ensure even browning. Carefully pull out the basket using the handle, shake, and reinsert.
7. **Cooking Completion:** The air fryer will beep when the set cooking time has elapsed. Carefully pull out the basket and check if the food is cooked to your preference.
8. **Serve:** Remove the cooked food from the basket using non-metal utensils. Be cautious of hot oil or food residue.

Recommended Uses:

- **Reheating:** Quickly warm up leftovers.
- **Roasting:** Achieve crispy results for vegetables and meats.
- **Dehydrating:** Prepare dried fruits or jerky (check specific model capabilities for low-temperature settings).
- **Baking:** Bake small cakes, muffins, or pastries.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

1. **Unplug and Cool:** Always unplug the air fryer from the power outlet and allow it to cool down completely before cleaning.
2. **Clean Basket and Pan:** The frying basket and pan have a non-stick coating. Wash them with hot water, dish soap, and a non-abrasive sponge. For stubborn food residues, soak them in hot water for about 10 minutes before cleaning.
3. **Exterior Cleaning:** Wipe the exterior of the air fryer with a damp cloth. Do not use harsh abrasive cleaners or scouring pads, as they can damage the surface.
4. **Interior Cleaning:** Clean the interior of the appliance with a damp cloth. If necessary, use a soft brush to remove food residues from the heating element.

5. **Dishwasher Safety:** The frying basket and pan are **NOT dishwasher safe**. Hand wash only to preserve the non-stick coating.
6. **Storage:** Ensure all parts are clean and dry before storing the appliance in a cool, dry place.

7. TROUBLESHOOTING

If you encounter issues with your SOKANY SK-8012 Air Fryer, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance is not plugged in. Power outlet is not working.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker.
Food is not cooked evenly.	Basket is overcrowded. Food not shaken/flipped.	Cook food in smaller batches. Shake or flip ingredients halfway through cooking.
White smoke comes from the appliance.	Greasy residues from previous use. Cooking fatty ingredients.	Clean the basket and interior thoroughly after each use. For fatty foods, add a small amount of water to the bottom of the pan to prevent smoke.
Food is not crispy.	Too much moisture in food. Not enough oil (if required).	Pat food dry before cooking. Lightly brush or spray with oil for extra crispiness.

8. SPECIFICATIONS

Detailed technical specifications for the SOKANY SK-8012 Air Fryer.

Feature	Detail
Model Number	SK-8012
Brand	SOKANY
Capacity	8 Liters
Power Output	1500 Watts
Voltage	220 Volts
Control Method	Digital Touch Screen
Exterior Material	Aluminum
Interior Material	Stainless Steel
Non-stick Coating	Yes
Dishwasher Safe	No (for basket/pan)
Dimensions (D x W x H)	53 cm x 35 cm x 35 cm
Item Weight	6 Kilograms

Feature	Detail
Special Feature	Temperature Control
Recommended Uses	Reheating, Roasting, Dehydrating, Baking

9. WARRANTY AND SUPPORT

The SOKANY SK-8012 Air Fryer comes with an international warranty. For specific warranty terms and conditions, please refer to the warranty card included with your product or contact your local SOKANY distributor.

For technical support, service, or spare parts, please visit the official SOKANY website or contact their customer service department. Keep your purchase receipt as proof of purchase for warranty claims.

SOKANY Official Website: [Visit SOKANY Store on Amazon](#)

© 2023 SOKANY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question