

TOPCHARGEUR AP880, AP880K

TOPCHARGEUR 27V Power Adapter Instruction Manual

Model: AP880, AP880K

INTRODUCTION

This manual provides instructions for the safe and effective use of your TOPCHARGEUR 27V Power Adapter, designed specifically for Akai AP880 and AP880K stick vacuum cleaners. Please read this manual thoroughly before use and retain it for future reference to ensure proper operation and longevity of your device.

SETUP

The TOPCHARGEUR 27V Power Adapter is designed for use with Akai AP880 and AP880K vacuum cleaners. Ensure the vacuum cleaner is turned off before connecting the power adapter.

1. **Connect the Adapter to the Vacuum Cleaner:** Connect the adapter's output plug to the charging port of your Akai vacuum cleaner. Ensure a firm connection.
2. **Connect to Power Source:**
 - For AC power, plug the adapter into a standard 100-240V AC, 50-60Hz wall outlet.
 - For DC power, the adapter supports 12V-24V DC input. Ensure the DC source matches these specifications. The polarity is positive (+) at the center and negative (-) on the periphery.



Image: The TOPCHARGEUR 27V Power Adapter. This image shows the compact design of the power adapter, including its cable and plug, ready for connection to a power source and a compatible Akai vacuum cleaner.

OPERATING

Once connected, the adapter will begin charging your Akai vacuum cleaner. Refer to your vacuum cleaner's manual for specific charging indicators, such as LED lights, which typically show charging status.

- **Safety Features:** The adapter features built-in safety protections against overvoltage, overheating, short-circuiting, and overloading to ensure safe operation and protect both the adapter and your vacuum cleaner.
- **Cable Length:** The cable length is approximately 120 cm, providing adequate reach and flexibility during charging.

MAINTENANCE

Proper maintenance ensures the longevity and safe operation of your power adapter.

- **Cleaning:** Keep the power adapter clean and dry. Use a soft, dry cloth to wipe off any dust or dirt. Avoid using liquid cleaners or abrasive materials.
- **Storage:** Store the adapter in a cool, dry place when not in use. Avoid exposing it to moisture, direct sunlight, or extreme temperatures.
- **Handling:** Do not attempt to open or repair the adapter. Tampering with the device can void the warranty and pose safety risks. Refer to qualified service personnel for any issues.
- **Cable Care:** Avoid bending or crimping the cable excessively, as this can damage the internal wires.

TROUBLESHOOTING

If you encounter issues with your power adapter, please refer to the following common solutions:

- **Vacuum Cleaner Not Charging:**
 - Ensure the adapter is securely plugged into both the power source and the vacuum cleaner's charging port.

- Verify the power outlet is functional by testing it with another device.
 - Check for any visible damage to the adapter's cable or plug. If damaged, discontinue use and replace.
 - Confirm the vacuum cleaner is compatible with this 27V adapter (Akai AP880, AP880K).
- **Adapter Feels Excessively Hot:** If the adapter feels unusually hot to the touch, disconnect it immediately from the power source and the vacuum cleaner. Contact support if the issue persists after cooling down.
- **No Power Indicator:** If your vacuum cleaner has a charging indicator and it does not light up, recheck all connections and power sources.

SPECIFICATIONS

Brand	TOPCHARGEUR
Manufacturer	TOP CHARGEUR
Input (AC)	100-240V AC, 50-60Hz
Input (DC)	12V-24V DC, 50-60Hz
Output	27V
Polarity (DC)	Positive (+) center, Negative (-) periphery
Cable Length	Approximately 120 cm
Safety Features	Overvoltage protection, overheating protection, short-circuit protection, overload protection
Certifications	CE, ROHS
Dimensions	12 x 7 x 4.2 cm
Weight	99 grams
ASIN	B0BQCDZB8F

WARRANTY INFORMATION

Specific warranty terms for this TOPCHARGEUR product may vary. Please refer to your purchase documentation, the product packaging, or contact the seller directly for detailed warranty information and coverage.

SUPPORT

For technical assistance, troubleshooting beyond this manual, or any product-related inquiries, please contact the seller or manufacturer directly. Refer to your purchase receipt or order details for seller contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question