

[Manuals.plus](#) /

› [VOXON](#) /

› VOXON Door/Window Alarm (Model VX-WA802) Instruction Manual

VOXON VX-WA802

VOXON Door/Window Alarm Instruction Manual

MODEL: VX-WA802

Introduction

The VOXON Door/Window Alarm system provides enhanced security for your home, children, and belongings. This compact and easy-to-install device detects movement in doors or windows, triggering a loud 100dB alarm or a chime to alert you. It is suitable for various applications, including home security, child safety, and monitoring access to areas like pools, garages, sheds, and caravans.

Product Overview

Each VOXON Door/Window Alarm unit consists of two main components: the alarm unit and a magnetic sensor. These components work together to detect when a door or window is opened.

Compact and Portable



Figure 1: Components of the VOXON Door/Window Alarm, including the main alarm unit with its button and switch, and the separate magnetic sensor. The image also points out the battery compartment and mounting plate.

The alarm unit features an easy-to-use switch for selecting between OFF, CHIME, and ALARM modes. Its compact design ensures it blends seamlessly with your home decor.

Easy to Install

No wiring needed! No screws needed!



Figure 2: Multi-purpose application of the VOXON alarm on different entry points like pet doors, windows, drawers, and store entrances.

Setup

The VOXON Door/Window Alarm is designed for simple, tool-free installation using adhesive tapes. No wiring is required.

1. **Prepare the Surface:** Ensure the mounting surface (door, window frame, etc.) is clean and dry for optimal adhesive performance.
2. **Attach Adhesive:** Peel the backing from the adhesive tape and firmly attach it to the back of both the main alarm unit and the magnetic sensor.
3. **Position the Units:** Mount the main alarm unit and the magnetic sensor on the door/window and its frame. Ensure the arrows on both components are aligned and the gap between them does not exceed 0.78 inches (2 cm) when the door/window is closed.
4. **Test Installation:** Once installed, slide the switch to 'CHIME' or 'ALARM' mode and open the door/window to verify the alarm triggers correctly.

Multi Purpose Application



Figure 3: Step-by-step installation process using self-adhesive backing.

Correct Installation Method

Align the arrows of the alarm and the magnetic stripe.



Figure 4: Correct installation requires aligning the arrows on both the alarm and magnetic strip, with a gap of less than 0.78 inches (2 cm).

Operating Instructions

The VOXON Door/Window Alarm offers three operating modes controlled by a simple switch:

- **OFF:** The alarm is deactivated. No sound will be produced when the sensor is separated.
- **CHIME:** When the magnetic sensor separates from the main unit (e.g., a door opens), a pleasant chime sound will play. This is ideal for knowing when someone enters or exits without a full alarm.
- **ALARM:** When the magnetic sensor separates from the main unit, a loud 100dB siren will sound continuously until the door/window is closed. This mode is designed for security and immediate alerts.

Ensure the switch is set to the desired mode for your security needs. The alarm will trigger if the gap between the main unit and the magnetic sensor exceeds 0.78 inches (2 cm).



Figure 5: The alarm activates with a 100dB sound when the magnet separates by more than 0.78 inches.

Maintenance

The VOXON Door/Window Alarm is powered by four LR44 batteries (included). To ensure continuous operation, replace the batteries when the alarm sound becomes weak or if the unit fails to activate. To replace batteries, carefully open the battery compartment, remove the old batteries, and insert new LR44 batteries, ensuring correct polarity. Dispose of old batteries responsibly.

Troubleshooting

- **Alarm not triggering:**

- Check if the alarm is in 'OFF' mode. Slide the switch to 'CHIME' or 'ALARM'.
- Ensure the magnetic sensor and the main unit are correctly aligned with arrows facing each other, and the gap is less than 0.78 inches (2 cm) when closed.
- Replace the batteries if they are low or depleted.

- **Alarm is too loud for children:**The alarm is designed to be loud for security purposes. If used for child safety, be mindful of the volume and consider using the 'CHIME' mode if appropriate, or ensure children are not startled by the alarm.

Specifications

Brand	VOXON
Model Number	VX-WA802
Item Weight	3.52 ounces
Product Dimensions	2.17 x 1.77 x 1.38 inches
Power Source	Battery Powered
Battery Type	LR44 (4 required, included)
Noise Level	100 Decibels
Maximum Sensor Gap	0.78 Inches (2 cm)
Mounting Type	Self-Adhesive
Control Method	Touch (Switch)

Warranty and Support

VOXON provides a 36-month worry-free warranty for this product. For any questions or support, please contact our customer service. We are committed to ensuring your satisfaction and security.

Product Videos

VOXON Door Alarm Demo and Review

Your browser does not support the video tag.

This video provides a comprehensive demonstration and review of the VOXON Door/Window Alarm, showcasing its features and benefits for home security and child safety.

Check Out This Door/Window Alarm!!

Your browser does not support the video tag.

A detailed look at the VOXON Door/Window Alarm, highlighting its ease of use and effectiveness in various home environments.

Child Proof/Anti-Theft for Your House

Your browser does not support the video tag.

This video demonstrates how the VOXON Door/Window Alarm can be used for childproofing and as an anti-theft device, providing peace of mind for homeowners.

Loud Battery Powered Alarm!

Your browser does not support the video tag.

A short video showcasing the loud sound output of the battery-powered VOXON Door/Window Alarm, emphasizing its effectiveness as an alert system.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question