



Manuals.plus /

› **Just Play** /

› RUKUSfx Motion-Controlled Music Mixer User Manual

**Just Play 46809**

# RUKUSfx Motion-Controlled Music Mixer User Manual

Model: 46809

Brand: Just Play

## INTRODUCTION

The RUKUSfx Motion-Controlled Music Mixer is a hand-held device designed for creating and mixing music tracks using intuitive motion controls. It features pre-loaded music, sound effects, and the ability to upload custom audio, record vocals, and share performances. The built-in LED display enhances the interactive experience.

# RUKUSfx™



## Move. Mix. Create.

Image: RUKUSfx device with "Move. Mix. Create." branding.

### SAFETY INFORMATION

**WARNING: May contain small pieces. Not suitable for children under 3 years.**

Always supervise children during use. Keep the device away from water and extreme temperatures. Do not attempt to disassemble or modify the device.

### WHAT'S IN THE BOX

- 1 RUKUSfx hand-held music mixer with built-in speaker
- Headphone jack
- USB-C port
- 3 AAA batteries (included)

- Bonus silicone skin



Image: The RUKUSfx device and its packaging, highlighting included items.

## SETUP

### Battery Installation

The RUKUSfx requires 3 AAA batteries, which are included. Locate the battery compartment on the device, open it, insert the batteries according to the polarity indicators (+/-), and close the compartment securely.

### Initial Power On

Locate the power switch on the device. Slide the switch to the "ON" position to power on the RUKUSfx. The LED display will illuminate, indicating the device is ready for use.

## OPERATING INSTRUCTIONS

## Motion Controls

The RUKUSfx responds to four primary motion controls to manipulate music and sound effects:

- **PUNCH:** A forward punching motion.
- **SWIPE:** A horizontal sweeping motion.
- **TWIST:** A rotational wrist motion.
- **FLICK:** A quick upward or downward wrist movement.



Image: Visual representation of the four motion controls: Punch, Swipe, Twist, and Flick.

## Music Tracks and Sound Effects

The device comes pre-loaded with 120 mixable music tracks and 80 sound effects. Use the motion controls to loop, mix, and remix these tracks and effects to create unique DJ-style mixes.

## Uploading Custom Music

The RUKUSfx features a USB-C port, allowing users to upload and mix their favorite songs from other musical artists. Connect the device to a computer using a USB-C cable (not specified if included, assume user provides) and follow the on-screen instructions to transfer audio files.



Image: Side view of the RUKUSfx device, highlighting the USB-C port for connectivity.

## Built-in Microphone and Recording

Utilize the built-in microphone to capture extra vocal tracks or sound effects. These can then be integrated into your RUKUSfx remixes. The device also supports recording your performances, which can then be shared with friends on social media.

## LED Display

The RUKUSfx features a built-in LED display that pulses and changes colors in sync with your movements and the music, providing a dynamic visual experience.



Image: The RUKUSfx device showcasing its vibrant LED light display.

## Official Product Video

Your browser does not support the video tag.

Video: Official product demonstration of the RUKUSfx Motion-Controlled Music Mixer, showcasing its features and motion controls.

## MAINTENANCE

### Cleaning

To clean the RUKUSfx, wipe it with a soft, dry cloth. Do not use abrasive cleaners or immerse the device in water.

### Storage


When not in use, store the RUKUSfx in a cool, dry place, away from direct sunlight and extreme temperatures. Remove batteries if storing for extended periods to prevent leakage.

## TROUBLESHOOTING

- **Device not powering on:** Ensure batteries are correctly installed and fully charged. Replace batteries if necessary.
- **No sound:** Check the volume level. Ensure no headphones are plugged in if you intend to use the built-in speaker.
- **Motion controls not responding:** Ensure you are performing the motions clearly and with sufficient movement. Refer to the "Operating Instructions" section for proper technique.
- **Unable to upload music:** Verify the USB-C cable connection and ensure your computer recognizes the device. Check the file format of the music you are trying to upload.

## SPECIFICATIONS

<b>Product Dimensions</b>	8.5 x 3 x 7 inches
<b>Item Weight</b>	11.7 ounces (0.33 Kilograms)
<b>Model Number</b>	46809
<b>Manufacturer Recommended Age</b>	6 - 18 years
<b>Batteries</b>	3 AAA batteries (included)
<b>Connectivity Technology</b>	USB
<b>Power Source</b>	Battery Powered
<b>Number of Channels</b>	2

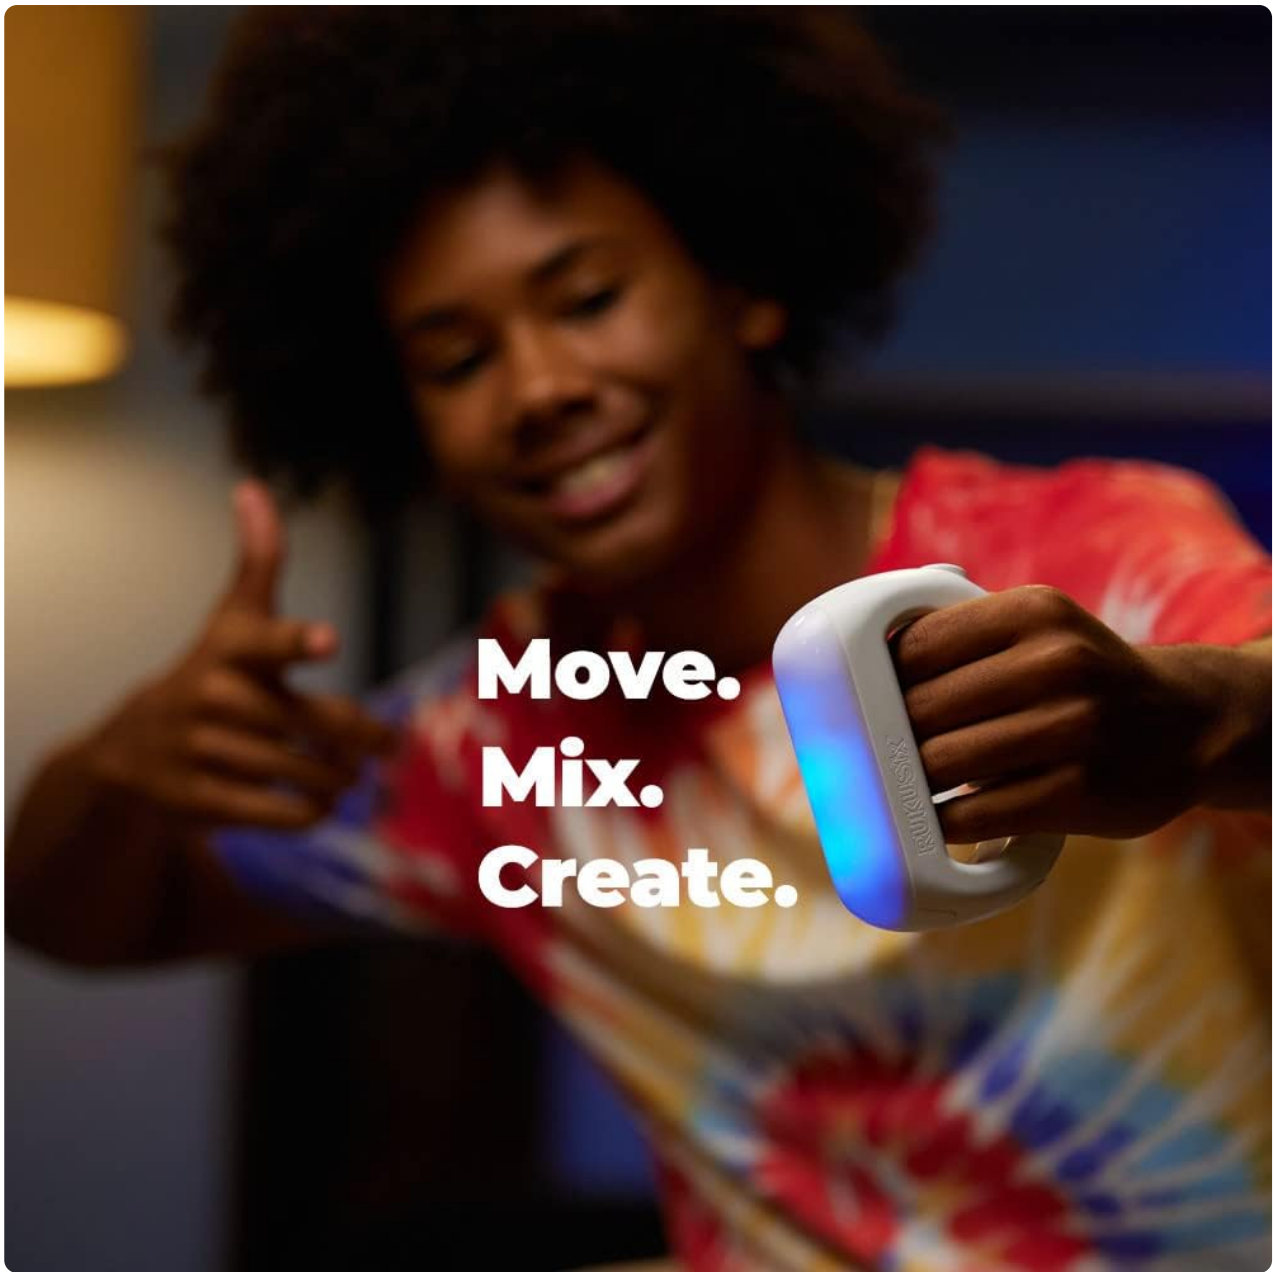

**Move.  
Mix.  
Create.**

Image: The RUKUSfx device illustrating its approximate 5-inch height.

## **WARRANTY AND SUPPORT**

For warranty information and customer support, please refer to the contact details provided on the product packaging or visit the official Just Play website. Keep your purchase receipt as proof of purchase.

Official Website: [www.rukusfx.com](http://www.rukusfx.com)