

[manuals.plus](#) /

- › [VINABTY](#) /
- › [VINABTY RC45157 CT-8564 Replacement Remote Control User Manual](#)

VINABTY RC45157 CT-8564

VINABTY RC45157 CT-8564 Replacement Remote Control User Manual

Model: RC45157 CT-8564

INTRODUCTION

This manual provides instructions for the VINABTY RC45157 CT-8564 replacement remote control. This remote is designed to be a direct replacement for original remote controls of compatible JVC Android TV models (LT-39VAH3055, LT-42VAF3055, LT-43VAF3055), Salora Smart32 TV, and Toshiba CT-8564. It operates using infrared technology and requires no programming for immediate use after battery installation.

SETUP

1. Battery Installation

The remote control requires two AAA alkaline batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image: Back view of the remote control with the battery compartment open, illustrating the correct placement for two AAA batteries.

2. Initial Use

This remote control is pre-programmed and does not require any setup or pairing with your TV. Once batteries are installed, it is ready for immediate use. Simply point the remote control towards your television's infrared receiver.

OPERATING INSTRUCTIONS

The VINABTY RC45157 CT-8564 remote control features a standard layout for easy navigation and control of your compatible television. Below is a general overview of the main buttons and their functions:





Image: Front view of the remote control, displaying the full button layout.

- **Power Button (●)**: Turns the TV on or off.
- **Number Buttons (0-9)**: Directly select channels or input numerical data.

- **Volume Up/Down (+/-):** Adjusts the sound volume.
- **Channel Up/Down (P ▲/P ▼):** Changes TV channels sequentially.
- **Mute Button:** Mutes or unmutes the TV sound.
- **Navigation Pad (Up, Down, Left, Right, OK):** Used to navigate menus and confirm selections.
- **Home Button:** Returns to the TV's main home screen or smart TV interface.
- **Menu Button:** Accesses the TV's main menu.
- **Exit Button:** Exits current menu or application.
- **Dedicated App Buttons (Netflix, YouTube, Google Play, Prime Video):** Provides quick access to these streaming applications.
- **Color Buttons (Red, Green, Yellow, Blue):** Functions vary depending on the TV model and current on-screen content.
- **Media Control Buttons (Play, Pause, Fast Forward, Rewind, Stop):** Controls media playback.
- **Input/Source Button:** Changes the input source (HDMI, AV, etc.).

For specific functions related to your TV model, refer to your television's user manual.

MAINTENANCE

Cleaning

To maintain the remote control's appearance and functionality:

- Wipe the surface with a soft, dry cloth.
- Avoid using liquid cleaners, abrasive pads, or chemical solvents, as these can damage the remote's finish or internal components.

Battery Replacement

Replace the batteries when the remote control's response becomes inconsistent, the range decreases, or it stops functioning entirely. Always replace both batteries at the same time with new AAA alkaline batteries. Ensure correct polarity during installation.

TROUBLESHOOTING

- **Remote Control Not Responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new AAA alkaline batteries.
 - Ensure there are no obstructions between the remote control and the TV's infrared receiver.
 - Confirm that you are pointing the remote directly at the TV.
- **Limited Operating Range:**
 - This typically indicates low battery power. Replace the batteries.
 - Ensure no strong light sources (like direct sunlight) are interfering with the TV's IR receiver.
- **Specific Buttons Not Working:**
 - If only certain buttons are unresponsive, try replacing the batteries.
 - Ensure the remote is compatible with your specific TV model. While this remote is a replacement, some advanced functions might vary slightly depending on the original remote's capabilities.

SPECIFICATIONS

Model	RC45157 CT-8564
Dimensions (L x W x H)	21 x 4.5 x 2 cm
Weight	70 grams
Battery Type	2 x AAA Alkaline (not included)
Connectivity Technology	Infrared (IR)
Number of Buttons	30
Maximum Operating Range	10 meters
Compatible Devices	JVC Android TV (LT-39VAH3055, LT-42VAF3055, LT-43VAF3055), Salora Smart32 TV, Toshiba CT-8564
Special Features	Ergonomic design, No programming required

WARRANTY AND SUPPORT

Warranty Information

This VINABTY remote control is covered by a 90-day warranty from the date of purchase. This warranty covers manufacturing defects and ensures the product functions as described under normal use.

Customer Support

If you encounter any issues with your remote control or have questions not addressed in this manual, please contact the seller or VINABTY customer support for assistance. Provide your purchase details and a clear description of the problem to facilitate a quick resolution.