



[Manuals.plus](#) /

› [Lafocuse](#) /

› Lafocuse Moving Gears Clock (Model ZH0100) Instruction Manual

## Lafocuse ZH0100

# Lafocuse Moving Gears Clock (Model ZH0100) Instruction Manual

Model: ZH0100

## INTRODUCTION

Thank you for choosing the Lafocuse Moving Gears Clock. This manual provides essential information for the proper setup, operation, and maintenance of your clock. Please read these instructions carefully before use and retain them for future reference.



Image: The Lafocuse Moving Gears Clock displayed as a desk clock on a wooden surface.

## KEY FEATURES

- **2-in-1 Functionality:** Designed for use as both a wall-mounted clock and a table/desk clock with a detachable base.
- **Real Moving Gears:** Features gold-colored gears that rotate simultaneously in clockwise and anti-clockwise directions, creating a dynamic visual element.
- **Vintage Design:** Combines a black MDF frame, Roman numerals, a wood grain dial, and gold metal clock hands for a rustic, steampunk-inspired aesthetic.
- **Battery Operated:** Separate battery compartments for clock hands and moving gears allow for independent operation.

## SETUP INSTRUCTIONS

### 1. Unpacking and Placement

- Carefully remove the clock and its components from the packaging.
- Decide whether to use the clock as a desk clock or a wall clock.



Image: The clock with its detachable wooden base, illustrating its versatility.

## 2. Attaching/Detaching the Base (for Desk/Wall Use)

- To use as a desk clock, ensure the wooden base is securely attached to the bottom of the clock frame.

- To use as a wall clock, gently detach the base. The clock features a hanging slot on the back for wall mounting.



Image: A close-up view of the clock's base, showing how it connects to the main clock body.

### 3. Battery Installation

The clock requires 3 AA batteries (not provided): 2 for the moving gears and 1 for the clock hands.

1. Locate the two battery compartments on the back of the clock.
2. For the **moving gears** (compartment labeled for movement), insert 2 AA batteries, ensuring the (+) and (-) terminals are correctly aligned.
3. For the **clock hands** (compartment labeled for timekeeping), insert 1 AA battery, ensuring correct polarity.



Image: The rear view of the clock, highlighting the two battery compartments and the hanging mechanism for wall mounting. One compartment is for the clock movement, and the other is for the moving gears.

#### 4. Setting the Time

- After installing the battery for the clock hands, locate the time setting knob on the back of the clock mechanism.
- Turn the knob to adjust the clock hands to the correct time.

Video: An official product video demonstrating the features of the Lafocuse Moving Gears Clock, including its appearance as a desk and wall clock, and a close-up of the moving gears and battery compartments. This video is provided by the seller, Quarebest.

## OPERATING THE CLOCK

Once batteries are installed and the time is set, your Lafocuse Moving Gears Clock will begin operating.

- The clock hands will move continuously to display the current time.
- The decorative gears will rotate, providing a subtle visual movement. This movement is designed to be quiet and relaxing.
- The clock hands and gears operate independently, meaning you can choose to have only the clock hands moving (by not installing batteries for the gears) or both.



Image: A detailed view of the intricate gold-colored moving gears and clock hands on the wooden dial.

## MAINTENANCE

To ensure the longevity and optimal performance of your clock, follow these maintenance guidelines:

- **Cleaning:** Wipe the clock surface with a soft, dry cloth. Avoid using abrasive cleaners or solvents, as these can damage the finish.
- **Battery Replacement:** Replace batteries promptly when the clock hands or gears stop moving. Always use fresh, high-quality AA batteries.
- **Environment:** Place the clock in a dry environment, away from direct sunlight, extreme temperatures, and high humidity to prevent damage to the wood and internal components.
- **Handling:** Handle the clock with care. Avoid dropping it or subjecting it to strong impacts.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock hands are not moving.	Dead or incorrectly installed AA battery for clock hands. Time setting knob not properly engaged.	Replace the AA battery in the clock hands compartment, ensuring correct polarity. Gently adjust the time setting knob to ensure it engages the mechanism.
Moving gears are not rotating.	Dead or incorrectly installed AA batteries for gears.	Replace the 2 AA batteries in the moving gears compartment, ensuring correct polarity.
Clock makes unusual noise.	Internal mechanism obstruction or damage.	Ensure the clock is on a stable, level surface. If the noise persists, contact customer support.

## SPECIFICATIONS

Feature	Detail
Brand	Lafocuse
Model Number	ZH0100
Product Dimensions	10"W x 12"H (Diameter: 10" / 25 cm)
Color	Black and Gold
Material Type	Wood
Display Type	Analog
Watch Movement	Quartz
Power Source	Battery Powered
Number of Batteries Required	3 AA batteries (2 for gears, 1 for clock hands)
Indoor/Outdoor Usage	Indoor
Mounting Type	Desk Clock, Wall Mount

## WARRANTY INFORMATION

This Lafocuse Moving Gears Clock comes with a **3-Year Quality Assurance**. If the clock experiences any quality problems within 3 years from the date of purchase, please contact our customer support for a satisfactory solution.

## CUSTOMER SUPPORT

For any questions, concerns, or assistance with your Lafocuse Moving Gears Clock, please contact our customer support team:

- **Email:** [support@lafocuse.com](mailto:support@lafocuse.com)
- **Website:** Visit the [Lafocuse Store on Amazon](#) for more information and contact options.

Please have your model number (ZH0100) and purchase date ready when contacting support.

