

[manuals.plus](#) /› [Homdox](#) /› [Homdox H5473 Portable Full-Automatic Washing Machine User Manual](#)

Homdox H5473

Homdox H5473 Portable Full-Automatic Washing Machine User Manual

Model: H5473

1. PRODUCT OVERVIEW

The Homdox H5473 is a portable, full-automatic washing machine designed for convenience and efficiency in various living spaces such as apartments, RVs, dorms, and homes. It features a 1.92 cubic feet (17.8 lbs) capacity tub, offering a comprehensive washing and spin-drying solution in a single unit.

Key features include 10 washing programs, 8 water level selections, and an intuitive LED digital display panel for easy operation. The machine is equipped with a built-in drain pump and comes with necessary accessories for quick setup.



Commonly used

Easy to wash regular clothes



Soak Wash

Powerful decontamination of dirty clothes



Surf wash

Underwear, shirt gentle wash care



Quick Wash

Quick wash for small laundry

Customized Washing Programs: Classification Washing are more intimate

Different washing programs can be selected according to the type of clothes and the degree of soiling, to meet the various washing and care needs of the family



Image 1.1: Front view of the Homdox H5473 Portable Full-Automatic Washing Machine.

Package Contents:

- 1 x Homdox H5473 Portable Full-Automatic Washing Machine
- 1 x Drain Hose (built-in)
- 1 x Inlet Hose
- 1 x Faucet Adapter (US Standard size)
- 1 x Bottom Cover
- 1 x Lint Filter
- 1 x User Manual

2. SAFETY INFORMATION

Please read all instructions carefully before using the appliance to prevent injury and property damage. Keep this manual for future reference.

- **Electrical Safety:** Ensure the power supply matches the voltage specified on the rating label. Do not use

extension cords or adapters. Always plug into a grounded outlet. Do not operate with a damaged power cord or plug.

- **Water Connections:** Connect the inlet hose securely to a water source and the machine. Ensure the drain hose is properly positioned to prevent leaks.
- **Placement:** Place the machine on a firm, level surface to prevent excessive vibration and noise. Maintain adequate clearance around the machine for ventilation.
- **Child Safety:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- **Flammable Materials:** Do not wash items that have been cleaned in, washed in, soaked in, or spotted with combustible or explosive substances such as gasoline, kerosene, or paint thinner.
- **Maintenance:** Always unplug the machine before cleaning or performing any maintenance.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove the washing machine from its packaging. Inspect for any shipping damage. Retain packaging materials for future transport if needed.

3.2 Placement

Place the washing machine on a stable, level surface. Ensure there is enough space around the unit for proper ventilation and access. The adjustable feet at the bottom of the machine can be used to level the unit if the floor is uneven.

3.3 Water Inlet Connection

1. Connect one end of the inlet hose to the water inlet port on the back of the washing machine. Tighten by hand.
2. Attach the faucet adapter to your standard US faucet.
3. Connect the other end of the inlet hose to the faucet adapter. Ensure all connections are secure to prevent leaks.

3.4 Drain Hose Setup

The drain hose is built into the machine. Position the drain hose into a sink, bathtub, or a designated drain pipe. Ensure the hose is not kinked or blocked, allowing for proper water drainage. The machine features a built-in drain pump for efficient water removal.

OUR Homodox PORTABLE WASHER:



HAND-WASH BIONIC

Reduce wear and tear
Deep Clean Laundry



ONE-TOUCH BARREL AIR-DRYING

Avoid moisture
Create a healthy washing environment

OTHERS WASHER MACHINE :



TRADITIONAL PULSATOR

Rough & easy to wear and tear
Clothes deformed and damaged



NO AIR DRYING FUNCTION

The clothes in the tub are damp
Secondary pollution

Image 3.1: Rear view of the washing machine, highlighting the built-in drain pump and motor.

Barrel self-cleaning: Deep protection of the washing environment

Bucket self-cleaning + bucket drying double escort to clean the inner bucket, providing a healthy washing environment for clothes and preventing secondary pollution of clothes



Fast drying and softer care

There are many small cube protrusions in the barrel, which can gently massage the clothes. And the drainage holes are hidden in the recesses, it can quick dehydration while protecting clothes from friction



Image 3.2: Close-up of the inlet hose connection and drain hose setup.

4. OPERATING INSTRUCTIONS

4.1 Control Panel Overview

The washing machine features an LED digital display panel with various buttons for program selection, water level, delay start, and child lock functions.



Image 4.1: Detailed view of the control panel and LED display.

4.2 Basic Operation Steps

1. **Load Laundry:** Open the top lid and place clothes loosely into the stainless steel inner tub. Do not overload the machine.
2. **Add Detergent:** Add the appropriate amount of detergent to the dispenser.
3. **Power On:** Press the 'Power ON/OFF' button to turn on the machine.
4. **Select Water Level:** Use the 'Water Level/Rotation' button to choose one of the 8 available water levels based on your laundry load.
5. **Select Program:** Press the 'Program/Delay' button to cycle through the 10 washing programs: Standard, Soft, Quick wash, Heavy duty, Soak wash, Wash only, Spin only, Tub clean, Tub air dry, Water recycle. Select the program suitable for your clothes.
6. **Start Cycle:** Press the 'Start/Pause' button to begin the washing cycle.

4.3 Washing Programs

The machine offers various programs to suit different fabric types and soil levels:

- **Standard:** For everyday regular clothes.
- **Soft:** For delicate items.
- **Quick Wash:** A 15-minute cycle for small, lightly soiled loads.
- **Heavy Duty:** For heavily soiled or bulky items.
- **Soak Wash:** Includes a soaking period for tough stains.
- **Wash Only:** Performs only the wash cycle.
- **Spin Only:** Performs only the spin-dry cycle.
- **Tub Clean:** For cleaning the washing machine tub.
- **Tub Air Dry:** Helps to air dry the tub and prevent moisture buildup.
- **Water Recycle:** (Consult manual for specific use, typically for reusing water for subsequent loads if applicable).

2-in-1 Washer and Dryer Combo

Get rid of small space troubles



Image 4.2: Illustration of customized washing programs.

4.4 Smart Delay Function

The machine features a 2-24 hour smart delay cleaning function. To use, select your desired program and water level, then press the 'Program/Delay' button repeatedly to set the delay time before pressing 'Start/Pause'. This allows you to preset the washing start time.

4.5 Child Lock Function

To activate the child lock, press and hold the designated child lock button (refer to control panel diagram) for a few seconds. Once activated, all buttons will be locked to prevent accidental operation by children. Repeat the action to deactivate.

4.6 Automatic Imbalance Detection (AUD)

During the spin cycle, if the laundry inside the tub is unevenly distributed, the machine's Automatic Imbalance Detection (AUD) system will automatically attempt to adjust the load. If the vibration exceeds a safe level, the machine will pause and redistribute the load to minimize vibration and ensure stable operation.

Barrel self-cleaning: Deep protection of the washing environment

Bucket self-cleaning + bucket drying double escort to clean the inner bucket, providing a healthy washing environment for clothes and preventing secondary pollution of clothes



Fast drying and softer care

There are many small cube protrusions in the barrel, which can gently massage the clothes. And the drainage holes are hidden in the recesses, it can quick dehydration while protecting clothes from friction



Image 4.3: Control panel detail showing Soak Wash Timer settings.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your washing machine. Always unplug the machine before cleaning or maintenance.

5.1 Cleaning the Lint Filter

The machine is equipped with a lint filter to collect lint and debris during washing. Regularly remove and clean the lint filter to maintain washing efficiency. The lint filter is typically located inside the tub, often integrated into the pulsator or tub wall.

Barrel self-cleaning: Deep protection of the washing environment

Bucket self-cleaning + bucket drying double escort to clean the inner bucket, providing a healthy washing environment for clothes and preventing secondary pollution of clothes



Fast drying and softer care

There are many small cube protrusions in the barrel, which can gently massage the clothes. And the drainage holes are hidden in the recesses, it can quick dehydration while protecting clothes from friction



Image 5.1: View of the lint filter inside the washing machine tub.

5.2 Tub Self-Clean Function

Utilize the 'Tub Clean' program periodically to clean the inner tub and prevent mold or odor buildup. This helps maintain a hygienic washing environment.

5.3 Exterior Cleaning

Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents that could damage the finish.

6. TROUBLESHOOTING

If you encounter issues with your washing machine, refer to the following common problems and solutions:

| Problem | Possible Cause | Solution |
|---------------------------|----------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------|
| Machine does not start | No power supply; Lid not closed properly; 'Start/Pause' not pressed. | Check power connection; Ensure lid is fully closed; Press 'Start/Pause'. |
| No water inlet | Water tap closed; Inlet hose kinked or blocked; Water pressure too low. | Open water tap; Straighten hose; Check water supply pressure. |
| No water drainage | Drain hose kinked or blocked; Drain pump filter clogged. | Straighten drain hose; Clean drain pump filter (if accessible, refer to specific manual section). |
| Excessive vibration/noise | Machine not level; Laundry load unbalanced; Transit bolts not removed (if applicable). | Adjust leveling feet; Redistribute laundry evenly; Ensure transit bolts are removed during installation. |
| Water leakage | Loose hose connections; Damaged hose; Overfilling. | Tighten all hose connections; Replace damaged hoses; Do not exceed maximum water level. |

If the problem persists after attempting these solutions, please contact customer service for assistance.

7. SPECIFICATIONS

| Feature | Specification |
|--------------------------------|---------------------------------------------------------------------------------|
| Brand | Homdox |
| Model Number | H5473 |
| Product Dimensions (D x W x H) | 19.1" x 19.1" x 32.8" |
| Capacity | 1.92 Cubic Feet (approx. 17.8 lbs) |
| Max Spin Speed | 1300 RPM |
| Standard Cycles | 10 |
| Water Level Selections | 8 |
| Control Type | Push Button |
| Operation Mode | Fully Automatic |
| Access Location | Top Load |
| Color | Light Grey |
| Special Features | Drain Pump, LED Display, Child Lock, Delay Start, Automatic Imbalance Detection |

8. WARRANTY AND CUSTOMER SUPPORT

Homdox offers a **1-year limited service warranty** covering both labor and parts for this portable washing machine. This warranty applies from the date of purchase.

If you need to replace a defective unit, require technical support, or have any questions regarding the operation or maintenance of your Homdox H5473 washing machine, please reach out to our customer service team. Contact information can typically be found on the Homdox official website or through your purchase platform.