

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- › [Hisense](#) /
- › Hisense HW-G75C 7.5kg Automatic Washing Machine & 32A35G 32-inch HD LCD TV User Manual

Hisense HW-G75C, 32A35G

Hisense HW-G75C 7.5kg Automatic Washing Machine & 32A35G 32-inch HD LCD TV User Manual

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, installation, and maintenance of your Hisense HW-G75C 7.5kg Automatic Washing Machine and Hisense 32A35G 32-inch HD LCD TV. Please read this manual thoroughly before using your appliances and retain it for future reference.



This image displays the Hisense HW-G75C 7.5kg automatic washing machine in white, positioned next to the Hisense 32A35G 32-inch HD LCD television. The washing machine features a top-loading design with a control panel, while the TV shows a vibrant display with a remote control visible on the right.

Safety Information

- Always disconnect power before cleaning or performing maintenance.
- Do not operate appliances with damaged power cords or plugs.
- Keep children and pets away from operating appliances.
- Ensure proper ventilation for both appliances.

HISENSE HW-G75C 7.5KG AUTOMATIC WASHING MACHINE

Product Overview

The Hisense HW-G75C is a 7.5kg capacity automatic washing machine designed for efficient and convenient laundry care. It features a top-loading design with a durable glass top and a user-friendly control panel.



A detailed view of the Hisense HW-G75C 7.5kg automatic washing machine. The top-loading machine is white, with a clear glass lid and a user-friendly control panel featuring a digital display and various cycle selection buttons.

Setup and Installation

1. **Unpacking:** Carefully remove all packaging materials.
2. **Positioning:** Place the washing machine on a firm, level surface. Adjust the leveling feet to ensure stability.
3. **Water Connection:** Connect the inlet hoses to the hot and cold water taps and to the corresponding inlets on the machine. Ensure connections are tight to prevent leaks.
4. **Drain Hose:** Securely attach the drain hose to a suitable drain pipe or sink, ensuring it is not kinked.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet.

Operating Instructions

The HW-G75C features a simple and beautiful design with an intuitive control panel.



This image highlights the sleek and simple design of the Hisense HW-G75C washing machine's control panel. It features a digital timer display, buttons for water level, wash, rinse, spin, and various course selections, all under a durable glass top.

1. **Power On/Off:** Press the **Power** button to turn the machine on or off.
2. **Load Laundry:** Open the lid and load your clothes into the drum. Do not overload.
3. **Add Detergent:** Add the appropriate amount of detergent to the dispenser.
4. **Select Course:** Use the **Course** button to select your desired wash cycle. Available cycles include: Standard, Self-Wash, Blanket, Delicate, Quick, Dry, Tub Clean, Pre-Wash, Rinse, Spin, and Reservation.
5. **Adjust Settings:** You can adjust water level, wash time, rinse cycles, and spin speed if desired.
6. **Quick Wash:** For lightly soiled items or when you are in a hurry, select the Quick Wash cycle, which can complete a wash in approximately 9-10 minutes.

最短約9分

忙しい・お急ぎ時は、洗濯時間が短縮できます



A close-up of the Hisense HW-G75C washing machine's control panel, emphasizing the 'Shortest approx. 9 minutes' quick wash cycle. The panel includes options for standard, self-wash, blanket, delicate, quick, dry, tub clean, pre-wash, rinse, spin, and reservation, along with a child lock function.

7. **Child Lock:** To activate the child lock, press and hold the designated button (often indicated by a lock icon) for a few seconds.
8. **Start/Pause:** Press the **Start/Pause** button to begin or temporarily stop the wash cycle.

Maintenance

- **Cleaning the Tub:** Use the 'Tub Clean' cycle regularly to prevent mold and odors.
- **Filter Cleaning:** Clean the lint filter periodically to ensure efficient operation. Refer to the specific location in your machine's physical manual.
- **Exterior Cleaning:** Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners.

Specifications (HW-G75C)

- **Capacity:** 7.5 kg
- **Type:** Fully Automatic Top-Loading
- **Color:** White
- **Special Features:** High Quality, Slim Design, Quick Wash (approx. 9-10 minutes)
- **Top Material:** Glass

HISENSE 32A35G 32-INCH HD LCD TV

Product Overview

The Hisense 32A35G is a 32-inch HD LCD television featuring an ADS panel, double tuners, and support for external HDD recording. It offers a clear viewing experience with a 3-year warranty.



The Hisense 32A35G 32-inch HD LCD TV is shown from the front, displaying a promotional image featuring a person and text indicating 'HD', '3 Year Warranty', 'HDMI x 2', and 'W Tuner'. The TV has a slim bezel and a stable stand.

Setup and Installation

- Unpacking:** Remove the TV and accessories from the packaging.
- Stand Installation:** Attach the TV stand securely to the bottom of the television using the provided screws. Ensure it is stable.
- Antenna Connection:** Connect your terrestrial or satellite antenna cable to the appropriate input on the TV.
- External Devices:** Connect external devices such as Blu-ray players, game consoles, or sound systems using the HDMI ports (HDMI x 2).
- External HDD for Recording:** Connect a compatible external hard disk drive (HDD) to the USB port for recording TV programs.
- Power Connection:** Plug the power cord into a grounded electrical outlet.

Operating Instructions

- Power On/Off:** Press the **Power** button on the remote control or TV to turn it on or off.
- Initial Setup:** Follow the on-screen instructions for initial setup, including language, country, and channel scanning.

- Channel Selection:** Use the number buttons or channel up/down buttons on the remote to change channels.
- Input Selection:** Press the **Input** or **Source** button to switch between connected devices (e.g., HDMI 1, HDMI 2).
- Volume Control:** Use the **Volume Up/Down** buttons to adjust the sound level.
- Recording with External HDD:** Once an external HDD is connected and formatted (if prompted), you can use the TV's recording functions to record programs. Refer to the on-screen menu for detailed recording options, including scheduled recording and time-shift. The double tuner allows you to record one program while watching another.
- Menu Navigation:** Use the arrow keys and **OK/Enter** button on the remote to navigate through the TV's menu for picture settings, sound settings, and other features.

Specifications (32A35G)

最小テレビ台天板サイズ	最適視聴距離
77.1cm×26cm以上	117.6cm

3年保証

固定電話から
0120-835-111

※上記の電話番号がご利用いただけない場合は050-2018-6700 (有料)

09:00～18:00 (年中無休) ※土日祝は受付のみ

携帯電話から
0570-033-677 (有料)


 
安心と信頼をお届けするテレビの長期3年間保証

保証内容は製品によって異なります。保証の詳細と最新の情報については、製品に同梱されている保証書をご覧ください。

This image provides key dimensions for the Hisense 32A35G TV: 71.9cm width, 46.9cm height, and 16.0cm depth. It also specifies a minimum TV stand size of 77.1cm x 26cm and an optimal viewing distance of 117.6cm. Below, it details the 3-year warranty and customer support contact numbers and operating hours.

- **Screen Size:** 32-inch (32V type)
- **Resolution:** HD
- **Panel Type:** ADS Panel

- **Tuners:** BS x1, 110CS x1, Digital Terrestrial x2 (Double Tuner)
- **HDMI Ports:** 2
- **USB Ports:** Yes (for external HDD recording)
- **Engine:** NEO Engine 2K
- **Dimensions (W x H x D):** 71.9 cm x 46.9 cm x 16.0 cm (with stand)
- **Optimal Viewing Distance:** 117.6 cm
- **Minimum TV Stand Size:** 77.1 cm x 26 cm or more

	A6G/E6G series	E40H series	A35G series
画面サイズ	 75/65/58/55/50/43v型	 40/32v型	 40/32v型
チューナー	 ×1 ×1 ×2 ×2 ×2	 ×2 ×2 ×2	 ×2 ×2 ×2
映像のリアル感	 NEOエンジンLite	 NEOエンジン 2K smart	 NEOエンジン 2K
パネル	ADSパネル (50v/58v型を除く)	ADSパネル (40v型を除く)	ADSパネル (40v型を除く)
低遅延 ゲームモード			
高音質	 eliex、Dolby Audio など	 eliex、Dolby Audio など	—
動画配信 サービス	 などのVOD		—

A comparative chart showcasing different Hisense TV series (A6G/E6G, E40H, A35G). For the 32A35G model, it confirms features such as 32V type screen size, BS/110CS/Digital Terrestrial tuners, NEO Engine 2K, ADS panel, and notes the absence of low-latency game mode, high-quality audio, and built-in streaming services.

TROUBLESHOOTING

Washing Machine

- **Machine does not start:** Ensure the power cord is securely plugged in, the water supply is on, and the lid is properly closed. Check if a cycle is selected and the 'Start' button is pressed.
- **Water not draining:** Check if the drain hose is kinked or blocked. Ensure the drain pump filter is clean.
- **Excessive vibration:** Ensure the machine is level and the transport bolts (if any) have been removed. Distribute laundry evenly in the drum.

LCD TV

- **No picture/No sound:** Check power connection, ensure the correct input source is selected, and verify antenna/cable connections.
- **Remote control not working:** Replace batteries. Ensure there are no obstructions between the remote and the TV's IR sensor.
- **External HDD recording issues:** Ensure the HDD is properly connected, formatted, and has sufficient free space. Check recording settings in the TV menu.

WARRANTY AND SUPPORT

Warranty Information

The Hisense 32A35G 32-inch HD LCD TV comes with a **3-year warranty**. For detailed terms and conditions, please refer to the warranty card included with your product. Warranty details for the HW-G75C washing machine should also be found in its accompanying documentation.

Customer Support

For inquiries or technical assistance, please contact Hisense customer support:

- **From landlines:** 0120-835-111
- **From mobile phones:** 0570-033-677 (charges apply)

Operating Hours: 09:00 - 18:00 (Year-round, excluding weekends and holidays for landline support. Mobile support may have different holiday schedules.)

Please have your product model number and purchase date ready when contacting support.