

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [MEWOOFUN](#) /

› [MEWOOFUN Dog Communication Buttons Instruction Manual \(Model LL-QS02F\)](#)

MEWOOFUN LL-QS02F

MEWOOFUN Dog Communication Buttons Instruction Manual

Model: LL-QS02F | Brand: MEWOOFUN

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your MEWOOFUN Dog Communication Buttons. Please read this manual thoroughly before use to ensure proper functionality and a positive experience for both you and your pet.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Recordable Dog Communication Buttons (3 units)
- Non-skid Rubber Mat (1 unit)
- Sticker Sheet (1 unit)
- Mini Screwdriver (1 unit)
- Instruction Manual (this document)

Dog Talking Button Set



Figure 1: Package Contents. The image displays the three recordable buttons (orange, yellow, blue), the grey rubber mat, a sheet of stickers, a small screwdriver, and the instruction manual.

SETUP

1. Battery Installation

1. Locate the battery compartment on the underside of each button.
2. Use the provided mini screwdriver to open the battery compartment cover.
3. Insert 2 AAA LR03 batteries into each button, ensuring correct polarity (+/-). *(Batteries are not included and must be prepared separately.)*
4. Securely close the battery compartment cover with the screwdriver.

How to Use Talking Buttons



Install 2 AAA LR03 batteries.
(batteries for self-preparation)



Press and hold the REC button, start recording your voice message of 20s or less after hearing a single "beep". Then release the "REC" and hear "beep-beep".



For best sound quality, keep the audio source about 3" from the MIC.



Press the top button to playback the recording voice.

Figure 2: Battery Installation and Recording. Step 1 shows inserting AAA batteries into the button. Step 2 illustrates pressing the 'REC' button to record a voice message.

2. Recording a Voice Message

1. Locate the 'REC' button on the underside of the button.
2. Press and hold the 'REC' button. You will hear a single 'beep' sound, indicating that recording has started.
3. Speak your desired word or phrase clearly into the microphone (located near the 'REC' button). The recording duration is up to 20 seconds.
4. Release the 'REC' button when you have finished recording. You will hear two consecutive 'beep-beep' sounds, confirming the recording is saved.
5. To play back the recorded message, press the top surface of the button.

Package List



Mat with velcro*1



Buttons*3



Manual*1



Sticker*1



Screwdriver*1

Figure 3: Easy to Press & Clear Voice. A small white dog presses an orange button, highlighting the ease of use and clear sound quality.

3. Attaching Buttons to the Mat

The non-skid rubber mat helps keep the buttons in place during use.

1. Peel off the protective film from the velcro pads on the bottom of each button.
2. Align the velcro pads on the button with the designated areas on the rubber mat.
3. Press firmly to secure the button to the mat.
4. Use the provided stickers to label each button with its corresponding word or symbol. Blank stickers are included for custom labels.



Figure 4: How to Attach the Button to the Mat. The image illustrates peeling off velcro, sticking it to the button, applying a sticker, and finally attaching the button to the mat.



Figure 5: Stronger Adhesion. This image shows the velcro on the bottom of the buttons, emphasizing how it keeps them firmly on the mat.



Figure 6: DIY Sticker. A hand is shown writing on a sticker, demonstrating the customization feature.

OPERATING INSTRUCTIONS

The MEWOOFUN Dog Communication Buttons are designed to facilitate communication between pets and their owners. Consistent training is key to success.

Training Your Pet

- 1. Choose a Word:** Start with one simple, high-value word that your pet already understands, such as "Outside," "Food," or "Play."
- 2. Associate the Word:** Whenever you perform the action associated with the word, press the corresponding button and say the word clearly. For example, before going outside, press the "Outside" button and say "Outside."
- 3. Encourage Interaction:** Gently guide your pet's paw to press the button. Immediately reward them with praise or a treat when they press the correct button.
- 4. Consistency is Key:** Repeat this process consistently. Over time, your pet will associate the button press with the action and the reward.
- 5. Expand Vocabulary:** Once your pet consistently uses one button, gradually introduce new words and buttons.

Make Communication Easier



Figure 7: Make Communication Easier. A dog is shown with three buttons labeled 'Food', 'Water', and 'Poop', demonstrating how the buttons facilitate communication.



Figure 8: MEWOOFUN Dog Communication Buttons. A top-down view of the three buttons on their mat.

Official Product Videos

Your browser does not support the video tag.

Video 1: **Teach your Pet to Talk.** This video demonstrates the process of teaching a pet to use the communication buttons, from setup to initial training steps.

Your browser does not support the video tag.

Video 2: **How to Use Dog Buttons** This video provides a step-by-step guide on how to effectively use the dog communication buttons for training.

Your browser does not support the video tag.

Video 3: **How to Use Dog Talking Buttons Set** A detailed instructional video on setting up and utilizing the talking button set for pet communication.

Your browser does not support the video tag.

Video 4: **MEWOOFUN Dog Buttons for Communication.** This video showcases the MEWOOFUN dog buttons in action, highlighting their role in enhancing pet communication.

MAINTENANCE

Cleaning

- Wipe the buttons and mat with a damp cloth. Avoid submerging them in water.
- Do not use harsh chemicals or abrasive cleaners, as these may damage the product.

Battery Replacement

Replace batteries when the sound becomes faint or the button stops responding. Follow the battery installation steps in the Setup section.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Button does not make sound.	Low or dead batteries. Incorrect battery installation.	Replace batteries. Ensure batteries are inserted with correct polarity.
Recording is unclear or distorted.	Microphone too far or too close during recording. Background noise.	Re-record the message in a quiet environment, speaking clearly about 3 inches from the microphone.
Button slides on the floor.	Not using the non-skid mat. Velcro not properly attached.	Ensure buttons are securely attached to the non-skid mat. Verify velcro is clean and properly adhered.

SPECIFICATIONS

Feature	Detail
Model Number	LL-QS02F
Item Weight	15.8 ounces
Item Package Dimensions	10.87 x 4.96 x 2.32 inches
Power Source	2 x AAA LR03 batteries per button (not included)
Recording Time	Up to 20 seconds per button
Material	High quality ABS plastic, non-slip rubber mat
Target Audience	Dogs

WARRANTY AND SUPPORT

MEWOOFUN products are designed for durability and performance. For any questions, concerns, or support needs regarding your Dog Communication Buttons, please refer to the contact information provided with your purchase or visit the official MEWOOFUN website.

Related Documents - LL-QS02F

	<p><u>MewooFun Pet Water Bottle - 580ML Portable and Detachable</u></p> <p>Discover the MewooFun Pet Water Bottle, a 580ML capacity, portable, and detachable water dispenser designed for pets. Features easy usage, assembly, and versatile use cases for rinsing, drinking, and food.</p>
-------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

	<p>1-Step Cat Climbing Stair (Wall Mounted) - MewooFun Assembly Instructions</p> <p>Assembly instructions for the MewooFun 1-Step Cat Climbing Stair (Wall Mounted). Learn how to safely install this pet furniture using wall studs or brick walls. Includes parts list and step-by-step guidance.</p>
	<p>MewooFun Cat Climber Assembly Instructions</p> <p>Detailed assembly instructions for the MewooFun Cat Climber, including part lists and step-by-step guidance for installation on studded or brick walls. This guide ensures proper setup for your pet's climbing structure.</p>
	<p>Graviton LL Series E/O Converters: User Manual and Specifications</p> <p>User's manual for Graviton's LL Series Electric-to-Optical (E/O) converters, detailing features, setup, specifications, and safety precautions for models LL-400GI, LL-650GI, LL-780GI, LL-830GI, and LL-1300GI.</p>
	<p>Cordial Speaker Cable Operating Instructions</p> <p>Operating instructions for Cordial speaker cables with speakON® plugs, covering product information, safety guidelines, intended use, and maintenance.</p>
	<p>Limelight by Lutron OEM Integration Guide: LL-INTMOUNT and LL-PIR Modules</p> <p>This guide provides essential information for luminaire manufacturers integrating Limelight by Lutron LL-INTMOUNT and LL-PIR modules. It covers mechanical and electrical integration, testing procedures, and compliance requirements.</p>