

Kenko DSC-PIENI II GYKC

Kenko Pieni II Digital Toy Camera Instruction Manual

Model: DSC-PIENI II GYKC

1. INTRODUCTION

Thank you for purchasing the Kenko Pieni II Digital Toy Camera. This miniature camera is designed for casual photography and video recording, offering a unique and distinctive image style. Its compact size and simple operation make it an ideal companion for capturing everyday moments. This manual provides essential information for the proper setup, operation, and maintenance of your camera.

2. SAFETY INFORMATION

- Do not expose the camera to water or excessive moisture.
- Avoid dropping the camera or subjecting it to strong impacts.
- Keep the camera away from extreme temperatures and direct sunlight.
- Do not attempt to disassemble or modify the camera. This will void the warranty.
- Use only the specified USB cable for charging and data transfer.
- This product contains a built-in lithium-ion battery. Dispose of it responsibly according to local regulations.

3. PACKAGE CONTENTS

Please check that all the following items are included in your package:

- Kenko Pieni II Digital Toy Camera (Main Unit)
- Neck Strap
- Key Holder
- USB Cable (Type A to Mini B)

- Instruction Manual

4. PRODUCT OVERVIEW

Familiarize yourself with the camera's components:



The Kenko Pieni II Digital Toy Camera, gray model, featuring its compact design and the attached key holder for portability. The top of the camera shows the 'MODE' and 'ON/OFF' buttons.

Key Components:

- **Lens:** Front-facing lens for capturing images and videos.
- **MODE Button:** Used to switch between photo, video, and audio recording modes.
- **ON/OFF Button:** Powers the camera on or off, and also functions as the shutter/record button.
- **MicroSD Card Slot:** Located on the side or bottom, for inserting external memory.
- **USB Mini B Port:** For charging the internal battery and transferring data to a computer.
- **Viewfinder:** Designed to reproduce the camera's aesthetic; it does not function as an exact viewfinder for composition.

5. SETUP

5.1. Inserting a MicroSD Card

The Kenko Pieni II requires a MicroSD or MicroSDHC card (up to 16GB) to store photos and videos. There is no internal memory.

1. Ensure the camera is powered off.
2. Locate the MicroSD card slot on the camera body.
3. Gently insert the MicroSD card into the slot with the gold contacts facing down until it clicks into place. Do not force the card.
4. To remove the card, gently push it in until it clicks, then release, and it will spring out.

5.2. Charging the Battery

The camera has a built-in lithium-ion battery. Charge it before first use and whenever the battery is low.

1. Ensure the camera is powered off.
2. Connect the small end of the included USB Mini B cable to the camera's USB port.
3. Connect the larger end of the USB cable to a powered USB port on a computer or a USB wall adapter (not included).
4. The charging indicator light will illuminate. It will turn off or change color when charging is complete.

6. OPERATING THE CAMERA

6.1. Power On/Off

- **To Power On:** Press and hold the **ON/OFF** button for a few seconds until the indicator light turns on.
- **To Power Off:** Press and hold the **ON/OFF** button for a few seconds until the indicator light turns off.

6.2. Switching Modes

Press the **MODE** button to cycle through the available modes:

- **Photo Mode:** For capturing still images.
- **Video Mode:** For recording video clips.
- **Audio Mode:** For recording audio (voice).

6.3. Taking Photos

1. Power on the camera and switch to Photo Mode using the **MODE** button.
2. Point the camera at your subject. Remember, the viewfinder is not precise; compose casually.
3. Press the **ON/OFF** button once to take a photo. The indicator light may flash to confirm capture.

6.4. Recording Videos

1. Power on the camera and switch to Video Mode using the **MODE** button.
2. Press the **ON/OFF** button once to start recording. The indicator light will typically blink or remain steady to indicate recording is in progress.
3. Press the **ON/OFF** button again to stop recording.

6.5. Transferring Data to a Computer

To view your photos and videos, you must transfer them to a computer.



写りはパソコンに
繋いでからのお楽
しみ。

水彩画や油絵のような、
淡く味わいのある描写
が特長です。



The Kenko Pieni II camera connected to a laptop with a USB cable, indicating the process for data transfer.

1. Ensure the camera is powered off.
2. Connect the camera to your computer using the supplied USB Mini B cable.
3. Your computer should recognize the camera as a removable storage device (similar to a USB flash drive).
4. Open the camera's drive, navigate to the DCIM folder, and copy your desired files (JPEG for photos, MJPEG/AVI for videos, MP3 for audio) to your computer.
5. Safely eject the camera from your computer before disconnecting the USB cable.

7. MAINTENANCE

7.1. Cleaning

- Wipe the camera body with a soft, dry cloth.
- For the lens, use a lens cleaning cloth specifically designed for optics. Do not use abrasive materials or harsh chemicals.

7.2. Storage

- Store the camera in a cool, dry place away from direct sunlight and dust.
- If storing for an extended period, ensure the battery is partially charged (around 50%) to prolong its lifespan.

8. TROUBLESHOOTING

- **Camera does not power on:** Ensure the battery is charged. Connect to a USB power source and try again.
- **Cannot take photos/record videos:** Check if a MicroSD card is properly inserted and has sufficient free space.

- **Computer does not recognize camera:** Ensure the USB cable is securely connected to both the camera and the computer. Try a different USB port or cable.
- **Poor image/video quality:** The Pieni II is a toy camera designed for a distinctive, lo-fi aesthetic. Image quality will not be comparable to standard digital cameras. Ensure adequate lighting for best results.

9. SPECIFICATIONS

Feature	Specification
Image Sensor	1/10 model 1.31 Megapixel CMOS sensor
Lens	f=3.2mm F2.8
Shooting Distance	Approx. 0.3 m ~ (fixed focus)
Internal Memory	None
External Memory	MicroSD/SDHC card (~16GB)
Still Image Format	JPEG
Still Image Size	1280 x 1024 pixels
Video Format	MJPEG (AVI)
Video Resolution	480p @ 30 fps
Audio Format	MP3
Shutter Speed	1/100 seconds (fixed)
ISO Sensitivity	100 (fixed)
Power Supply	Built-in Lithium-ion battery
Input/Output Port	USB Mini B
Dimensions (W x H x D)	51 x 36 x 18 mm (2.0 x 1.4 x 0.7 inches)
Weight	Approx. 18 g (0.6 oz) (main unit only)

10. WARRANTY INFORMATION

This product comes with a limited manufacturer's warranty. Please refer to the warranty card included in your package for specific terms, conditions, and duration. Keep your proof of purchase for any warranty claims.

11. SUPPORT

For further assistance, technical support, or inquiries regarding your Kenko Pieni II Digital Toy Camera, please visit the official Kenko website or contact their customer service department. Contact information can typically be found on the product packaging or the manufacturer's website.

[Visit the Kenko Store on Amazon](#)

© 2026 Kenko. All rights reserved.