

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Amazmic](#) /
- › [Amazmic Kids Karaoke Microphone User Manual](#)

Amazmic Light Pink

Amazmic Kids Karaoke Microphone User Manual

Model: Light Pink

INTRODUCTION

This manual provides detailed instructions for the operation, maintenance, and troubleshooting of your Amazmic Kids Karaoke Microphone. Please read this manual thoroughly before using the product to ensure proper function and safety.

The Amazmic Kids Karaoke Microphone is a versatile device designed for children, functioning as a microphone, karaoke machine, high-quality speaker, and voice changer. It features Bluetooth connectivity, LED lights, and multiple sound modes for an engaging experience.

PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your Amazmic Kids Karaoke Microphone.





Figure 1: Front view of the Amazmic Kids Karaoke Microphone, showing the microphone head, control panel, and handle.

Compatible with Multiple APPs



Figure 2: Close-up of the microphone's control panel, highlighting buttons for Mic volume, Echo, Music volume, and various function buttons.

Key Features:

- **All-in-One Functionality:** Functions as a microphone, karaoke machine, high-quality speaker, and voice changer.
- **Magic Voice Changer:** Includes 4 magic sound modes to alter voice.
- **Perfect LED Lights:** Multi-colored LED lights that synchronize with voice or music.
- **Stable and Fast Bluetooth 5.0 Connection:** Provides stable connection up to 33 feet and fast pairing.

- **Longer Playtime:** 4-6 hours of playtime on a full charge, with over 20 days standby time.
- **Compatibility:** Compatible with Phone, Pad, PC, and supports playback via Bluetooth, TF card, and cable connection.
- **3-Layers Noise Reduction:** Ensures high-quality, crystal-clear sound.

SETUP

Charging the Microphone:

Before first use, fully charge the microphone. Use the provided Micro USB cable to connect the microphone to a USB power source (e.g., computer USB port, USB wall adapter).

1. Locate the Micro USB charging port on the microphone.
2. Insert the small end of the Micro USB cable into the microphone's charging port.
3. Connect the standard USB end of the cable to a compatible USB power source.
4. The charging indicator light will illuminate. Once fully charged, the light may change color or turn off.

A full charge typically provides 4-6 hours of playtime.

Powering On/Off:

1. **To Power On:** Press and hold the Power button (usually marked with a power symbol) for a few seconds until the indicator lights illuminate and you hear a power-on prompt.
2. **To Power Off:** Press and hold the Power button again for a few seconds until the indicator lights turn off and you hear a power-off prompt.

OPERATING INSTRUCTIONS

Bluetooth Connection:

The microphone uses Bluetooth 5.0 for wireless connection to your devices.

1. Ensure the microphone is powered on. It will automatically enter Bluetooth pairing mode, indicated by a flashing light or an audible prompt.
2. On your device (smartphone, tablet, PC), go to the Bluetooth settings.
3. Search for available devices. The microphone will appear as "Amazmic Microphone" or a similar name.
4. Select the microphone from the list to pair. Once connected, you will hear a confirmation sound, and the indicator light may become solid.

The connection range is up to 33 feet (10 meters).



Figure 3: Image illustrating the microphone's compatibility with various apps and operating systems like iOS, Android, and popular music platforms.

Using the Microphone for Singing:

1. Connect the microphone to your device via Bluetooth.
2. Open your preferred karaoke app or music streaming service (e.g., Spotify, YouTube, Apple Music) on your connected device.
3. Play a song. The music will play through the microphone's built-in speaker.
4. Adjust the **Mic Volume** slider to control your voice's loudness.

5. Adjust the **Music Volume** slider to control the background music's loudness.
6. Adjust the **Echo** slider to add reverberation to your voice for a karaoke effect.

Voice Changer Function:

The microphone features 4 magic sound modes.

1. While the microphone is on, press the dedicated Voice Changer button (often marked with a voice icon or "M" for Mode).
2. Each press will cycle through the available voice modes (e.g., original, female, male, baby, monster).
3. Speak into the microphone to hear the effect of the selected voice.

Funny Voice Changing



Original Voice



Female Voice



Baby Voice



Male Voice



Monster Voice



Figure 4: Visual representation of the different voice changing options available on the microphone, including original, female, male, baby, and monster voices.

LED Lights:

The multi-colored LED lights on the microphone will dance and synchronize with your voice or the music being played.

Great Gift for Kids!



Figure 5: Close-up showing the colorful LED lights on the microphone's speaker grille and the various ports including TF card slot and USB port.

TF Card Playback:

The microphone supports playback from a TF (MicroSD) card.

1. Insert a TF card with pre-loaded music files into the designated TF card slot on the microphone.
2. The microphone should automatically detect the card and begin playing music.
3. Use the music control buttons (Play/Pause, Next/Previous) on the microphone to manage playback.

MAINTENANCE

- **Cleaning:** Wipe the microphone with a soft, dry cloth. Do not use abrasive cleaners or immerse the device in water.
- **Storage:** Store the microphone in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the microphone regularly, even if not in use for extended periods.
- **Handling:** Handle the microphone with care. Avoid dropping it or subjecting it to strong impacts.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Microphone does not power on.	Battery is low or depleted.	Charge the microphone fully using the provided USB cable.
Cannot connect via Bluetooth.	Bluetooth is not enabled on your device. Microphone is not in pairing mode. Device is too far from the microphone. Interference from other devices.	Ensure Bluetooth is on. Power off and on the microphone to re-enter pairing mode. Move device closer to the microphone (within 33 feet). Move away from other wireless devices.
No sound from microphone/speaker.	Volume is too low. Microphone is muted. Incorrect connection.	Increase Mic and Music volume sliders. Ensure microphone is not muted. Verify Bluetooth connection or TF card insertion.
Voice changer not working.	Incorrect mode selected.	Press the Voice Changer button repeatedly to cycle through modes.

SPECIFICATIONS

- **Brand:** Amazmic

- **Model Name:** Light Pink
- **Connectivity Technology:** Bluetooth 5.0
- **Connector Type:** Micro USB
- **Recommended Uses:** Singing
- **Compatible Devices:** Smartphone, Tablet, Personal Computer
- **Special Feature:** Stand, Voice Changer, LED Lights
- **Included Components:** Karaoke microphone, Micro USB cable
- **Playtime:** 4-6 hours (approx.)
- **Standby Time:** More than 20 days
- **Noise Reduction:** 3-layers

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the product packaging or contact Amazmic customer service directly. You can often find support contact details on the official Amazmic website or through your purchase platform.

For further assistance, please visit the [Amazmic Store on Amazon](#).