

[manuals.plus](#) /

› [Amazmic](#) /

› [Amazmic Kids Karaoke Microphone 868-DZ Instruction Manual](#)

Amazmic 868-DZ

Amazmic Kids Karaoke Microphone 868-DZ Instruction Manual

Model: 868-DZ | Brand: Amazmic

1. INTRODUCTION

The Amazmic Kids Karaoke Microphone 868-DZ is a versatile, portable device designed for entertainment. It functions as a microphone, karaoke machine, high-quality speaker, and voice changer, offering a comprehensive singing experience for children. This manual provides essential information for setup, operation, and maintenance to ensure optimal performance and enjoyment.



Image: The Amazmic Kids Karaoke Microphone in Light Purple, showcasing its compact and portable design.

2. KEY FEATURES

- **All-in-One Functionality:** Operates as a microphone, karaoke machine, high-quality speaker, and voice changer.
- **Magic Voice Changer:** Features 4 distinct sound modes to alter voice, adding fun to performances.
- **Multi-Colored LED Lights:** Integrated LED lights dance with your voice or music, enhancing

the party atmosphere.

- **Advanced Noise Reduction:** 3-layer noise reduction technology ensures clear, crystal-clear sound.
- **Stable Bluetooth 5.0 Connectivity:** Provides a stable connection up to 33 feet and fast pairing (approx. 2 seconds) with compatible devices like phones, tablets, and PCs.
- **Long Battery Life:** A full charge offers 4-6 hours of playtime and over 20 days of standby time.
- **Multiple Playback Options:** Supports music playback via Bluetooth, TF card, and cable connection (cable not included).

360° HD Stereo Surround Long-Lasting Rechargeable Battery



Image: A detailed view of the microphone highlighting its 360° HD Stereo Surround sound and long-lasting rechargeable battery.

3. WHAT'S IN THE BOX

- Karaoke microphone
- Micro USB cable

4. SETUP INSTRUCTIONS

4.1. Charging the Microphone

Before first use, fully charge the microphone using the provided Micro USB cable. Connect the Micro USB end to the microphone's charging port (DC 5V) and the USB-A end to a compatible USB power adapter (not included) or computer USB port. The charging indicator light will show charging status.

4.2. Power On/Off

To power on the microphone, press and hold the power button (usually marked with a power symbol) until you hear a sound prompt and the LED lights illuminate. To power off, press and hold the power button again.

4.3. Bluetooth Pairing

1. Ensure the microphone is powered on and in Bluetooth pairing mode (indicated by a flashing blue light).
2. On your smartphone, tablet, or PC, go to the Bluetooth settings.
3. Search for available devices and select "Amazmic 868-DZ" (or similar name) from the list.
4. Once connected, you will hear a confirmation sound, and the blue light will stop flashing.

Compatible with Multiple APPs



Image: The microphone connected via Bluetooth to a smartphone, illustrating compatibility with various music and karaoke applications.

5. OPERATING INSTRUCTIONS

The microphone features intuitive controls for an engaging user experience.



Image: A close-up view of the microphone's control panel, showing sliders for Mic, Echo, and Music volume, along with various function buttons and input ports.

5.1. Controls Overview

- **Mic Slider:** Adjusts the microphone's vocal volume.
- **Echo Slider:** Controls the echo effect level for your voice.
- **Music Slider:** Adjusts the volume of the background music played from a connected device or TF card.
- **Power Button:** Long press to power on/off. Short press to switch modes (Bluetooth, TF card).
- **Play/Pause Button:** Plays or pauses music playback.
- **Previous/Next Track Buttons:** Skips to the previous or next song.

- **Voice Changer Button:** Cycles through the 4 magic voice modes.

5.2. Adjusting Microphone and Music Volume

Use the dedicated "Mic" and "Music" sliders on the control panel to increase or decrease the volume of your voice and the background music, respectively.

5.3. Applying Echo Effect

Slide the "Echo" control to add or reduce the reverberation effect to your singing, creating a more dynamic sound.

5.4. Using the Voice Changer

Press the "Voice Changer" button to cycle through the four available voice modes: Original Voice, Female Voice, Male Voice, and Monster Voice. Experiment to find your favorite!

Funny Voice Changing



Original Voice



Female Voice



Baby Voice



Male Voice



Monster Voice



Image: A child enjoying the microphone's voice-changing capabilities, with icons illustrating different voice options like original, female, male, baby, and monster voices.

5.5. Playing Music from TF Card

Insert a TF (MicroSD) card loaded with MP3 music files into the TF card slot. The microphone will automatically detect and begin playing music. Use the Play/Pause and Previous/Next track buttons to control playback.

5.6. LED Lights

The multi-colored LED lights on the microphone will automatically illuminate and synchronize with the music or your voice, adding a visual element to your performance.

Singing Like A Superstar!



Image: A young child holding the microphone and singing, with the integrated LED lights creating a vibrant effect.

6. SPECIFICATIONS

Specification	Value
Brand	Amazmic
Model Name	868-DZ

Connectivity Technology	Bluetooth 5.0
Compatible Devices	Smartphone, Laptop, Personal Computer, Tablet, etc.
Power Source	Battery Powered
Battery Life	4-6 hours playtime, 20+ days standby
Audio Sensitivity	115 Decibels
Signal-to-Noise Ratio	115 dB
Frequency Response	10 KHz
Microphone Form Factor	Handheld
Material	Plastic
Item Weight	11.2 ounces (0.7 Pounds)
Package Dimensions	10.08 x 3.35 x 3.31 inches
Color	Light Purple
UPC	645249282659

7. MAINTENANCE

- **Cleaning:** Wipe the microphone's exterior with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the microphone in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge it regularly, even if not in use for extended periods.
- **Handle with Care:** Although durable, avoid dropping the microphone or subjecting it to strong impacts.

8. TROUBLESHOOTING

- **No Power:** Ensure the microphone is fully charged. Connect it to a power source using the Micro USB cable.
- **No Sound from Microphone:** Check the "Mic" volume slider and ensure it is not set to minimum. Verify the microphone is powered on.
- **No Music Playback:** Ensure your device is successfully paired via Bluetooth or that the TF card is correctly inserted and contains playable audio files. Check the "Music" volume slider.

- **Bluetooth Disconnection:** Move closer to the paired device to ensure it's within the 33-foot range. Disconnect and re-pair the device if issues persist.
- **Echo Effect Not Working:** Adjust the "Echo" slider to increase the effect.

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact Amazmic customer service directly. Keep your purchase receipt as proof of purchase.

© 2023 Amazmic. All rights reserved.