

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [PTHTECHUS](#) /

› PTHTECHUS Kids Phone P1 Instruction Manual

## PTHTECHUS P1

# PTHTECHUS Kids Phone P1 Instruction Manual

Model: P1 | Brand: PTHTECHUS

### 1. INTRODUCTION

The PTHTECHUS Kids Phone P1 is a multi-functional device designed for children aged 4-12. It features a 3.8-inch touch screen and integrates various educational and entertainment functions, including dual cameras, 15 educational games, an MP3 music player, a pedometer, an alarm clock, a flashlight, and more. This manual provides detailed instructions for operating and maintaining your device.



Figure 1: PTHTECHUS Kids Phone P1 and accessories.

## 2. SETUP

- 1. Initial Charge:** Ensure the device is fully charged before first use. Connect the provided Type-C cable to the charging port and a power source.
- 2. Power On/Off:** To power on, press and hold the power button. To power off, press and hold the power button.
- 3. Music Transfer:**
  - Shut down the device first.
  - Ensure the side button (power switch) is in the "ON" position.
  - Connect the device to a computer using the provided Type-C USB cable.
  - The computer should recognize the device as a removable disk.
  - Locate the "My Music" folder on the device.
  - Copy MP3 format music files into the "My Music" folder.
  - Note: Only MP3 format is supported for music playback.
- 4. SD Card Recognition:** If the SD card is not recognized, restart the device and gently shake it a few times. If

the issue persists, contact support.

Your browser does not support the video tag. This video demonstrates how to transfer music files to the PTHTECHUS Kids Phone P1 by connecting it to a computer via a Type-C USB cable. It shows the steps of shutting down the phone, ensuring the side button is ON, connecting the cable, and copying MP3 files to the 'My Music' folder.

Video 1: Music Transfer Guide

### 3. OPERATING INSTRUCTIONS

The PTHTECHUS Kids Phone P1 offers a range of features accessible via the touch screen interface.



Figure 2: Multi-function overview.

#### 3.1. Dual Cameras

- Capture photos and videos using the integrated HD cameras.
- Access the camera function from the main menu.
- Utilize the 34 built-in magic stickers to enhance photos.
- Transfer photos to a computer using the USB cable for permanent storage.



Figure 3: Using the HD Dual Camera.

### 3.2. MP3 Music Player

- Access the music player from the main menu.
- Play pre-loaded songs or transferred MP3 files.
- Adjust volume using the on-screen controls.

# MP3音楽プレイヤー

(ヘッドセット付属)



子供用携帯電話にはヘッドフォンが付属しており、  
子供はいつでも音楽を楽しむことができ、  
付属の SUB 充電ケーブルを介して携帯電話に音楽を転送できます。

Figure 4: MP3 Music Player in use.

### 3.3. Educational Games

- The device includes 15 educational puzzle games designed to enhance reaction ability, logical thinking, and hand-eye coordination.

# Multi function mobile phone



## Funny mobile phones:



Games



Music players



Funny cameras

## Utilities:



Pedometer



Alarm clock



Calculator



Recording



Flashlight

## Other functions:



Calendar



Wallpaper



Timer



Stopwatch



Multi language

Figure 5: Educational Games.

### 3.4. Utilities

- **Pedometer:** Track steps. Remember to press the "Start" button on the screen before recording steps.
- **Alarm Clock:** Set alarms for various purposes.
- **Calculator:** Perform basic arithmetic operations.
- **Voice Recorder:** Record audio.
- **Flashlight:** Activate the built-in flashlight.
- **Calendar:** View dates.
- **Timer/Stopwatch:** Use for timing activities.



Figure 6: Utility Functions.

### 3.5. Customization

- **Wallpapers:** Choose from 16 different analog and digital desktop wallpapers to personalize the device's appearance.
- **Photo Effects:** Apply various photo effects.



Figure 7: Customizable Wallpapers.

## 4. MAINTENANCE

- Keep the device clean by wiping it with a soft, dry cloth.
- Avoid exposing the device to extreme temperatures, moisture, or direct sunlight.
- Do not attempt to disassemble or repair the device yourself.
- The device does not come with a screen protector. If the screen is damaged, a replacement screen protector can be purchased separately.

## 5. TROUBLESHOOTING

- **Music Transfer Issues:** Ensure the device is shut down and the side power button is "ON" when connecting to a PC for music transfer. Only MP3 format is supported.
- **SD Card Not Recognized:** If the internal SD card is loose, restart the device and gently shake it. If the problem continues, contact customer support for a replacement.
- **Power/Charging Issues:** Verify that the side power button is in the "ON" position for normal power-on and charging.
- **Pedometer Not Recording:** Remember to click the "Start" button on the screen before using the pedometer function.
- **Unclear Lens or Low Sound:** Check if there is a protective film covering the lens or speaker on the back of the device. Remove it and retest.
- **General Issues:** If you encounter any other problems, please contact the seller directly for support.

## 6. SPECIFICATIONS

Feature	Detail
Screen Size	3.8 inches
Continuous Use Time	2 days
Compatible Devices	Earphones, Smartphones
Color	Pink
Battery Included	Yes
Battery Usage	Yes
Brand Name	PTHTECHUS
Manufacturer	PTHTECHUS
Product Model Number	P1
Other Features	Touch screen
Connectivity Technology	USB
Display Type	LCD
Product Dimensions	0.99 x 5.79 x 9.98 cm
Item Weight	50 grams
Model Name	P1-Phone
Media Type	SD Memory Card
Display Technology	LED
Supported Standards	MP3

# 子供用スマートフォン



Figure 8: Product Dimensions.

## 7. WARRANTY AND SUPPORT

This product comes with a standard brand warranty. For any issues or support inquiries after receiving the device, please contact the seller directly via email. The seller is committed to providing good products and after-sales service.

## 34 fun stickers to create the cutest photos of your kids



Figure 9: Included items in the box.