

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [RGS Living](#) /

› [GreenSweep V2 Artificial Grass Electric Sweeper Rake Vacuum User Manual](#)

RGS Living GreenSweep

GreenSweep V2 Artificial Grass Electric Sweeper Rake Vacuum

Model: GreenSweep | Brand: RGS Living

INTRODUCTION

This manual provides essential information for the safe and efficient operation, assembly, maintenance, and troubleshooting of your GreenSweep V2 Artificial Grass Electric Sweeper Rake Vacuum. Please read this manual thoroughly before using the product and retain it for future reference.

The GreenSweep V2 is designed to efficiently clean and rejuvenate artificial grass surfaces. It removes leaves, twigs, stones, and other debris, while also plumping up flattened lawn fibers to restore their volume and appearance.

IMPORTANT SAFETY INFORMATION

WARNING: Keep away from children.

Always ensure the power cord is in good condition and positioned to avoid entanglement or damage during operation. Disconnect the power supply before performing any maintenance or cleaning tasks. Wear appropriate personal protective equipment, such as safety glasses and sturdy footwear, when operating the sweeper.

PRODUCT OVERVIEW AND COMPONENTS

The GreenSweep V2 features a robust design for effective artificial grass maintenance. Key components include:

- **1600W Electric Motor:** Provides powerful operation for efficient cleaning.
- **4,000 RPM Spinning Brush Roller:** Lifts debris and restores volume to flattened grass fibers.
- **45L (10.5 Gallon) Collection Bag:** Gathers debris, reducing the need for frequent emptying.
- **5 Adjustable Height Levels:** A single lever allows for precise adjustment of the brush height (0-10mm working heights) to suit different lawn conditions.
- **Foldable Handle:** Designed for compact storage and transport.
- **Durable Wheels:** Facilitate easy maneuverability across the lawn.



Figure 1: Overview of the GreenSweep V2 Electric Sweeper.

This image displays the complete GreenSweep V2 electric sweeper, highlighting its bright green body, black collection bag, and ergonomic handle. The design emphasizes its readiness for use on artificial turf.

45L Collection Bag

Less Emptying



Figure 2: GreenSweep V2 with its 45L collection bag.

A user is shown operating the GreenSweep V2, with a focus on the large 45-liter collection bag, which is designed to hold a significant amount of debris, reducing the frequency of emptying.

SETUP AND ASSEMBLY

The GreenSweep V2 requires minimal assembly. Follow these general steps:

1. **Unpack Components:** Carefully remove all parts from the packaging. Ensure all components listed in the packing list (not provided in this manual, refer to product packaging) are present.
2. **Attach Handle:** Secure the foldable handle to the main unit. Ensure all locking mechanisms or screws are tightened as per the instructions provided with the product.
3. **Install Wheels (if separate):** If the wheels are not pre-attached, carefully install them onto their respective axles. Ensure they are securely fastened and can rotate freely.
4. **Attach Collection Bag:** Mount the 45L collection bag onto the designated hooks or slots at the rear of the sweeper. Ensure it is securely latched to prevent debris from escaping.

5. **Inspect Power Cord:** Before first use, uncoil the power cord and inspect it for any signs of damage.

Note: Specific assembly details may vary. Refer to any included quick-start guides or diagrams provided with your product for precise instructions.

OPERATING INSTRUCTIONS

For optimal performance and to achieve a revitalized artificial lawn, follow these operating guidelines:

1. Adjusting Brush Height

The GreenSweep V2 features 5 adjustable height levels. Use the single lever adjustment mechanism to set the brush height. It is recommended to set the brush approximately 3/8 inch (1 cm) below the top of the lawn level for effective debris collection and fiber plumping.



Figure 3: Adjusting the brush height with the single lever.

This image shows a hand adjusting the height lever on the side of the GreenSweep V2, with markings indicating different height levels from -6mm to 12mm, demonstrating the ease of adjusting the brush depth.

2. Powering On and Off

Connect the power cord to a suitable outdoor power outlet. To start the sweeper, engage the power switch on the handle. To turn off, release the switch or disconnect from the power supply.

3. Sweeping Technique for Best Results

For some turf types and thatch styles, it is most effective to make two passes over the same area:

1. **First Pass (Forward):** Walk forward at a steady pace. The sweeper will lift ingrained dirt and collect the top layer of debris.
2. **Second Pass (Backward):** Walk backward over the same area. This action helps collect any remaining debris and effectively plumps up the lawn fibers, restoring their volume and fullness.

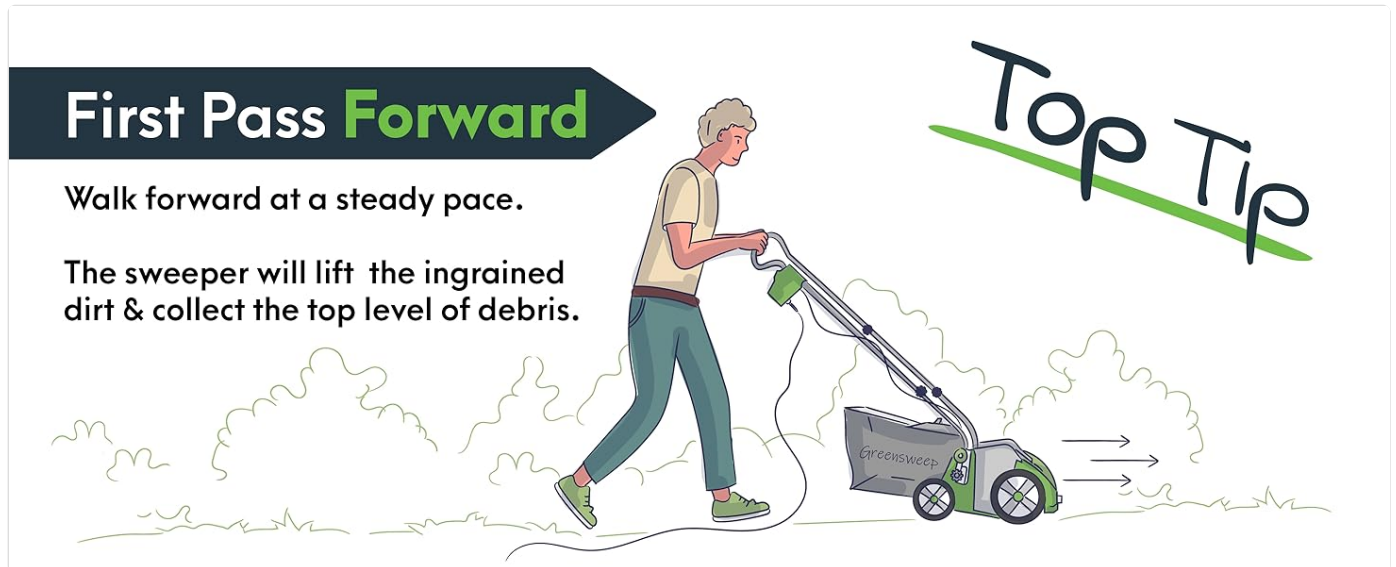


Figure 4: Illustration of the first pass, walking forward with the sweeper.

An illustration depicts a person pushing the GreenSweep V2 forward across an artificial lawn, indicating the direction of movement for the initial pass to collect surface debris.



Figure 5: Illustration of the second pass, pulling the sweeper backward.

An illustration shows a person pulling the GreenSweep V2 backward over the same area of artificial lawn, demonstrating the technique for the second pass to ensure thorough cleaning and fiber rejuvenation.

4. Debris Collection

The 45L collection bag is designed to hold a significant amount of debris. Regularly check and empty the bag to maintain

optimal suction and prevent clogging. The sweeper is most effective on dry, small, and light debris such as leaves, blossoms, pine needles, dog hair, small twigs, and stones.

Do NOT use the sweeper on wet debris, pet waste, large or heavy debris, pine cones, or fruits, as this can damage the machine or reduce its effectiveness.

MAINTENANCE

Regular maintenance ensures the longevity and performance of your GreenSweep V2.

- **Empty Collection Bag:** Always empty the collection bag after each use to prevent accumulation and maintain airflow.
- **Clean Brush Roller:** Periodically inspect the spinning brush roller for tangled debris (e.g., long grass, string) and remove it carefully.
- **Wipe Down Unit:** After use, wipe the exterior of the sweeper with a damp cloth to remove any dust or dirt. Do not use harsh chemicals or abrasive cleaners.
- **Store Properly:** Store the GreenSweep V2 in a dry, covered area. The foldable handle allows for compact storage.
- **Power Cord Inspection:** Regularly check the power cord for cuts, fraying, or other damage. If damaged, have it replaced by a qualified technician.

TROUBLESHOOTING

Here are solutions to common issues you might encounter:


1. Debris is not being collected effectively when walking forwards.

Solution: For optimal collection and fiber restoration, it is often best to perform two passes: first walking forwards, then walking backwards over the same area. This ensures maximum debris collection and helps plump up the lawn fibers.

Trouble Shooting

My Tips for Best Results
Josh Parker-Bishop | Product Director

From my garden



1. The debris is not being collected walking forwards:

For some turf types and thatch styles, it often works best to go forwards and backwards over the area with the sweeper. This makes sure the maximum amount of debris is collected and volume is restored.

It takes a little bit of work, but the results will be worth it!


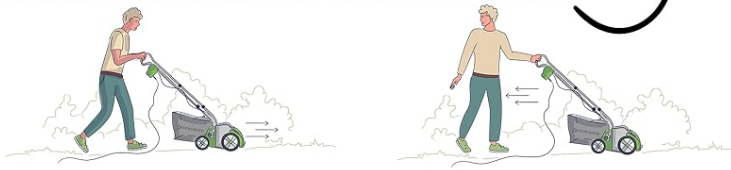


Figure 6: Visual guide for two-pass sweeping technique to improve debris collection.

This image illustrates the recommended two-pass method (forward then backward) for effective debris collection and turf rejuvenation, addressing issues where debris might not be fully collected on a single forward pass.

2. Unsure about the correct brush height setting.

Solution: Set the brush height so that the brush sits approximately 3/8 inch (1 cm) below the top of the lawn level. This setting provides the best pickup and ensures the grass is fully volumized. Experiment with different settings to find what works best for your specific lawn type.

Trouble Shooting

My Tips for Best Results
Josh Parker-Bishop | Product Director



From my garden

2. What height do I need to set the brush to?:

I always recommend setting the height so the brush sits around 3/8 inch (1cm) below the top of the lawn level. Getting this height right not only gives the best pickup, it also ensures the grass is fully volumized.

Play around with the height settings to dial this in as every lawn is different.



Figure 7: Guide for optimal brush height adjustment.

This image provides guidance on how to correctly set the brush height for the GreenSweep V2, suggesting a depth of 3/8 inch (1 cm) below the lawn surface for effective cleaning and fiber plumping.

3. Debris is going under the machine instead of into the bag.

Solution: This can occur if the height is not set correctly or if the collection bag is not latched properly.

- Ensure the collection bag is fully latched.
- Try adjusting the height setting to be lower.
- Check the catch plate (the metal plate leading to the bag) to ensure it is straight and undamaged. If needed, this plate can be aimed lower down at the front to close the gap to the floor. To lower the catch plate, remove the screw, tilt it forward, and refit the screw. The screw is self-tapping and will easily fit into the new position.

Trouble Shooting

My Tips for Best Results
Josh Parker-Bishop | Product Director



From my garden

3. Debris is going under the machine?:

Sometimes debris can miss the bag and go under the machine if the height is not set right, or the bag is not latched correctly. Be sure to check the bag is fully latched and try adjusting the height to be lower.

Also check the catch plate (the metal plate leading to the bag) is straight and undamaged. If needs be, this plate can be aimed lower down at the front to close the gap to the floor.

To lower the catch plate, remove the screw, tilt forward and refit the screw. The screw is self tapping, so will bit easily into the new position.



Figure 8: Addressing debris escaping under the sweeper.

This image illustrates potential reasons for debris escaping under the GreenSweep V2, such as incorrect height settings or an improperly latched collection bag, and suggests checking the catch plate for proper alignment.

4. Sweeper is not picking up certain types of debris.

Solution: Always ensure the turf is dry before starting. The sweeper is not designed for use on wet surfaces, as damp debris is significantly harder to collect. The GreenSweep V2 is suitable for small and light debris like leaves, blossoms, pine needles, dog hair, small twigs, and stones. It cannot effectively collect wet debris, pet waste, large or heavy items, pine cones, or fruits.

Trouble Shooting

My Tips for Best Results
Josh Parker-Bishop | Product Director



4. What will the sweeper pickup:

Firstly, always be sure the turf is dry before starting the job. The Sweeper is not designed to be used in the wet and debris is far more difficult to collect when damp.

The sweeper can collect all kinds of small and light debris. Leaves, blossoms, pine needles, dog hair and small twigs and stones are all suitable with the sweeper.

The sweeper cannot collect wet debris, pet waste, large or heavy debris, pine cones and fruits.

Figure 9: Guide to suitable debris types for the GreenSweep V2.

This image clarifies what types of debris the GreenSweep V2 is designed to pick up (small, light, dry items like leaves and twigs) and what it is not suitable for (wet debris, large items, pet waste).

SPECIFICATIONS

Feature	Specification
Product Dimensions	0.39 x 0.39 x 0.39 inches
Item Weight	29.3 pounds
Manufacturer	GreenSweep
Model Number	GreenSweep
ASIN	B0BQMKSFVC
Motor Power	1600W Electric Motor
Brush Speed	4,000 RPM
Collection Bag Capacity	45 Liters (10.5 Gallons)
Adjustable Heights	5 levels (0-10mm working heights)
Working Width	16 inches

WARRANTY AND SUPPORT

For warranty information, product support, or to purchase replacement parts, please refer to the official GreenSweep website or contact RGS Living customer service. A digital version of the user manual is available [here](#).

Protection plans are available for purchase separately:

- 2-Year Protection Plan: \$26.99
- 3-Year Protection Plan: \$36.99
- Complete Protect: \$16.99/month (covers all eligible past and future purchases)

Note: The availability and terms of protection plans may vary.

OFFICIAL PRODUCT VIDEOS

No official product videos with "Seller" as creator type were found in the provided data. Therefore, no videos are embedded in this manual.