

[Manuals.plus](#) /

› [Philips Norelco](#) /

› Philips Norelco Multigroom Series 5000 18 Piece Trimmer Instruction Manual

Philips Norelco MG5910/49

Philips Norelco Multigroom Series 5000 Instruction Manual

Model: MG5910/49

Brand: Philips Norelco

PRODUCT OVERVIEW

The Philips Norelco Multigroom 5000 is an all-in-one grooming tool designed for maximum versatility. This durable trimmer includes 18 quality tools for styling your face, hair, head, and body, including intimate hair grooming. It features an extra-wide hair trimmer for large areas and an adjustable 3-7mm comb for personalized looks. The stainless steel self-sharpening blades ensure long-lasting performance without the need for blade oil. A long-lasting lithium-ion battery provides up to 3 hours of runtime, and the no-slip rubber grip enhances comfort and control. A USB-A charging cable is included (wall power adapter not included).



Image: The Philips Norelco Multigroom Series 5000 trimmer shown alongside its retail packaging, highlighting its all-in-one capabilities.

What's in the Box

Your Philips Norelco Multigroom Series 5000 package includes the following components:

- 1x Multigroom handle
- Steel trimmer head
- Steel precision trimmer head
- Nose and ear trimmer head
- Extra-wide hair trimmer head
- 1x 3-7 mm adjustable guard
- 4x Wide hair guards
- 2x Wide fading hair guards
- 2x Body guards
- 2x Stubble guards
- 1x USB-A charging cable (Note: Wall power adapter not included)



Face trimming & styling



Steel trimmer



Steel precision trimmer



Nose and ear trimmer



2 Stubble guards (1, 2 mm)



Adjustable comb (3-7 mm)



Hair clipping



Extra-wide hair trimmer



4 Hair guards (4, 9, 12, 16 mm)



2 Fading hair guards (L + R)



USB-A charging cable

Wall adapter not included.



Body grooming



2 Body guards (3, 5 mm)

Image: A visual representation of all the attachments and the main unit included in the Multigroom Series 5000 kit, categorized by use for face, hair, and body.

SAFETY INFORMATION

To ensure safe operation and prevent injury or damage, please adhere to the following safety guidelines:

- Avoid use on infants.
- Keep the trimmer away from water sources when not in use or charging.
- Always unplug the trimmer from the power source before cleaning or storing.
- Do not use the trimmer while it is charging.
- If the trimmer shows any signs of damage, discontinue use immediately and contact the manufacturer for assistance.
- Only use the provided USB-A charging cable. Ensure the charging port is dry before connecting.

SETUP

1. **Initial Charge:** Before first use, fully charge the trimmer. Connect the USB-A charging cable to the trimmer and a compatible USB power adapter (not included). The battery light indicator will show charging status. A full charge provides up to 3 hours of runtime.

USB-A charging cable



This product comes with a USB-A charging cable (wall adapter not included).

Image: The USB-A charging cable provided with the trimmer, used for recharging the device's internal battery.

2. **Attaching Trimmer Heads:** Select the desired trimmer head (e.g., steel trimmer, precision trimmer, nose/ear trimmer, extra-wide hair trimmer). Align the head with the trimmer body and push it firmly until it clicks into place.



Image: The main trimmer unit displayed with all its interchangeable heads and comb attachments, demonstrating the variety of grooming options.

3. **Attaching Comb Guards:** For specific hair lengths, attach the appropriate comb guard to the trimmer head. Ensure it is securely fastened. The adjustable comb allows for lengths between 3-7mm.



OPERATING INSTRUCTIONS

The Philips Norelco Multigroom 5000 is designed for versatile grooming across various body zones.

1. **Power On/Off:** Press the power button located on the handle to turn the trimmer on or off.

2. **Trimming Face and Beard:**

Attach the steel trimmer or precision trimmer head. Use the stubble guards or the adjustable comb (3-7mm) for desired beard length. Move the trimmer against the direction of hair growth for an even trim.



Image: A man using the Philips Norelco Multigroom to trim his beard, demonstrating the ergonomic design and ease of use.

3. **Hair Clipping:**

For head hair, use the extra-wide hair trimmer head with the appropriate wide hair guards or fading hair guards. Guide the trimmer smoothly over the scalp for an even cut.



Image: A man using the extra-wide hair trimmer attachment to cut his hair, illustrating its application for head grooming.

4. **Body Grooming:**

Attach the extra-wide hair trimmer head with the body guards for grooming larger body areas. For sensitive areas, use the appropriate body comb or trim without a guard for a closer result.

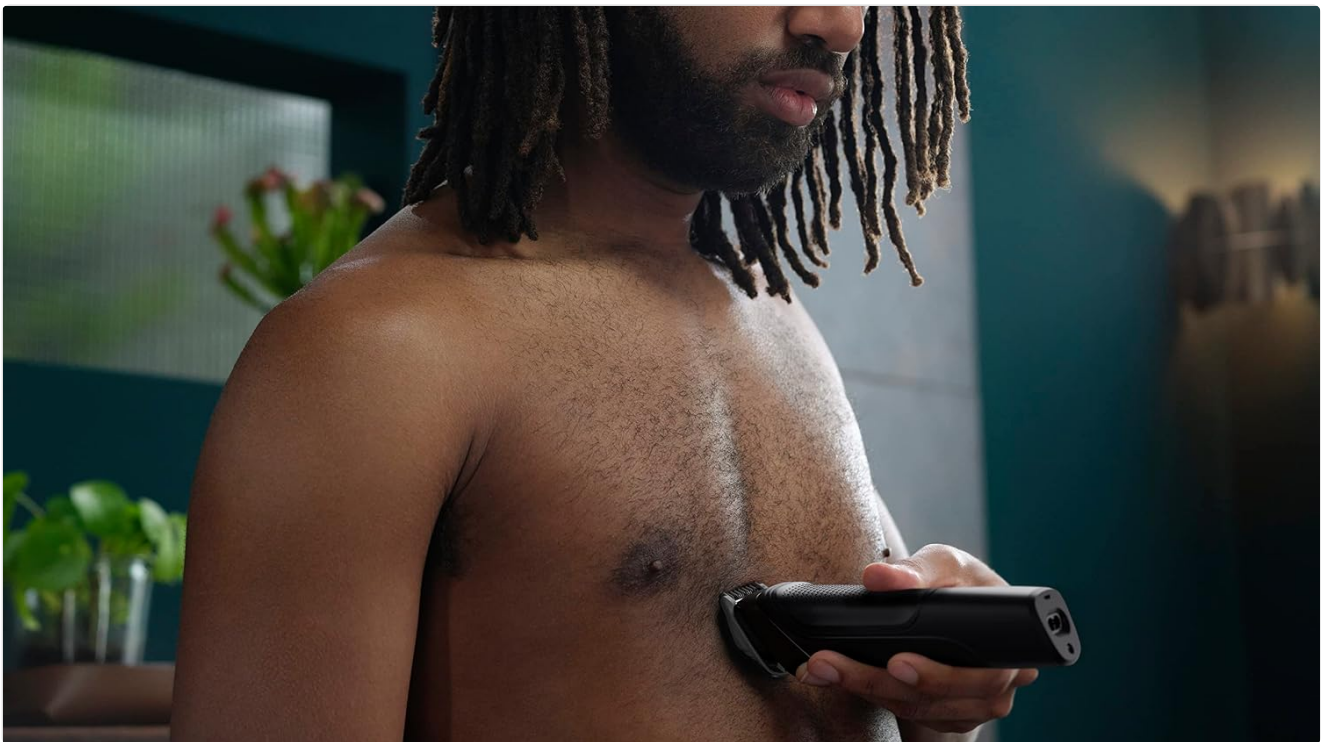


Image: A man utilizing the Philips Norelco Multigroom for body grooming, specifically on his chest, showcasing its versatility.

5. **Nose and Ear Trimming:**

Use the dedicated nose and ear trimmer head for safe and comfortable removal of unwanted hair in these areas.

All body zones



Face



Hair



Body



Image: Graphic illustrating the Multigroom's applicability for all body zones: face, hair, and body.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your trimmer. The Philips Norelco Multigroom 5000 is fully washable.

1. **Cleaning Blades and Guards:** After each use, turn off the trimmer and detach the trimmer head and any comb guards. Rinse them thoroughly under running water.



Image: Hands demonstrating how to rinse the detachable trimmer head and main unit under running water for easy cleaning.

2. **Cleaning the Trimmer Body:** The trimmer handle is also washable. Rinse it under running water, ensuring the charging port is closed if applicable.
3. **Drying:** Allow all parts to air dry completely before reassembling or storing.
4. **No Oiling Required:** The self-sharpening stainless steel blades do not require oiling for maintenance. The grease found upon removing the trimmer head is intentional for consistent trimming performance.

Self-sharpening steel blades



Image: A close-up diagram of the self-sharpening steel blades, indicating their design for long-lasting sharpness without external lubrication.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted.	Charge the trimmer fully using the provided USB-A cable. Ensure the charging cable is properly connected to a power source.
Trimmer pulls hair or cuts unevenly.	Blades are dirty or clogged with hair. / Attachment not properly secured.	Clean the trimmer head and comb guards thoroughly. Ensure the attachment is firmly clicked into place. Trim against the direction of hair growth.
Battery indicator not lighting up during charge.	Faulty charging cable or power adapter. / Trimmer not properly connected.	Ensure the USB-A cable is fully inserted into both the trimmer and the power adapter/USB port. Try a different USB power adapter. If issues persist, contact customer support.

Problem	Possible Cause	Solution
Trimmer makes unusual noise.	Foreign object lodged in blades. / Internal malfunction.	Turn off and unplug the trimmer. Carefully inspect blades for any obstructions and remove them. If the noise persists, discontinue use and contact customer support.

SPECIFICATIONS

- Model Number:** MG5910/49
- Power Source:** Lithium Ion Battery (1 included)
- Runtime:** Up to 3 hours
- Charging:** USB-A cable (wall adapter not included)
- Blades:** Self-sharpening Titanium-coated steel
- Cleaning:** Fully washable
- Color:** Black
- Product Dimensions:** 13.78 x 11.81 x 9.84 inches
- Item Weight:** 0.75 Pounds
- Country of Origin:** Indonesia
- Recommended Uses:** Hair, Beard, Sideburns, Nose, Neck, Face, Eyebrows

WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please visit the official Philips Norelco website or contact their customer service department. Refer to the product packaging for specific contact details or visit the brand's official store on Amazon:

[Visit the Philips Norelco Store on Amazon](#)

© 2025 Philips Norelco. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question