

## Klipsch The Sevens

# Klipsch The Sevens Heritage Inspired Powered Speakers - Walnut User Manual

Model: The Sevens (1071280)

Brand: Klipsch

## 1. INTRODUCTION AND OVERVIEW

This manual provides essential information for the proper setup, operation, and maintenance of your Klipsch The Sevens Heritage Inspired Powered Speakers. These speakers are designed to deliver high-resolution audio without the need for an external AV receiver, offering versatile connectivity options and a dedicated subwoofer output for enhanced bass. Please read this manual thoroughly before using your speakers to ensure optimal performance and longevity.

The Klipsch The Sevens Heritage Inspired Powered Speakers are easy to set up and connect to virtually any audio source. With a dedicated subwoofer connection, you can easily add a powered subwoofer for even more impact. Klipsch Heritage Inspired powered speakers are designed to mate perfectly with Klipsch subwoofers.

## 2. PRODUCT FEATURES

- **High Resolution Audio System:** Easy to set up and connect to virtually any source, The Sevens Powered Speakers deliver hi-res audio with 192kHz / 24-bit decoding — without an AV receiver.
- **All New High-Excursion Driver:** Employing high-performance Digital Signal Processing (DSP) and filter technology, the new 6.5-inch high-excursion driver creates a bigger, bolder soundstage.
- **Big Horn = Big Sound:** A large 90° x 90° edge-to-edge Tractrix horn provides an incredibly efficient transfer of high-frequency waves into the listening area for crisp, clear sound.
- **Premium Materials and Updated Design:** Handcrafted with real wood finishes, premium metal controls, fabric grilles, and cork pads, the Klipsch Sevens Powered Monitors are quality-designed.
- **Easy TV Set-Up:** Plug-and-play, no AV receiver needed. Get immersive, room-filling sound from your TV with just one HDMI cable. This HDMI-ARC connection also allows your existing TV remote to control the speakers' volume.

- **A World of Connectivity:** The Sevens offer a seamless Bluetooth wireless connection, digital optical, 3.5 mm analog, RCA/Phono inputs, and a subwoofer output. Left/Right speaker switching allows for easy placement in your space.

## 3. SETUP GUIDE

### 3.1 Unpacking

Carefully remove all components from the packaging. The box should contain the pair of powered speakers and necessary cables. Inspect for any damage during transit. Retain packaging for future transport or storage.

### 3.2 Speaker Placement

Optimal speaker placement is crucial for sound quality. Position the speakers equidistant from your primary listening position. The Klipsch The Sevens are designed for versatile placement, including on stands, shelves, or a media console. Ensure adequate space around the speakers for proper ventilation and cable management.



Image: Klipsch The Sevens speakers in a living room setup, demonstrating typical placement next to a television.

The speakers feature left/right switching, allowing flexibility in which speaker houses the primary electronics, simplifying cable routing in your space.

### 3.3 Connections

The primary speaker houses all input connections. Connect the secondary speaker to the primary speaker using the included speaker cable.



Image: Detailed view of the primary speaker's rear panel, highlighting the various connectivity options.

- **HDMI-ARC:** Connect an HDMI cable from your TV's HDMI-ARC port to the speaker's HDMI-ARC input. This enables audio from your TV to play through the speakers and allows your TV remote to control speaker volume.
- **Bluetooth:** For wireless audio streaming from compatible devices.
- **Digital Optical:** Connect to digital audio sources like TVs, CD players, or game consoles.
- **3.5 mm Analog:** For connecting devices with a standard headphone jack output.
- **RCA/Phono Inputs:** Includes a switchable phono preamp for direct connection to a turntable.
- **Subwoofer Output:** Connect an external powered subwoofer for enhanced low-frequency performance.

After connecting all desired audio sources, plug the primary speaker into a power outlet.

## 4. OPERATING INSTRUCTIONS

### 4.1 Power On/Off

To power on the speakers, ensure they are plugged into a power source. Use the power button on the top panel of the primary speaker or the included remote control to turn the system on or off.

### 4.2 Source Selection

Select your desired audio input source using the source knob on the top panel of the primary speaker or the corresponding buttons on the remote control. Available sources include HDMI-ARC, Bluetooth, Optical, Analog, and Phono.

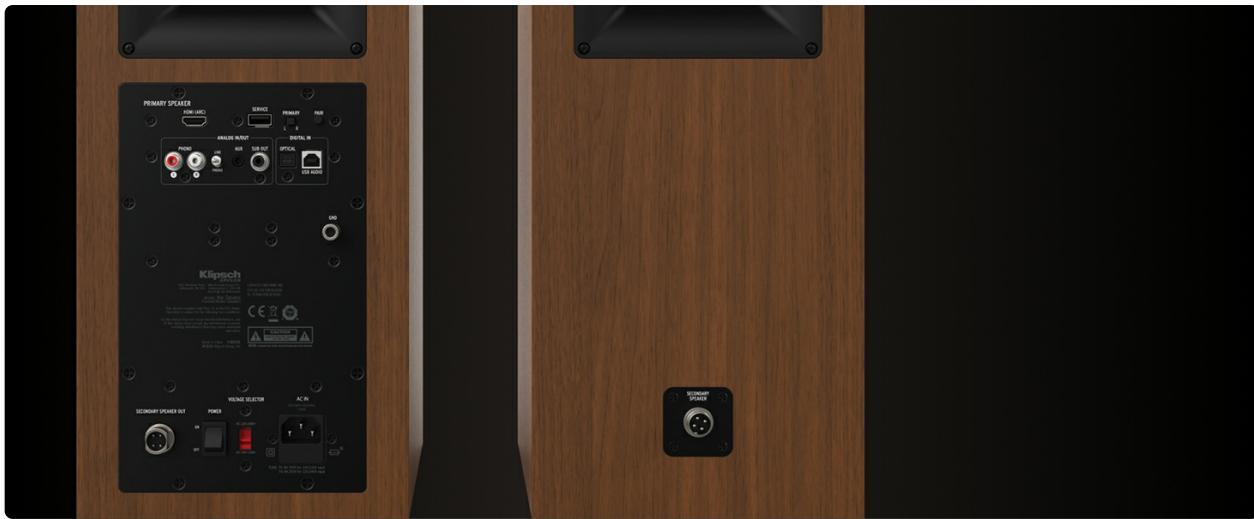


Image: Top panel controls for source selection and volume adjustment.

## 4.3 Volume Control

Adjust the volume using the volume knob on the top panel of the primary speaker or the volume up/down buttons on the remote control. If using HDMI-ARC, your TV remote may also control the speaker volume.

## 4.4 Bluetooth Pairing

To pair a Bluetooth device, select the Bluetooth input on the speakers. The speakers will enter pairing mode. On your device, search for available Bluetooth devices and select "Klipsch The Sevens" to connect. Once paired, audio from your device will stream wirelessly to the speakers.

## 5. MAINTENANCE

To maintain the appearance and performance of your Klipsch The Sevens speakers, follow these guidelines:

- **Cleaning:** Use a dry, soft cloth to clean the speaker cabinets. Avoid abrasive cleaners or solvents. For the grilles, a soft brush or vacuum cleaner with a brush attachment can be used to remove dust.
- **Storage:** If storing the speakers for an extended period, place them back in their original packaging in a cool, dry place to protect them from dust and damage.
- **Environmental Conditions:** Avoid exposing the speakers to extreme temperatures, humidity, or direct sunlight.

## 6. TROUBLESHOOTING

If you encounter issues with your Klipsch The Sevens speakers, refer to the following common troubleshooting steps:

### • No Sound:

- Ensure the speakers are powered on and the correct input source is selected.
- Check all cable connections (power, inter-speaker, and audio source cables) to ensure they are secure.
- Verify that the volume is not muted or set too low on both the speakers and the audio source device.

### • Bluetooth Connectivity Issues:

- Ensure the speakers are in Bluetooth pairing mode.
- Disable and re-enable Bluetooth on your source device.

- Move your Bluetooth device closer to the speakers (within 10 meters).
- Try unpairing and re-pairing the device.

- **Distorted Sound:**

- Reduce the volume on both the speakers and the audio source.
- Check for loose cable connections.
- Ensure the audio source is not sending an over-amplified signal.

For more complex issues, please refer to the support section or contact Klipsch customer service.

## 7. SPECIFICATIONS

Feature	Specification
Model Name	The Sevens
Item Model Number	1071280
UPC	743878047790
Speaker Type	Monitor
Mounting Type	Floor Standing
Material	MDF
Color	Walnut
Product Dimensions	10.88"D x 8.13"W x 16.38"H
Item Weight	22 Pounds (each)
Number of Items	2 (Pair)
Power Source	Corded Electric
Speaker Maximum Output Power	200 Watts
Frequency Response	192 KHz
Connectivity Technology	Bluetooth, HDMI-ARC, Digital Optical, 3.5mm Analog, RCA/Phono
Wireless Communication Technology	Bluetooth
Bluetooth Range	10 Meters
Woofer Diameter	6.5 Inches
Tweeter Diameter	1 Inches
Audio Driver Type	Dynamic Driver

Feature	Specification
Surround Sound Channel Configuration	2.0
Control Method	Remote
Included Components	Powered Speakers
Indoor/Outdoor Usage	Indoor
Special Feature	Hi Res Audio

## 8. WARRANTY AND SUPPORT

Your Klipsch The Sevens Heritage Inspired Powered Speakers come with a Limited Warranty. For specific details regarding warranty coverage, duration, and terms, please refer to the warranty card included with your product or visit the official Klipsch website.

For technical assistance, product support, or warranty claims, please contact Klipsch customer service. Contact information can typically be found on the Klipsch website or in your product documentation.