

Cookeez Makery 23502

Cookeez Makery Cinnamon Treatz Oven Playset

INSTRUCTION MANUAL - MODEL 23502

Introduction

The Cookeez Makery Cinnamon Treatz Oven Playset provides an interactive experience where you can mix ingredients, shape dough, and 'bake' a surprise scented plush friend. This manual provides detailed instructions for setup, operation, and care of your playset.

Safety Information

WARNING: CHOKING HAZARD - Small parts. Not for children under 3 years.

Adult supervision is recommended during play, especially during the mixing and shaping steps.

What's in the Box

Carefully unpack all components. The playset includes:

- 1 Cookeez Makery Oven Unit
- 1 Interactive Scented Plush (Mystery Character)
- 2 Dough Sachets (Ingredients for one plush)
- 1 Measuring Cup
- 1 Spatula Tool
- 1 Pet Mold
- 1 Dough Storage Bag
- 1 Instruction Manual
- 4 AAA Batteries (Pre-installed)



Image: All components of the Cookeez Makery Cinnamon Treatz Oven Playset, including the oven, a pink bunny plush, dough sachets, measuring cup, spatula, and pet mold.

Setup

1. **Remove Packaging Tabs:** Locate and remove all yellow packaging tabs from the bottom of the oven unit. There is also one tab inside the oven compartment.
2. **Battery Activation:** The playset comes with 4 AAA batteries pre-installed. Ensure all packaging tabs are removed to activate the unit.
3. **Power Switch:** Locate the ON/OFF switch on the back of the oven unit. Slide it to the 'ON' position.



Image: Removing the yellow battery activation tab from the base of the oven.

Operating Instructions

Follow these steps to 'bake' your interactive plush friend:

1. **Prepare Ingredients:** Empty both dough sachets into a clean mixing bowl.
2. **Add Water:** Use the provided measuring cup to add the specified amount of fresh drinking water to the mixing bowl.
3. **Mix the Dough:** Use your hands or the spatula tool to thoroughly mix the ingredients until a consistent dough ball forms.
4. **Shape the Dough:** Place the dough into the pet mold, ensuring it fills the mold completely, including any small features like paw prints. Use the spatula tool to create paw print impressions if desired.
5. **Place in Oven:** Open the oven door. Place the shaped dough into the oven compartment. Close the oven door securely.
6. **Set the Timer:** Rotate the dial on the oven clockwise until it clicks. The oven will begin its 'baking' cycle.
7. **Wait for the 'Ding':** The oven will emit a 'ding' sound after approximately 90 seconds, indicating the baking process is complete.
8. **Reveal Your Plush:** Open the oven door. Your dough will have transformed into a warm, scented, interactive plush friend!



Image: Visual guide showing the steps from mixing ingredients to revealing the warm, scented plush.

Interactive Plush Features

Your new plush friend is interactive:

- **Sounds:** Squeeze the plush to activate nurturing sounds.
- **Warmth:** A 3-second squeeze will initiate 2 minutes of warmth.
- **Sleep Mode:** Your pet will enter sleep mode after 2 minutes of inactivity. Squeeze to reactivate.

Replay Mode

The CooKeez Makery oven can be used repeatedly. To 're-make' your plush:

1. Place the dough back into the oven compartment.
2. Close the oven door and rotate the dial clockwise until it clicks.
3. After the 'ding', open the oven to reveal your plush again.

Your browser does not support the video tag.

Video: A 360-degree view of the Cookeez Makery Cinnamon Treatz Oven Playset, showcasing its design and features.

Maintenance

- **Dough Storage:** To preserve the dough's life, store it in the provided storage bag when not in use.
- **Cleaning:** Wipe the oven unit and accessories with a damp cloth. Do not immerse the oven in water.
- **Battery Life:** To preserve battery life, slide the power switch to 'OFF' when the toy is not in use.

Troubleshooting

- **Plush Not Warming/Making Sounds:** Ensure the power switch on the back of the oven is in the 'ON' position. Check if the plush has entered sleep mode (after 2 minutes of inactivity) and squeeze to reactivate.
- **Dough Consistency:** If the dough is too sticky or too dry, adjust the amount of water slightly for optimal mixing.

Specifications

- **Product Dimensions:** 7.28 x 8.27 x 11.5 inches
- **Item Weight:** 2.2 pounds
- **Item Model Number:** 23502
- **Manufacturer Recommended Age:** 5 - 15 years
- **Batteries:** 4 AAA batteries required (included)
- **Manufacturer:** MOOSE TOYS LLC
- **Release Date:** August 1, 2023

Warranty and Support

For customer care inquiries or support, please refer to the contact information provided on the product packaging or visit the official Cookeez Makery website.

