

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

DEWENWILS HORS11B

DEWENWILS Outdoor Wireless Remote Control Outlet User Manual

Model: HORS11B

Brand: DEWENWILS

PRODUCT OVERVIEW

The DEWENWILS Outdoor Wireless Remote Control Outlet is a heavy-duty, weatherproof solution designed to remotely control outdoor appliances and lighting. With a 15A/1875W resistive capacity, it is suitable for string lights, holiday decorations, landscape lighting, and other electrical devices. Its robust construction ensures durability against various weather conditions, and the included remote control offers convenient operation from up to 100 feet away without requiring line of sight.



Image: The DEWENWILS Outdoor Wireless Remote Control Outlet, featuring the main outlet unit with a short power cord and a separate remote control with ON/OFF buttons.

SETUP INSTRUCTIONS

Setting up your DEWENWILS Outdoor Wireless Remote Control Outlet is quick and requires no special tools or programming. Follow these simple steps:

1. **Placement:** Choose a suitable outdoor location for the outlet. Ensure it is mounted vertically with the sockets facing downward to prevent water immersion, as shown in the image below. This orientation helps maintain its weatherproof integrity.
2. **Plug In:** Plug the outlet unit's power cord into a standard 120V outdoor electrical receptacle.
3. **Connect Appliance:** Plug your desired outdoor appliance (e.g., string lights, fountain pump) into the outlet on the DEWENWILS unit.
4. **Remote Control:** The remote control comes pre-paired with the outlet, so no programming is required. It includes a CR2032 3V battery.



Image: Illustration of the weatherproof construction and recommended vertical mounting of the outdoor outlet to protect against rain, sand, dust, sunshine, and snow.

Remotely Control Outside Appliances from Indoors

Strong RF signal works through walls/doors/windows
Avoid going out to unplug the plug in bad weather
or dark environment



Image: Detailed view showing the dimensions of the outdoor outlet and remote control, highlighting the ON/OFF buttons and the CR2032 3V battery included in the remote.

OPERATING INSTRUCTIONS

The DEWENWILS Outdoor Wireless Remote Control Outlet is designed for simple operation using the provided remote control.

- **Turning On:** Press the "ON" button on the remote control to activate the connected appliance.
- **Turning Off:** Press the "OFF" button on the remote control to deactivate the connected appliance.
- **Control Range:** The strong RF signal allows control from up to 100 feet in open areas. It can work through walls and doors, eliminating the need for line of sight between the remote and the outlet. This feature is particularly useful for controlling outdoor lights from inside your home, especially during inclement weather or in dark environments.

Weather for Outdoor Use

To prevent water immersion, please mount the outlet vertically with sockets facing downward.



Rain Water



Sand Dust



Sun Shine



Snow



Image: A hand holding the remote control, illustrating its ability to control outdoor appliances from inside a house, with a visual representation of the 100ft control range.

Plug and Play Suitable for most electrical appliances



IRRIGATION SYSTEM



FOUNTAIN



OUTDOOR LIGHT



LIGHT STRING



CHRISTMAS LIGHTS



GARDEN LAMP



Image: Examples of common applications for the remote control outlet, including irrigation systems, fountains, outdoor lights, string lights, Christmas lights, and garden lamps.

MAINTENANCE

To ensure the longevity and optimal performance of your DEWENWILS Outdoor Wireless Remote Control Outlet, consider the following maintenance tips:

- **Cleaning:** Periodically wipe the exterior of the outlet unit with a damp cloth to remove dirt and debris. Ensure the unit is unplugged before cleaning. Do not use harsh chemicals or abrasive cleaners.
- **Battery Replacement:** The remote control is powered by a CR2032 3V battery. If the remote's range decreases or it becomes unresponsive, it may be time to replace the battery. To replace, carefully open the battery compartment on the back of the remote, remove the old battery, and insert a new CR2032 battery with the positive (+) side facing upwards.
- **Outlet Cover:** The twist-to-lock safety outlet cover provides protection from rain, snow, and dust. Ensure it is properly closed when the outlet is not in use or when only one socket is occupied.

TROUBLESHOOTING

If you encounter issues with your DEWENWILS Outdoor Wireless Remote Control Outlet, refer to the following common troubleshooting steps:

- **Appliance Not Turning On/Off:**
 - Ensure the outlet unit is securely plugged into a working electrical receptacle.
 - Verify that the appliance connected to the outlet is properly plugged in and functioning correctly when directly connected to a power source.
 - Check the remote control battery (CR2032 3V). Replace if necessary.
 - Ensure you are within the 100-foot operating range. While the signal can pass through walls, excessive obstructions or interference may reduce the effective range.
- **Intermittent Operation:**
 - This could indicate a low battery in the remote control. Replace the CR2032 3V battery.
 - Minimize potential sources of strong radio frequency (RF) interference near the outlet unit or remote control.
- **Weather-Related Issues:**
 - Ensure the outlet is mounted vertically with sockets facing downward to prevent water ingress.
 - Confirm the twist-to-lock safety outlet cover is securely closed when not in use.

SPECIFICATIONS

Feature	Detail
Model Number	HORS11B
Brand	DEWENWILS
Product Dimensions	1.37 x 2.56 x 4.06 inches
Item Weight	10.55 ounces
Current Rating	15 Amps
Operating Voltage	120 Volts
Max Resistive Load	1875W
Max Tungsten Load	1000W
Max HP	1/2 HP

Feature	Detail
Control Method	Remote
Connectivity Protocol	Free Control (RF)
Remote Range	Up to 100 feet (in open areas)
Cord Type	6-inch SJTW 14/3C heavy gauge
Certifications	UL Listed, FCC Certified
Remote Battery	1 x CR2032 3V (included)


WARRANTY AND SUPPORT

Specific warranty details are not provided in the product information. For warranty claims, technical support, or further assistance, please contact DEWENWILS customer service directly. Refer to the product packaging or the official DEWENWILS website for the most current contact information.

Manufacturer: Dewenwils

© 2025 DEWENWILS. All rights reserved.

Related Documents

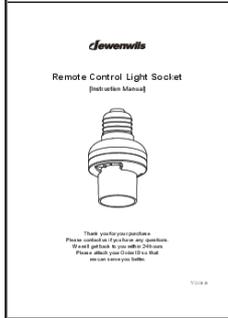
	<p>DEWENWILS 006 Remote Control System Instruction Manual</p> <p>Instruction manual for the DEWENWILS 006 remote control system, detailing operating instructions, programming, troubleshooting, specifications, FCC/ISED compliance, and warranty information.</p>
	<p>DEWENWILS Remote Control Light Socket - Instruction Manual</p> <p>User manual for the DEWENWILS Remote Control Light Socket, detailing warnings, product layout, operating instructions for pairing and canceling, mounting, battery replacement, troubleshooting, specifications, and warranty information.</p>
	<p>Dewenwils LED Floor Lamp HLFL01B Instruction Manual</p> <p>Comprehensive instruction manual for the Dewenwils LED Floor Lamp, model HLFL01B. Includes assembly instructions, parts list, functions of the touch switch and remote control, specifications, and warranty information.</p>



[Dewenwils Outdoor Remote Control Countdown Timer HODT12B User Guide](#)

Learn how to install and operate the Dewenwils HODT12B Outdoor Remote Control Countdown Timer. This guide covers installation, operating modes, battery handling, and safety information for the HODT12B timer and TR-034-7 transmitter.

Documents - DEWENWILS – HORS11B

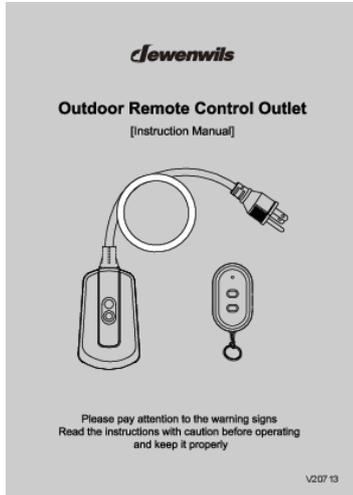

[\[pdf\]](#) User Manual

HORS11B 2022 07 14 Download DEWENWILS Remote Control Kits Instruction Manual Dewenwils v1691217431 cdn shopify s files 1 0718 7608 4009 |||

V20713 ...

lang: score:34 filesize: 3.64 M page_count: 5 document date: 2023-08-05