

[Manuals.plus](#) /

› [VIDXCVIT](#) /

› VIDXCVIT 3.3 CUFT Digital Home Security Safe Box User Manual

VIDXCVIT EUD

VIDXCVIT 3.3 CUFT Digital Home Security Safe Box User Manual

Model: EUD

INTRODUCTION

Thank you for choosing the VIDXCVIT 3.3 CUFT Digital Home Security Safe Box. This manual provides essential instructions for the safe's setup, operation, and maintenance. Please read it thoroughly before use to ensure proper functionality and security.

Package Contents

- 1 x Safe Box
- 2 x Emergency Keys
- 2 x Expansion Screws
- 1 x Mat
- 1 x Instruction Manual (this document)

**KEEP SOME SECRET THINGS AWAY
FROM YOUR KIDS OR THIEVES**



Figure 1: Package Contents - Safe box, emergency keys, expansion screws, and mat.

SAFETY INFORMATION

This safe is designed to protect your valuables. Please observe the following safety guidelines:

- Always keep the emergency keys in a secure location outside the safe. Do not store them inside the safe.
- Ensure the safe is placed on a stable, level surface or securely mounted to a wall or floor to prevent tipping or unauthorized removal.
- Keep the safe away from children to prevent unauthorized access to its contents, especially firearms or medicine.
- While the safe offers fire and water resistance, it is not completely impervious to extreme conditions. Consider additional protective measures for highly sensitive documents or irreplaceable items.

KEEP IMPORTANT BELONGINGS AWAY FROM KIDS AND THIEVES



Figure 2: Keep important belongings away from children and unauthorized individuals.

SETUP

1. Initial Opening

Upon receiving your safe, use one of the provided emergency keys to open the door for the first time. Insert the key into the keyhole, turn it clockwise, and then turn the knob clockwise to open the safe door.

2. Battery Installation

The safe requires batteries for the electronic keypad. Locate the battery compartment, typically on the inside of the safe door. Insert the required batteries (usually AA, not included) according to the polarity markings.

3. Mounting the Safe

For enhanced security, it is recommended to mount the safe to a wall or floor using the provided expansion screws. The

safe has pre-drilled holes for this purpose.

1. Choose a suitable location for mounting.
2. Mark the drilling points on the wall or floor using the safe's pre-drilled holes as a template.
3. Drill holes at the marked points using an appropriate drill bit.
4. Align the safe with the drilled holes and secure it using the expansion screws.



Figure 3: Mounting Installation Steps.

OPERATING INSTRUCTIONS

1. Setting Your Personal or Master Code

The safe allows you to set a personal code and a master code (3 to 8 digits).

Setting the Personal Code:

1. With the safe door open, press the red setting button located inside the door (usually near the hinge).
2. Enter your desired 3-8 digit personal code.
3. Press the "#" key to confirm.

Setting the Master Code:

1. Enter "00".
2. Press the red setting button located inside the door.
3. Enter your desired 3-8 digit master code.
4. Press the "#" key to confirm.



Figure 4: Steps for Setting Personal and Master Codes.

2. Ways to Open the Safe

Your safe offers three methods for access:

Method 1: Personal/Master Code + Turning Knob

1. Enter your personal or master code (3-8 digits).
2. Press the "*" or "#" key to confirm.
3. Immediately turn the knob clockwise to open the door.

Method 2: Emergency Keys + Turning Knob

This method is used for initial opening, forgotten codes, or dead batteries.

1. Insert an emergency key into the keyhole.
2. Turn the key clockwise.
3. Turn the knob clockwise to open the door.

Method 3: External Battery Box + Code + Turning Knob

Use this method if the internal batteries are depleted and you do not have the emergency key readily available.

1. Connect the external battery box to the safe's external power port (usually located near the keypad).
2. Enter your personal or master code.
3. Turn the knob clockwise to open the door.

3 WAYS TO OPEN

METHOD 1

- 1 Enter Passcode
- 2 Turn Knob Clockwise
 - Input 3 to 8 digits combo
 - Confirmed by "*" or "#"
 - Fast access!



METHOD 2

- 1 Use Key
- 2 Turn Knob Clockwise
 - First time operation
 - Forgotten passcode
 - Dead batteries



METHOD 3

- 1 Use Emergency Battery Box
- 2 Enter Passcode
- 3 Turn Knob Clockwise
 - Low batteries
 - Dead batteries

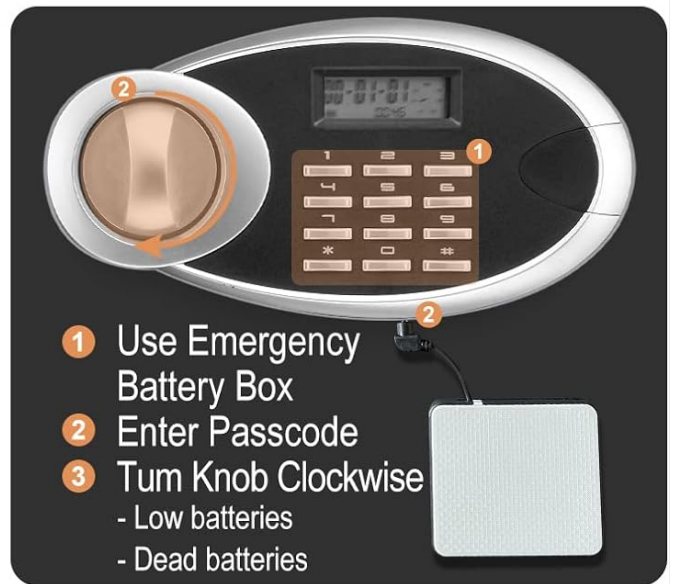


Figure 5: Three Ways to Open Your Safe.

3. Setting Date and Time

To set the date and time on the LCD display:

1. Enter the door opening password (personal or master code) and press the "#" button.
2. When the LCD screen displays "OPEN", immediately press the "*" key.
3. Adjust the date and time in the following order: Year, Month, Day, Hour, Minute. Use the number keys to input values and the "#" key to confirm each segment.

Fireproof Safe Box With Sensor Light Safer & More Convenient Options



Figure 6: Time Setting Steps.

4. Alarm System

The safe is equipped with an anti-theft alarm system. If 3 incorrect entries are made consecutively, the alarm will activate. This system also includes an external battery box for emergency power.

ANTI-THEFT ALARM SYSTEM

3 incorrect enteries can activate the alarm systerm



Figure 7: Anti-Theft Alarm System.

5. Removable Shelf

The safe includes a removable shelf to help organize your items. You can install or remove the shelf based on your storage needs.

SECURITY SAFE WITH REMOVABLE SHELF



Handgun



Cash



Gold



Jewelry



Document

With Shelf

Without Shelf



Figure 8: Security Safe with Removable Shelf.

MAINTENANCE

1. Battery Replacement

When the battery power is low, the keypad display may indicate a low battery warning. Replace all batteries with new ones of the same type to ensure proper operation. Always use high-quality batteries.

2. Cleaning

Clean the exterior of the safe with a soft, damp cloth. Avoid using abrasive cleaners or solvents that could damage the finish or electronic components.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Safe does not open with code.	Incorrect code entered, dead batteries, or keypad malfunction.	• Re-enter the code carefully. • Replace batteries. • Use emergency keys. • Use external battery box.
Keypad is unresponsive.	Dead batteries.	• Replace batteries. • Use external battery box.
Alarm sounds unexpectedly.	3 incorrect code entries.	Enter the correct code to silence the alarm.
Cannot set date/time.	Not pressing "*" immediately after "OPEN" display, or display timed out.	Ensure the display is still lit and showing "OPEN" when pressing "*". Repeat the steps carefully.

SPECIFICATIONS

Feature	Detail
Brand	VIDXCVIT
Model Number	EUD
Exterior Dimensions (H x W x D)	19.69" x 13.78" x 12.2" (50cm x 35cm x 31cm)
Interior Dimensions (H x W x D)	19" x 13" x 12"
Capacity	3.3 Cubic Feet (3.29 Cubic Feet)
Weight	34.2 Pounds
Lock Type	Electronic Combination Lock, Key
Material	Alloy Steel
Color	Black
Special Features	Alarm System, Anti-Theft, Combination Lock, Fireproof, Removable Shelf, LED Light, Waterproof
Mounting Type	Floor or Wall Mount
Power Source	Battery Powered (Batteries not included)

LARGE SAFE BOX FOR HOME USE



Figure 9: Safe Exterior Dimensions.

WARRANTY AND SUPPORT

VIDXCVIT provides a 5-year return or exchange warranty for this safe box. Additionally, lifetime technical support and free replacement parts service are available to ensure your peace of mind.

For technical assistance, warranty claims, or replacement parts, please contact VIDXCVIT customer support through the retailer's platform or the official brand website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question