



Figure 1.1: VJIANGER 4K 64MP Digital Camera, showcasing its compact design, flip screen, and included accessories like batteries and SD card.

Key Features:

- **4K 64MP High Resolution:** Capture stunning photos and smooth videos with exceptional clarity.
- **3-inch 180° Flip Screen:** Perfect for vlogging and self-portraits, allowing for easy framing.
- **18X Digital Zoom:** Get closer to your subjects with powerful digital magnification.
- **Built-in Wi-Fi:** Seamlessly transfer photos and videos to your smartphone or tablet for instant sharing.
- **Webcam Functionality:** Connect to your PC via USB to use the camera for live streaming or video calls.
- **Integrated Fill Light & Flash:** Ensures clear images even in low-light conditions.
- **Compact and Lightweight:** Weighing only 9.8 ounces, it's ideal for travel and everyday use.

2. WHAT'S IN THE Box

Upon unboxing your VJIANGER 4K 64MP Digital Camera, please ensure all the following items are present:

- VJIANGER 4K Ultra HD Digital Camera (Model W08)
- 2 x Rechargeable Batteries (BL-5C type)
- Type-C USB Cable
- 32GB Micro SD Card
- Camera Bag
- Lanyard
- User Manual (this document)



Figure 2.1: All items included in the standard combo package.

3. SETUP GUIDE

3.1 Inserting the Battery

1. Locate the battery compartment cover on the bottom or side of the camera.
2. Slide the latch to open the cover.
3. Insert the BL-5C battery into the compartment, ensuring the correct orientation as indicated by the diagram inside.
4. Close the battery compartment cover until it clicks securely into place.

3.2 Inserting the Micro SD Card

1. Locate the Micro SD card slot, usually near the battery compartment.
2. Insert the 32GB Micro SD card with the gold contacts facing down (or as indicated by the slot diagram) until it clicks into place.
3. To remove, gently push the card in until it springs out.

3.3 Charging the Camera

Before first use, fully charge the camera battery.

1. Connect the provided Type-C USB cable to the camera's USB port.
2. Connect the other end of the USB cable to a USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate. It will turn off or change color once charging is complete.



WD08 Digital Camera



Camera



Instructions



Lanyard

Standard Combo



32GB Micro SD Card



Batteries



Type C cable

Figure 3.1: Proper insertion of battery and Micro SD card, and location of the data cable socket.

3.4 Powering On/Off

Press and hold the Power button (usually located on the top or side of the camera) for a few seconds to turn the camera on or off.

4. OPERATING THE CAMERA

4.1 Basic Photo and Video Capture

The camera offers dedicated modes for photography and videography. Use the mode dial or menu settings to switch between modes.

- **Taking Photos:** In Photo mode, press the Shutter button halfway to focus, then press fully to capture the image.
- **Recording Videos:** In Video mode, press the Shutter button to start recording, and press it again to stop.

4K & 64MP Digital Camera

Record smooth videos & Take high resolution photos



Figure 4.1: The camera is capable of 64MP photos and 4K/30fps video recording.

4.2 Using the Flip Screen

The 3-inch LCD screen can be flipped 180 degrees, making it convenient for self-recording, vlogging, and taking selfies. Simply rotate the screen to your desired angle.

4.3 Digital Zoom

Utilize the W/T (Wide/Telephoto) button to adjust the 18X digital zoom. Press 'T' to zoom in and 'W' to zoom out, allowing you to frame your shots precisely.



Figure 4.2: The 18X digital zoom allows for flexible framing and closer shots.

4.4 Built-in Flash

The camera is equipped with a built-in flash to assist in low-light conditions. Access flash settings through the camera's menu to select modes such as Auto Flash, Fill Flash, or Flash Off.

4.5 Wi-Fi Connectivity

The integrated Wi-Fi allows for convenient transfer and remote control via a smartphone or tablet application.

1. Download the designated camera app (refer to the user manual for app name) on your mobile device.
2. Enable Wi-Fi on your camera through the settings menu.
3. Connect your mobile device to the camera's Wi-Fi network.
4. Use the app to browse photos, download content, or control the camera remotely.



Figure 4.3: Wi-Fi connectivity enables quick sharing and remote control.

4.6 Webcam Function

Transform your camera into a webcam for online meetings, live streaming, or video calls.

1. Connect the camera to your PC using the Type-C USB cable.
2. On the camera screen, select "PC Camera" mode when prompted.
3. Your computer should recognize the camera as a webcam, allowing you to select it in your video conferencing or streaming software.



Webcam Function & Live Streaming

Insert the USB cable and switch the camera to "PC Camera" mode, perfect for video calling, live streaming, blogging, vlogging, online teaching, etc

Figure 4.4: The camera's webcam function for live streaming and video calls.

4.7 Photography and Video Modes

Explore various shooting modes to enhance your creative output.

Photography Modes:

- **Photo Mode:** Standard single shot capture.
- **Continuous Shooting:** Capture a rapid sequence of images.
- **Timed Shooting:** Set a delay before the photo is taken (e.g., 2s, 5s, 10s, 15s).
- **Auto Shooting:** Automatic settings for general photography.

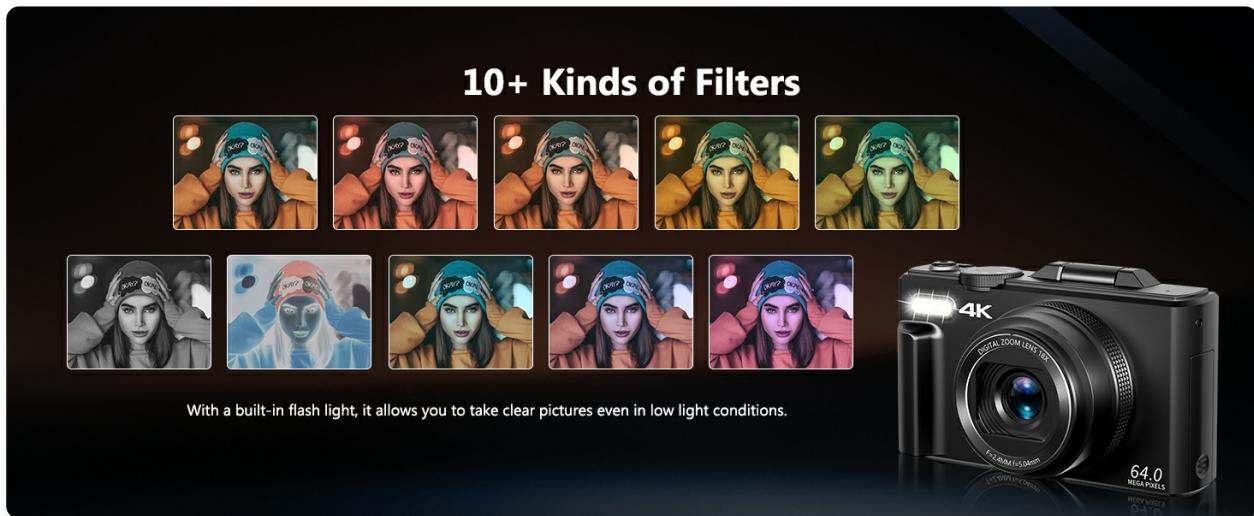


Figure 4.5: Overview of the four main photography modes.

Video Modes:

- **Video Mode:** Standard video recording.
- **Time-lapse Recording:** Capture frames at set intervals to create a sped-up video.
- **Slow-motion Recording:** Record video that plays back slower than real-time.
- **Loop Recording:** Continuously record video, overwriting the oldest footage when the memory card is full.

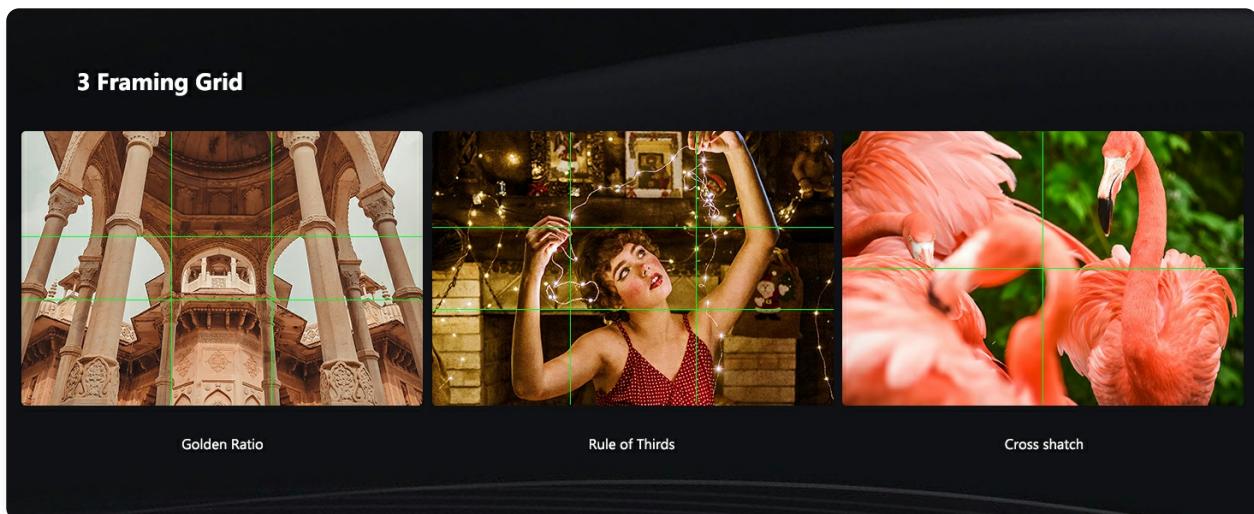


Figure 4.6: Overview of the four main video modes.

4.8 Additional Features

- **Beauty Function:** Enhances skin tones in portraits for a smoother appearance.
- **Filters:** Apply over 10 different creative filters to your photos.
- **Framing Grid:** Utilize Golden Ratio, Rule of Thirds, or Crosshatch grids for improved composition.
- **Smile Face Capture:** Automatically detects and captures smiling faces.

Your browser does not support the video tag.

Video 4.1: A demonstration of the VJIANGER 4K Digital Camera's capabilities for both photography and video recording, highlighting its ease of use and quality.

5. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your camera.

- Cleaning the Lens:** Use a soft, lint-free microfiber cloth specifically designed for camera lenses. Gently wipe the lens in a circular motion. Avoid using harsh chemicals or abrasive materials.
- Cleaning the Screen:** Wipe the LCD screen with a clean, dry microfiber cloth. For stubborn smudges, a small amount of screen cleaner can be applied to the cloth (not directly to the screen).
- Body Cleaning:** Use a soft, dry cloth to wipe the camera body. For dirt, slightly dampen the cloth with water and wipe, then dry thoroughly.
- Storage:** When not in use, store the camera in its provided bag in a cool, dry place, away from direct sunlight, dust, and extreme temperatures. Remove the battery if storing for extended periods.
- Battery Care:** Avoid fully discharging the batteries frequently. Charge them regularly, even if not in use, to maintain battery health.

6. TROUBLESHOOTING

If you encounter issues with your camera, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Camera does not power on.	Battery is low or not inserted correctly.	Ensure battery is fully charged and inserted with correct polarity.
Cannot take photos/videos.	Memory card is full, not inserted, or corrupted.	Check memory card status, ensure it's inserted correctly, or format/replace if corrupted.
Images are blurry.	Lens is dirty; insufficient light; camera shake; subject too close.	Clean the lens. Ensure adequate lighting. Hold camera steady or use a tripod. Maintain minimum focus distance.
Wi-Fi connection issues.	Incorrect password; app not running; camera Wi-Fi off.	Verify Wi-Fi password. Ensure camera Wi-Fi is enabled. Restart camera and app.
Camera freezes or becomes unresponsive.	Software glitch; low battery.	Remove and reinsert the battery to reset. Ensure battery is charged.

If the problem persists after trying these solutions, please contact customer support.

7. SPECIFICATIONS

Detailed technical specifications for the VJIANGER 4K 64MP Digital Camera:

Feature	Specification
Brand	VJIANGER
Model Name	W08
Photo Sensor Resolution	64 MP
Video Resolution	4K UHD 2160p, 1080p
Digital Zoom	18x
Screen Size	3 Inches
Display Type	LCD (Tilting, 180° Flip)
Connectivity Technology	Wi-Fi, USB 2.0
Storage Media	Micro SD (up to 32 GB included)
Image Stabilization	Digital
Battery Type	Lithium Ion (BL-5C)
Battery Average Life	Approx. 2 Hours
Item Weight	0.4 Kilograms (approx. 9.8 ounces)
Supported File Format	JPEG (Image), MP4 (Video)
Special Feature	Compact, Webcam Function, Built-in Fill Light

8. WARRANTY AND SUPPORT

Your VJIANGER 4K 64MP Digital Camera comes with a standard manufacturer's warranty. For specific details regarding warranty coverage, duration, and terms, please refer to the warranty card included in your product packaging or contact the seller directly.

Customer Support:

If you have any questions, require technical assistance, or need to report an issue with your camera, please contact VJIANGER customer support through the platform where you purchased the product. Typically, you can find a 'Contact Seller' or 'Ask a question' option on the product page or within your order history.

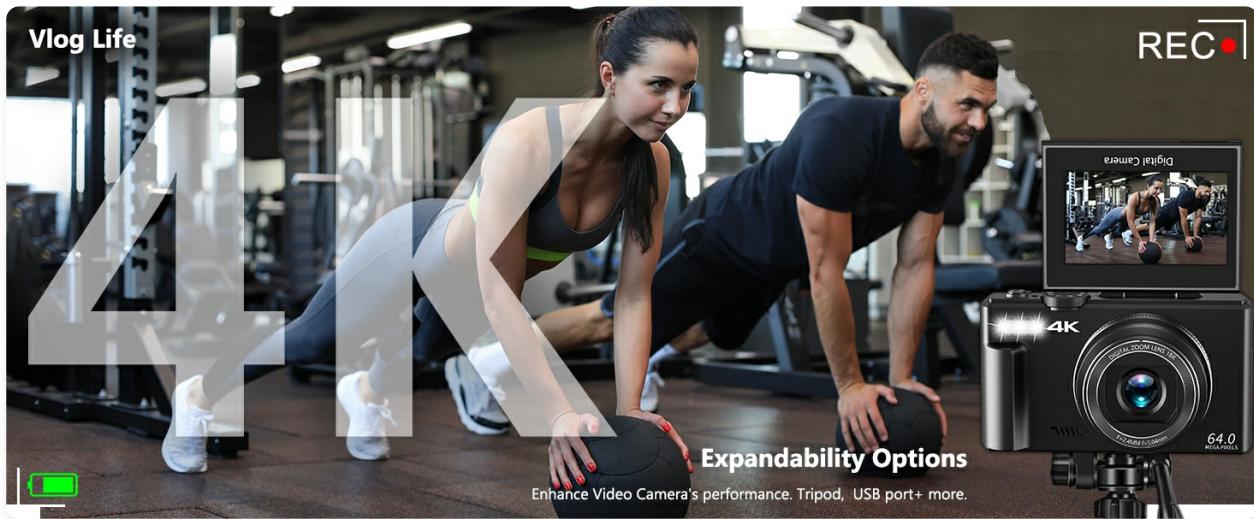


Figure 8.1: Various methods for downloading photos from your camera.

© 2024 VJIANGER. All rights reserved.