

[Manuals.plus](#) /

› [Globe](#) /

› Globe Timer Assembly (240V) Instruction Manual

Globe U01781

Globe Timer Assembly (240V) Instruction Manual

Model: U01781

1. PRODUCT OVERVIEW

The Globe Timer Assembly (240V), Model U01781, is a genuine Original Equipment Manufacturer (OEM) replacement part designed for specific Globe kitchen and professional food equipment. This assembly includes the necessary electronic components for timer functionality, ensuring reliable performance and safety when used as intended within compatible appliances.

It is crucial to use genuine OEM parts to maintain the safety, reliability, and performance standards of your equipment.

What's in the Box

- One (1) Globe Timer Assembly (240V), Model U01781

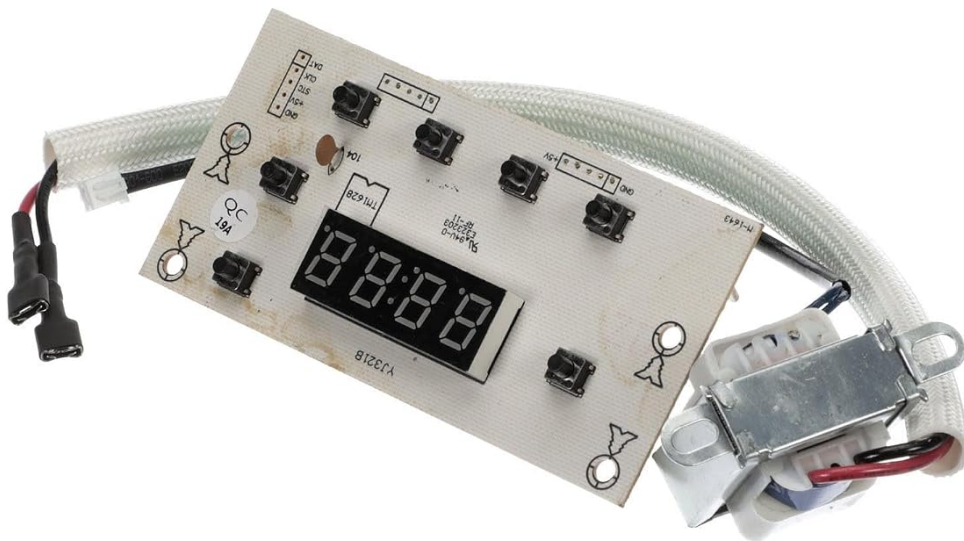


Figure 1: Front view of the Globe Timer Assembly (240V) with its digital display and control buttons clearly visible. This image illustrates the primary user interface of the timer.

2. SAFETY INFORMATION

WARNING: Electrical components can cause serious injury or death. Installation and servicing should only be performed by qualified personnel.

- Always disconnect power to the appliance before installing, servicing, or removing the timer assembly.
- Ensure all wiring connections are secure and comply with local electrical codes.
- Do not operate the appliance if the timer assembly or any other electrical component is damaged.
- This timer assembly operates at 240V. Verify compatibility with your appliance's electrical system before installation.
- Keep hands and tools clear of live electrical circuits.

3. SETUP AND INSTALLATION

This timer assembly is a replacement part. Installation should be performed by a certified technician or qualified service personnel familiar with the specific Globe appliance it is intended for.

1. **Power Disconnection:** Ensure the appliance is completely disconnected from its power source.
2. **Access:** Carefully open the appliance's control panel or housing to access the existing timer assembly. Refer to your appliance's specific service manual for detailed access instructions.
3. **Removal:** Disconnect all wiring from the old timer assembly, noting the position and color coding of each wire. Take photographs if necessary for reference. Remove any mounting screws or clips securing the old assembly.
4. **Installation:** Position the new Globe Timer Assembly (U01781) in the same location as the old one. Secure it with the appropriate mounting hardware.
5. **Wiring:** Reconnect all wires to the new timer assembly, ensuring each connection matches the original configuration. Double-check all connections for security and proper insulation.
6. **Closure:** Carefully close and secure the appliance's control panel or housing.
7. **Testing:** Reconnect power to the appliance and perform a functional test of the timer.

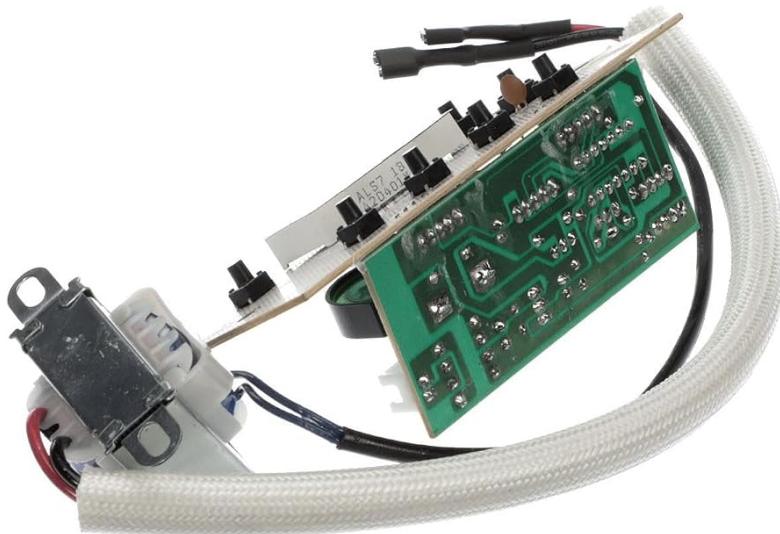


Figure 2: Side view of the timer assembly, highlighting the circuit board and various wiring connection points. This perspective is useful for understanding the electrical interfaces during installation.

4. OPERATING INSTRUCTIONS

The operation of the Globe Timer Assembly (U01781) is integrated into the specific appliance it is installed in. Refer to the user manual of your Globe appliance for detailed instructions on how to set, start, and stop the timer functions.

Generally, timer functions involve:

- **Setting Time:** Using dedicated buttons (e.g., "Up", "Down", "Set") to adjust the desired duration.
- **Starting Timer:** Initiating the countdown or timed operation.
- **Stopping/Pausing:** Interrupting or ending a timed cycle.
- **Display:** The digital display will show the remaining time or current settings.



Figure 3: An angled view of the timer assembly, providing a clearer look at the digital display, control buttons, and the integrated transformer. This view helps in identifying user interface elements.

5. MAINTENANCE

The Globe Timer Assembly (U01781) is designed for durability and requires minimal maintenance. However, proper

care can extend its lifespan and ensure continued reliable operation.

- **Cleaning:** If accessible, gently wipe the surface of the timer assembly with a dry, soft cloth. Do not use abrasive cleaners, solvents, or excessive moisture, as these can damage electronic components.
- **Inspection:** Periodically inspect the wiring and connections for any signs of wear, damage, or looseness. Address any issues promptly by a qualified technician.
- **Environment:** Ensure the appliance's operating environment is free from excessive dust, moisture, and extreme temperatures, which can negatively impact electronic components.

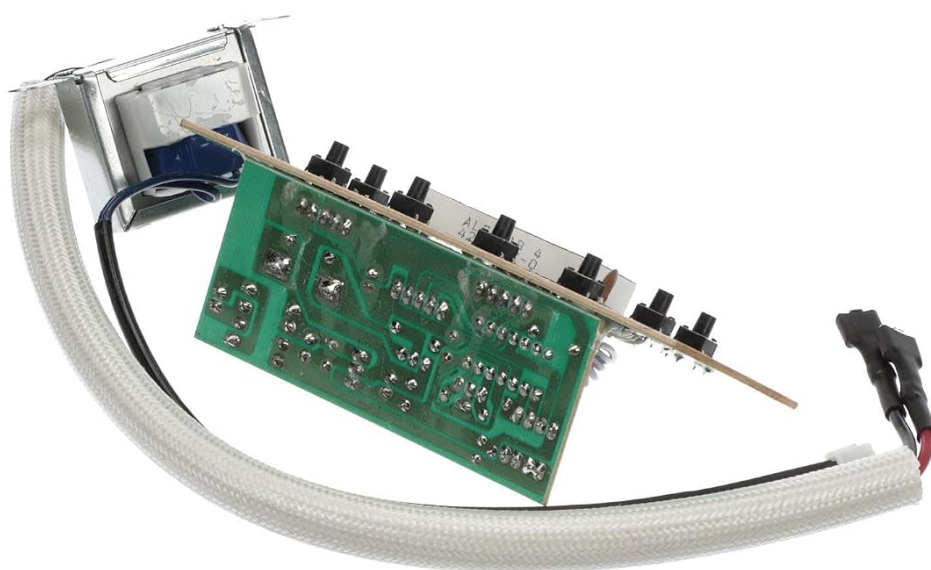


Figure 4: Rear view of the timer assembly, revealing the green circuit board with its various electronic components and solder points. This view is primarily for technical reference during servicing.

6. TROUBLESHOOTING

If you experience issues with the timer function after installing the Globe Timer Assembly (U01781), consider the following common troubleshooting steps. For complex issues, contact a qualified service technician.

- **Timer Not Functioning:**

- Verify the appliance is receiving power.
- Check all wiring connections to the timer assembly for looseness or incorrect placement.
- Ensure the timer settings are correctly configured according to your appliance's manual.

- **Incorrect Time Display:**

- Attempt to reset the timer or power cycle the appliance.
- Confirm the power supply to the timer is stable (240V).

- **Intermittent Operation:**

- Inspect for any loose connections or signs of damage to the assembly or its wiring.
- Ensure the appliance's internal environment is not causing overheating or interference.

If troubleshooting steps do not resolve the issue, professional diagnosis and repair may be necessary.

7. SPECIFICATIONS

Feature	Detail
Brand	Globe
Model Number	U01781
Product Type	Timer Assembly
Voltage	240V
Material	Metal, Plastic
Item Weight	16 ounces (1.0 Pounds)
Product Dimensions	5 x 6 x 9 inches (L x W x H)
Manufacturer	Globe

8. WARRANTY AND SUPPORT

As a genuine OEM part, the Globe Timer Assembly (U01781) is typically covered by the warranty of the original Globe appliance it is installed in, or by a specific OEM parts warranty provided by Globe. Please refer to your appliance's warranty documentation or contact Globe customer support for specific warranty terms and conditions.

For technical support, replacement parts, or service inquiries, please contact Globe directly through their official channels. Using non-OEM parts may void your appliance's warranty and compromise its safety and performance.

Globe Contact Information: Refer to the official Globe website or your appliance's documentation for the most current contact details.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BQSMFJRD>

More documents and user manuals: <https://manuals.plus/>