

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [UTALENT](#) /

› [UTALENT Cordless Hand Blender Instruction Manual](#)

## UTALENT TL6001

# UTALENT Cordless Hand Blender

Model: TL6001

## INTRODUCTION

Thank you for choosing the UTALENT Cordless Hand Blender. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new appliance. Please read it thoroughly before first use and keep it for future reference.

## IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons.

- Read all instructions before using the appliance.
- Do not immerse the motor body in water or other liquids. Only the blender arm and egg whisk are dishwasher-safe.
- Keep hands, hair, clothing, and utensils away from moving parts during operation to prevent injury.
- Ensure the appliance is switched off and unplugged (if applicable) before assembling, disassembling, or cleaning.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- Use only attachments recommended or sold by the manufacturer.
- Exercise extreme caution when handling sharp blades.

## PACKAGE CONTENTS

Your UTALENT Cordless Hand Blender package includes the following items:

- 1 x Motor Body (Main Unit)
- 1 x Detachable 8" Blender Arm
- 1 x Egg Whisk Attachment
- 1 x USB-C Charging Cable





Image: The complete UTALENT Cordless Hand Blender set, including the main motor unit, the immersion blender arm, the egg whisk attachment, and the USB-C charging cable.

## PRODUCT OVERVIEW

---

Familiarize yourself with the components of your UTALENT Cordless Hand Blender:

- **Motor Body:** Contains the rechargeable battery, motor, and control buttons.
- **Power Unlock Button:** Prevents accidental activation.
- **Variable Speed Trigger Switch:** Allows for precise speed control.
- **Battery Indicator Lights:** LED lights display the current battery level and charging status.
- **USB-C Charging Port:** For connecting the charging cable.
- **Blender Arm:** Detachable 8-inch arm with 4-point thickened stainless steel blades for blending.
- **Egg Whisk:** Attachment for whisking eggs, cream, and other ingredients.





**Blender**



**Whisk**

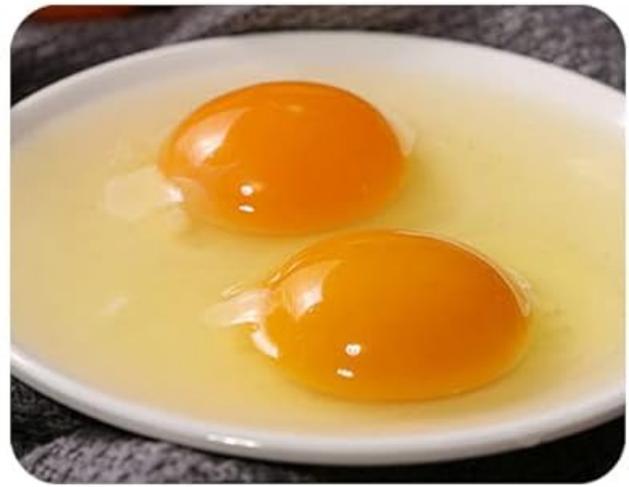


Image: The main blender unit with its two primary attachments: the immersion blender arm and the egg whisk.



Image: A close-up view illustrating how the detachable blender arm connects to the main motor body.

## SETUP AND CHARGING

---

Before first use, ensure the blender is fully charged.

1. **Initial Charge:** Connect the USB-C charging cable to the charging port on the motor body and plug the other end into a compatible USB power adapter (not included). The battery indicator lights will illuminate to show charging progress. A full charge takes approximately 3.5 hours.
2. **Battery Indicator:** The LED lights on the top of the motor body indicate the battery level. They will provide light reminders at different power levels and signal when charging is required.
3. **Attaching Accessories:** Align the desired attachment (blender arm or egg whisk) with the motor body and twist until it locks securely into place. Ensure it is firmly attached before use.

**None cord, Full Power**  
**Full charge in 3.5h**  
**Running 25-30 min**



Image: Visual representation of the blender's cordless nature, indicating a full charge in 3.5 hours and a running time of 25-30 minutes.

## **OPERATING INSTRUCTIONS**

The UTALENT Cordless Hand Blender is designed for versatile use in your kitchen.

### **General Operation**

1. **Power On:** Press and hold the Power Unlock button, then press the Variable Speed Trigger Switch to start the blender. Release the Power Unlock button once the blender is running.
2. **Speed Control:** The Variable Speed Trigger Switch allows you to control the blending speed. Press lightly for lower speeds and press harder for higher speeds.
3. **Power Off:** Release the Variable Speed Trigger Switch to turn off the blender.

## Using the Blender Arm

The blender arm is ideal for making smoothies, milkshakes, soups, hummus, and baby food.

1. Attach the blender arm securely to the motor body.
2. Place the ingredients in a suitable container. For best results, ensure liquids cover the blades.
3. Immerse the blender arm into the ingredients.
4. Press the Power Unlock button and then the Variable Speed Trigger Switch to begin blending. Move the blender up and down gently to ensure all ingredients are processed evenly.
5. Blend until desired consistency is achieved.



Image: A user demonstrating the immersion blending function directly in a cooking pot.



Image: An illustrative diagram showcasing the versatility of the blender for preparing smoothies, baby food, sauces, soups, whipped cream, and egg whites.

## Using the Egg Whisk

The egg whisk is perfect for beating eggs, whipping cream, and preparing light batters.

1. Attach the egg whisk securely to the motor body.
2. Place the ingredients in a bowl.
3. Immerse the whisk into the ingredients.
4. Press the Power Unlock button and then the Variable Speed Trigger Switch to begin whisking.
5. Whisk until desired consistency is achieved.

Your browser does not support the video tag.

Video: An official demonstration of the UTALENT 2-in-1 Cordless Immersion Blender, showcasing both blending and whisking functions.

This video highlights the ease of use and versatility of the appliance for various kitchen tasks.

## MAINTENANCE AND CLEANING

Proper cleaning and maintenance will extend the life of your UTALENT Cordless Hand Blender.

- **Before Cleaning:** Always ensure the blender is turned off and disconnected from the charging cable.
- **Detachable Parts:** The blender arm and egg whisk are dishwasher-safe. Alternatively, they can be washed by hand with warm, soapy water. Rinse thoroughly and dry immediately.
- **Motor Body:** Wipe the motor body with a damp cloth. Do not immerse the motor body in water or any other liquid.
- **Storage:** Store the blender and its attachments in a dry place, away from direct sunlight and heat.

## TROUBLESHOOTING

If you encounter issues with your UTALENT Cordless Hand Blender, refer to the following common problems and solutions:

| Problem                                | Possible Cause  | Solution  |
|--|---|---|
| Blender does not turn on.              | Battery is low or depleted.<br>Power Unlock button not pressed correctly.<br>Attachment not securely connected. | Charge the battery fully.<br>Ensure the Power Unlock button is pressed before the trigger switch.<br>Re-attach the blender arm or whisk until it clicks into place. |
| Blender stops during operation.        | Battery is low.<br>Overload protection activated.   | Recharge the battery.<br>Reduce the amount of ingredients or add more liquid. Allow the motor to cool down before restarting.                                       |
| Ingredients are not blending smoothly. | Insufficient liquid.<br>Too many ingredients.<br>Ingredients are too large.                                     | Add more liquid.<br>Process smaller batches.<br>Cut ingredients into smaller pieces before blending.  |

## SPECIFICATIONS

| Feature            | Detail   |
|--------------------|--|
| Model Number       | TL6001   |
| Brand              | UTALENT  |
| Color              | Black  |
| Power Source       | Battery Powered (1 Lithium Ion battery required) |
| Voltage            | 12 Volts (DC)                                    |
| Charging Time      | Approx. 3.5 hours (USB-C)                        |
| Running Time       | Approx. 25-30 minutes (or 60 bowls of soup)      |
| Blender Arm Length | 8 inches   |

| Feature            | Detail                                      |
|--------------------|---|
| Blade Material     | Stainless Steel (4-point thickened blades)  |
| Product Dimensions | 2.2"D x 2"W x 16"H                          |
| Item Weight        | 1.9 pounds                                  |
| Material Type Free | BPA Free                                    |
| Controls Type      | Push Button (Variable Speed Trigger Switch) |

## WARRANTY AND SUPPORT

Your UTALENT Cordless Hand Blender comes with a **1 Year Limited Warranty** from the date of purchase. This warranty covers defects in material and workmanship under normal use.

For warranty claims, technical support, or any questions regarding your product, please contact UTALENT customer service through the retailer where you purchased the product or visit the official UTALENT website for contact information. Please retain your proof of purchase for warranty purposes.