

[Manuals.plus](#) /

› [Winnes](#) /

› Winnes Bluetooth 5.0 Soundbar User Manual - Model DA21B11302

Winnes DA21B11302

Winnes Bluetooth 5.0 Soundbar User Manual

Model: DA21B11302

1. INTRODUCTION

Thank you for choosing the Winnes Bluetooth 5.0 Soundbar. This soundbar is designed to enhance your audio experience for various devices, including TVs, PCs, projectors, and mobile phones. It features Bluetooth 5.0 connectivity, multiple wired input options, and three equalizer modes for optimized sound. Please read this manual carefully before use to ensure proper operation and to maximize your enjoyment of the product.

2. PACKAGE CONTENTS

Please check the package for the following items:

- 1 x Winnes Bluetooth Soundbar
- 1 x Remote Control
- 1 x Power Cable
- 1 x 3.5mm Audio Cable
- 1 x Optical Audio Cable
- 1 x User Manual (this document)

Wired and Wireless Connection

Pairs via Bluetooth or multiple wired interfaces

HDMI input

Coaxial input

Optical input

3.5 mm auxiliary

USB input

Power input

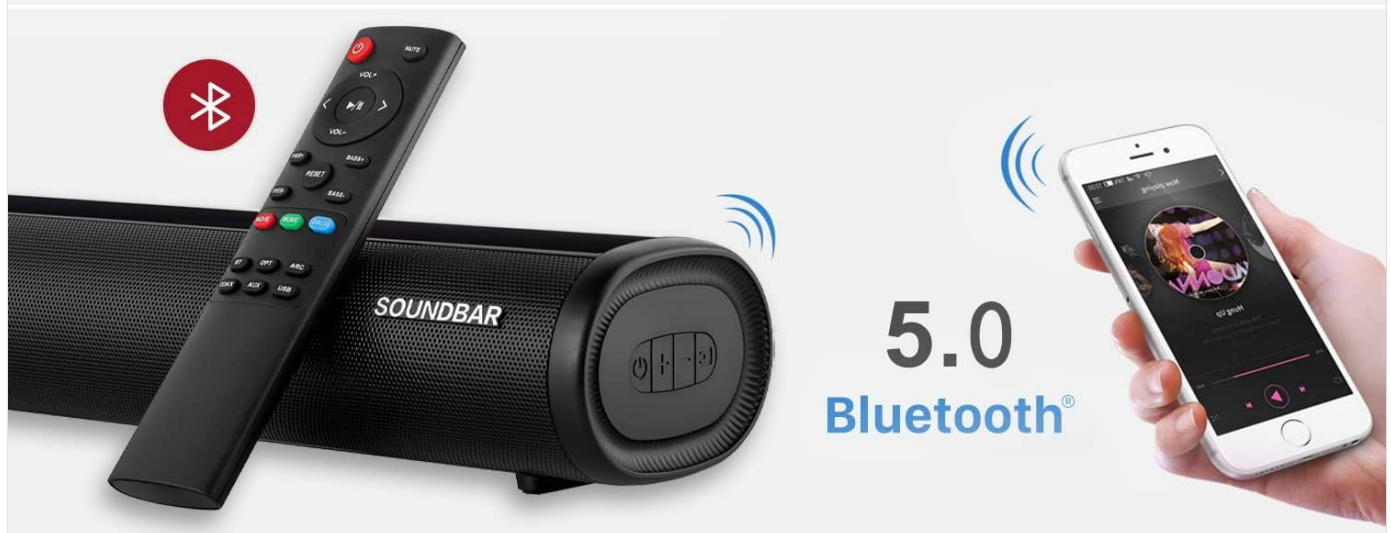 


Figure 2.1: Package Contents. This image displays the soundbar along with its included accessories: a remote control, a power adapter, a 3.5mm audio cable, and an optical audio cable.

3. PRODUCT OVERVIEW

3.1. Controls and Indicators

The soundbar can be controlled using the included infrared remote control or the buttons located on the unit itself. An RGB tricolor LED indicator provides status information.

Two types of control



Figure 3.1: Control Options. This image illustrates the two methods of controlling the soundbar: via the physical buttons on the unit and through the dedicated remote control.

3.2. Input Ports

The rear panel of the soundbar features various input ports for connecting to different audio sources:

- **HDMI (ARC):** For high-quality digital audio connection to compatible TVs.
- **Coaxial Input:** For digital audio connection.
- **Optical Input:** For digital audio connection.
- **AUX Input (3.5mm):** For analog audio connection from devices with a headphone jack.
- **USB Input:** For playing audio files from a USB drive.
- **DC Power Input:** For connecting the power adapter.

Audio Enhancements

Switch freely with one button on the remote control

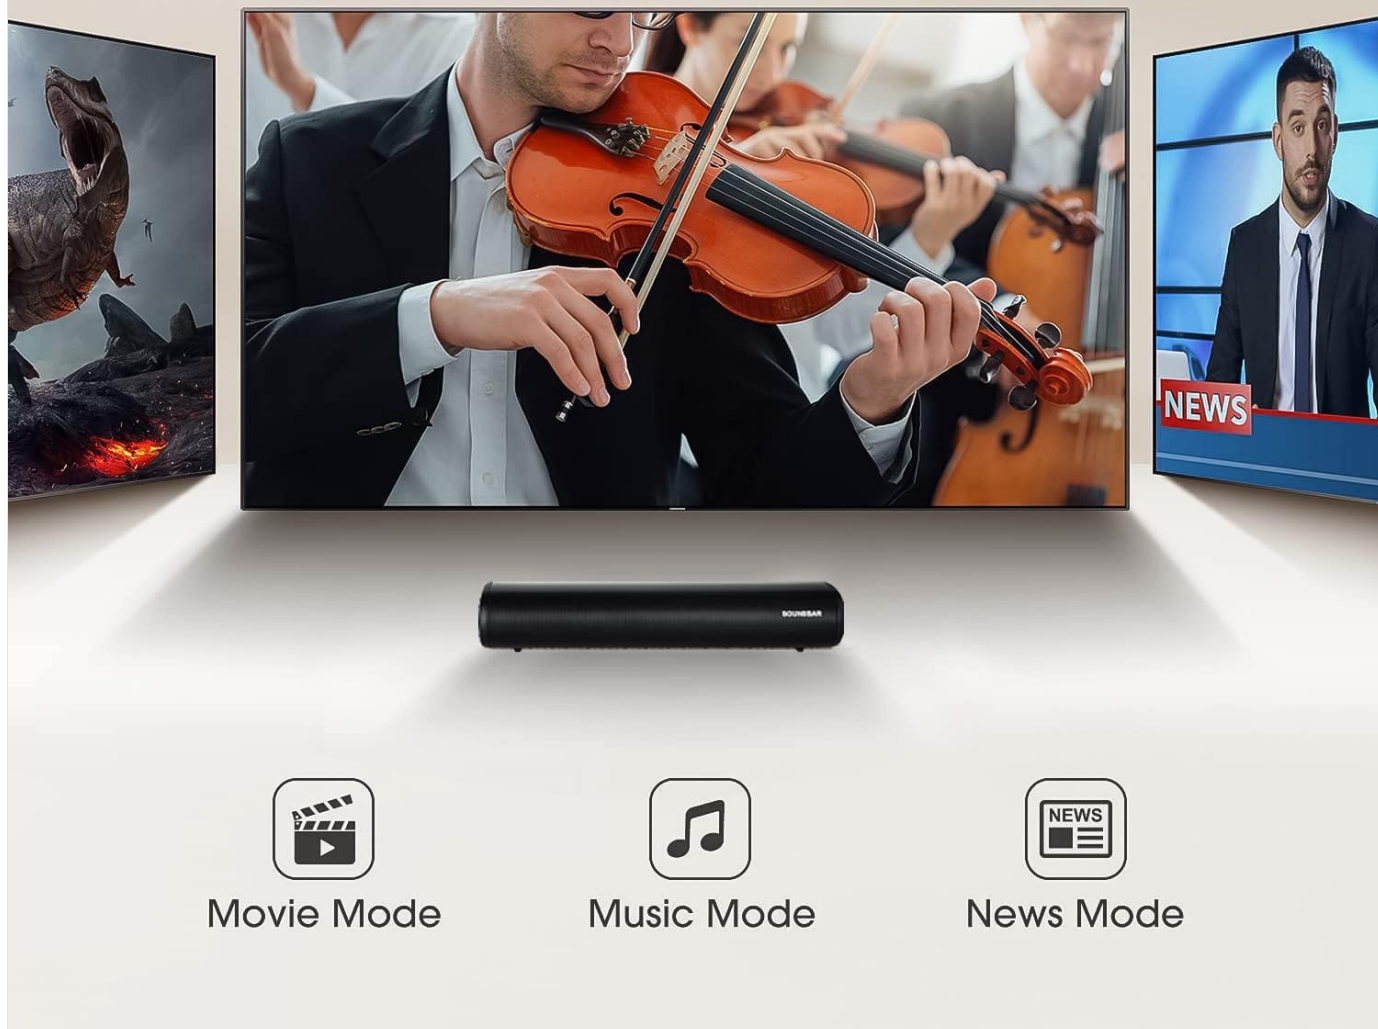 


Figure 3.2: Rear Panel Connections. This image provides a detailed view of the soundbar's input ports, including HDMI ARC, Coaxial, Optical, AUX, USB, and the DC power input.

4. SETUP

4.1. Placement

The soundbar can be placed on a TV stand or mounted on a wall. Ensure it is positioned centrally in front of your TV for the best audio experience.

Compact size and powerful sound

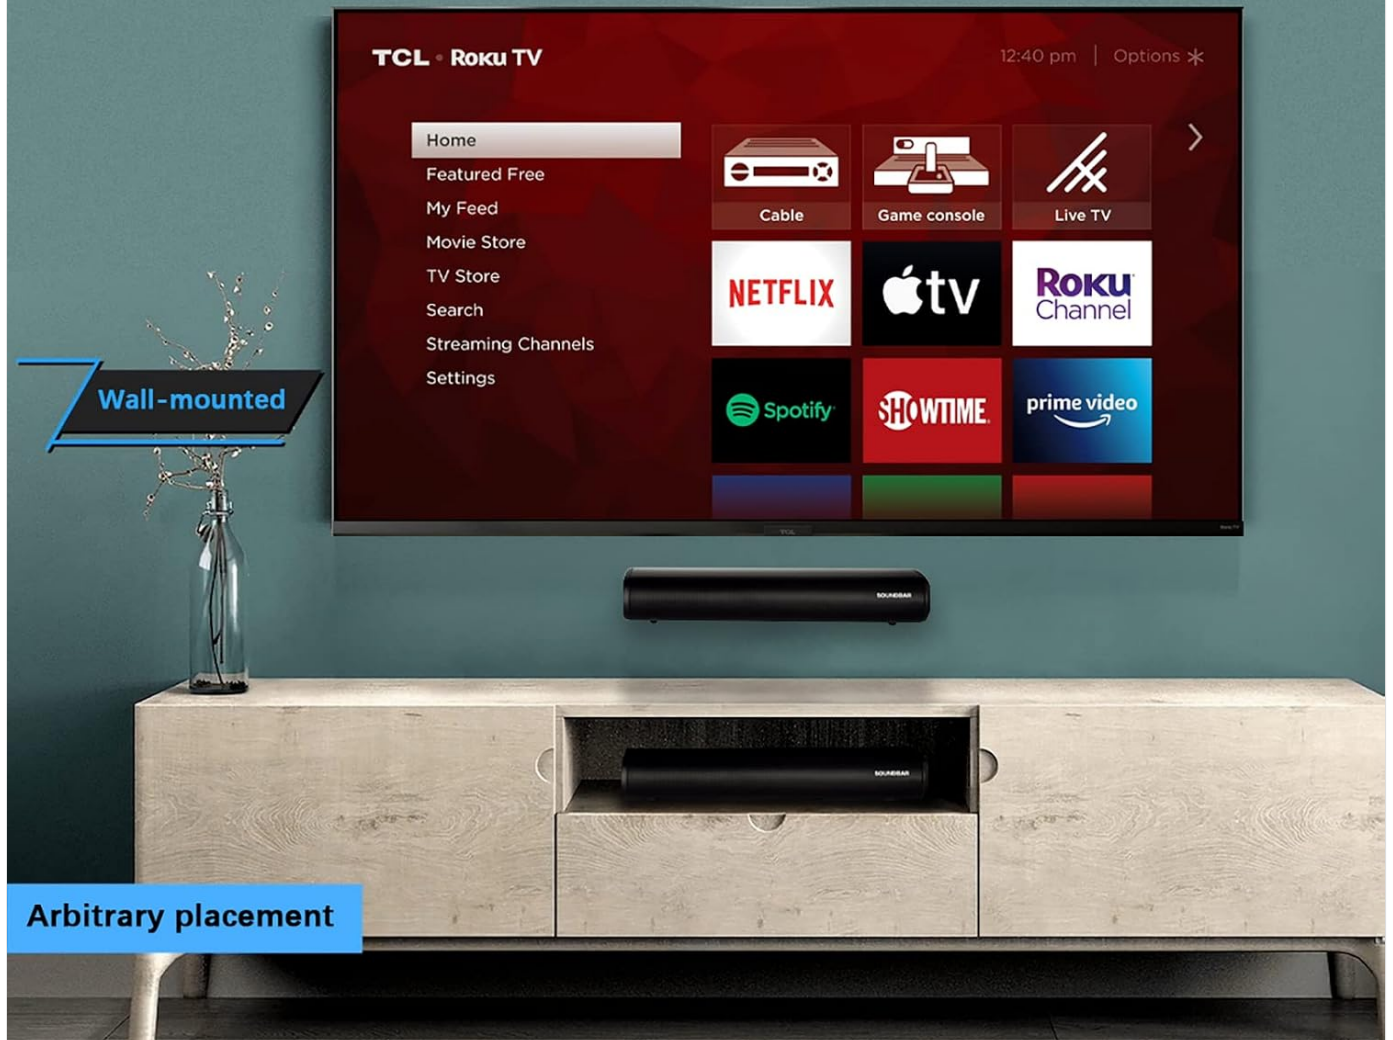 


Figure 4.1: Flexible Placement Options. This image demonstrates how the soundbar can be placed on a TV cabinet or mounted on the wall below a television.

4.2. Power Connection

1. Connect the power adapter to the DC Power Input port on the soundbar.
2. Plug the power adapter into a wall outlet.
3. The soundbar will enter standby mode, indicated by the LED.

5. OPERATING INSTRUCTIONS

5.1. Bluetooth Connection

To connect your mobile device via Bluetooth:

1. Turn on the soundbar.
2. Press the 'Mode' button on the remote control or the soundbar until the LED indicator shows blue, indicating Bluetooth mode.
3. On your mobile device, enable Bluetooth and search for available devices.
4. Select "Winnes Soundbar" from the list to pair.
5. Once connected, the LED will remain solid blue, and you can play audio from your device.



2.0 Channel

CRYSTAL-CLEAR DIALOGUE

Figure 5.1: Bluetooth 5.0 Wireless Connection. This image shows a smartphone successfully paired with the soundbar using Bluetooth technology.

5.2. Wired Connections

Connect your devices using the appropriate cables to the soundbar's input ports. Press the 'Mode' button on the remote or soundbar to select the corresponding input (e.g., AUX, Optical, HDMI ARC, Coaxial, USB).

- **Optical/Coaxial:** For digital audio from TVs, DVD players, etc.
- **HDMI ARC:** For digital audio from compatible TVs, allowing TV remote control of soundbar volume.

- **AUX:** For analog audio from devices with a 3.5mm output.
- **USB:** Insert a USB drive with audio files. The soundbar will automatically detect and play the files.

5.3. EQ Modes

The soundbar features three preset equalizer modes to optimize audio for different content types. Use the 'EQ' button on the remote control to switch between modes:

- **Movie Mode:** Enhances bass and surround effects for cinematic experiences.
- **Music Mode:** Provides balanced audio for music playback.
- **News Mode:** Optimizes vocal clarity for news, podcasts, and dialogue-heavy content.



Figure 5.2: Audio Enhancement Modes. This image illustrates the three available EQ modes: Movie, Music, and News, which can be switched via the remote control for different listening experiences.

6. MAINTENANCE

To ensure the longevity and optimal performance of your Winnes Soundbar, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the soundbar. Do not use liquid cleaners or abrasive materials.
- **Placement:** Avoid placing the soundbar in direct sunlight, near heat sources, or in areas with high humidity.
- **Ventilation:** Ensure adequate airflow around the soundbar to prevent overheating.
- **Power:** Disconnect the power cable during lightning storms or when the unit will be unused for extended periods.

7. TROUBLESHOOTING

If you encounter issues with your soundbar, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Power cable not connected; Power outlet not working	Ensure power cable is securely connected; Try a different power outlet.
No sound	Incorrect input mode selected; Volume too low; Audio cable not connected properly	Select the correct input mode; Increase volume; Check audio cable connections.
Bluetooth pairing failed	Soundbar not in Bluetooth mode; Device too far; Interference	Ensure soundbar is in Bluetooth mode; Move device closer; Restart both devices.
Remote control not working	Batteries depleted; Obstruction between remote and soundbar	Replace remote control batteries (1 AAA battery required); Remove any obstructions.

8. SPECIFICATIONS

Model Number	DA21B11302
Material	PVC + ABS + Metallic Mesh
Sound Channel	2.0 Channels (Left + Right)
Output Power	15W * 2
Signal-to-Noise Ratio	≥80dB
Distortion	<1%
Frequency Range	50 Hz - 18 KHz
Speaker Unit	58.5mm * 58.5mm Full-range speaker (2.3 inch / 6Ω * 2)
Input Voltage	DC19V / 1.89A
Status Indication	RGB Tricolor LED

Control Mode	Infrared Remote Control / Panel Buttons
Input Modes	Bluetooth, Optical, AUX, USB, Coaxial, HDMI (ARC)
Product Dimensions (L x W x H)	410mm x 95mm x 73mm (41 x 9.5 x 7.3 cm)
Product Weight	1.05 kg
Power Supply	19V/1.26A AC:100-240V/50-60Hz

9. WARRANTY AND SUPPORT

The Winnes Soundbar comes with a **one-year warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use.

For technical support, warranty claims, or any questions regarding your product, please contact our customer service team:

- **WhatsApp Support:** [+8613517470657](#)

Please have your product model number (DA21B11302) and purchase information ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BQV4CP6H>

More documents and user manuals: <https://manuals.plus/>