

VGR V-682

VGR V-682 Professional Cordless Beard and Hair Trimmer

User Manual

1. IMPORTANT SAFETY INSTRUCTIONS

To ensure safe operation and prevent injury or damage, please read all instructions carefully before using the VGR V-682 trimmer. Keep this manual for future reference.

- **Avoid Water:** Do not use this appliance near bathtubs, showers, basins, or other vessels containing water.
- **Sensitive Areas:** Do not use the trimmer on infants or sensitive skin areas.
- **Blade Caution:** Exercise caution when handling the blades. They are sharp and can cause injury if not handled properly.
- **Unplug When Not in Use:** Always unplug the trimmer from the power source when not in use, before cleaning, or before attaching/detaching parts.
- **Head Protector:** Always use the head protector when storing or transporting the trimmer to prevent blade damage and accidental activation.
- **Lubrication:** Regularly apply lubricating oil to the blades as instructed in the maintenance section to ensure optimal performance and longevity.
- **Children:** Keep the appliance out of reach of children. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

2. PRODUCT OVERVIEW

The VGR V-682 is a professional-grade cordless beard and hair trimmer designed for precision grooming. It features a powerful yet quiet motor, a long-lasting rechargeable battery, and high-quality stainless steel blades. The ergonomic design ensures comfortable handling for both professional and home use.



Image 2.1: VGR V-682 Trimmer, charging dock, guide combs, charging cable, cleaning brush, and lubricating oil.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- VGR V-682 Hair Clipper
- Head Protector
- Charging Cable (USB)
- Lubricating Oil

- Cleaning Brush
- Guide Combs (various sizes)
- User Manual

4. SETUP AND CHARGING

4.1 Initial Charge

Before first use, fully charge the trimmer. Connect the charging cable to the trimmer and a suitable USB power adapter (not included). The display will indicate charging status. A full charge from 0% to 100% takes approximately 180 minutes.

4.2 Attaching Guide Combs

Select the desired guide comb for your preferred hair length. Align the comb with the trimmer blade and push it firmly until it clicks into place. Ensure it is securely attached before use.



Image 4.1: VGR V-682 Trimmer demonstrating different guide comb lengths (1.5mm, 3mm, 4.5mm, 6mm, 9mm, 12mm).

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off

Press the power button to turn the trimmer on. Press it again to turn it off. The LED display will show the battery percentage and RPM.

5.2 Trimming Hair/Beard

1. Ensure hair is clean and dry.
2. Attach the appropriate guide comb for your desired length.
3. Hold the trimmer with the blades pointing upwards or downwards, depending on the area being trimmed.
4. Move the trimmer against the direction of hair growth for an even cut.
5. For detailing or outlining, remove the guide comb and use the bare blade carefully.

5.3 Blade Adjustment Lever

The trimmer features an adjustable taper lever on the side, allowing for fine-tuning of cutting lengths without changing guide combs. Move the lever up for a shorter cut and down for a longer cut.



Image 5.1: Close-up view of the VGR V-682 trimmer's power button and digital display.

6. MAINTENANCE

6.1 Cleaning the Blades

1. Turn off the trimmer and unplug it from any power source.
2. Carefully remove the guide comb.
3. Use the provided cleaning brush to remove loose hairs from the blades and the trimmer head.
4. The blades can be rinsed under running water. Ensure the trimmer body does not get wet, as it is not fully waterproof. Dry the blades thoroughly before reattaching or storing.

6.2 Oiling the Blades

After each cleaning or at least once a month, apply a few drops of the provided lubricating oil to the blades. Turn the trimmer on for a few seconds to distribute the oil evenly. This helps maintain blade sharpness and smooth operation.

7. TROUBLESHOOTING

- **Trimmer not turning on:** Ensure the battery is charged. Connect the trimmer to the charging cable and allow it to charge for at least 30 minutes before attempting to power it on again.
- **Blades pulling hair:** The blades may be dull or not properly oiled. Clean and oil the blades as described in the maintenance section. If the issue persists, consider professional blade sharpening or replacement.
- **Reduced battery life:** Ensure the trimmer is fully charged before each use. Over time, battery capacity may decrease. If battery life becomes significantly short, contact customer support for assistance.
- **Excessive noise or vibration:** This could indicate a foreign object caught in the blades or a need for lubrication. Clean and oil the blades. If the problem continues, discontinue use and contact support.

8. SPECIFICATIONS

Feature	Detail
Model	V-682
Brand	VGR
Power Source	Battery Powered
Battery Type	1 Lithium Ion Battery (required)
Battery Capacity	2500 mAh (up to 300 minutes run time)
Charging Time	Approx. 180 minutes (0% to 100%)
Blade Material	Stainless Steel
Special Features	Cordless
Product Dimensions	20 x 9 x 9 cm
Item Weight	980 grams
Recommended Use	Beard, Moustache, All Hair Types
Target Audience	Men
Color	Green
UPC	710859021100

9. WARRANTY AND SUPPORT

9.1 Warranty Information

The VGR V-682 trimmer comes with a 30-day money-back guarantee if you are not completely satisfied. Additionally, a warranty for up to 12 months is provided for replacement or repair in case of manufacturing defects.

Please retain your proof of purchase for warranty claims.

9.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact VGR customer support through the retailer where the product was purchased or visit the official VGR website for contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question