

[Manuals.plus](#) /

› [Skechers](#) /

› Skechers Women's Crenshaw Silicone Digital Watch SR2132 User Manual

Skechers SR2132

Skechers Women's Crenshaw Silicone Digital Watch SR2132 User Manual

Model: SR2132

INTRODUCTION

This manual provides comprehensive instructions for the Skechers Women's Crenshaw Silicone Digital Watch, Model SR2132. Please read this manual carefully to ensure proper use and maintenance of your watch. This digital watch features time display, date, and stopwatch functionality.



Figure 1: Front view of the Skechers Crenshaw Digital Watch (Model SR2132).

WATCH COMPONENTS

Familiarize yourself with the buttons on your watch:

- **LIGHT Button:** Activates the backlight.
- **MODE Button:** Cycles through different modes (Time, Stopwatch, Alarm).
- **START Button:** Used to start/stop functions in stopwatch mode, or adjust settings.
- **RESET Button:** Used to reset functions in stopwatch mode, or adjust settings.





Figure 2: Side view illustrating the watch buttons.

SETUP

Setting Time and Date

1. In normal time display mode, press the **MODE** button three times to enter time setting mode. The seconds will begin to flash.
2. Press the **RESET** button to set the seconds to zero.
3. Press the **START** button to move to the hour setting.
4. Press the **RESET** button to adjust the hour. Pay attention to AM/PM indicators if present.
5. Press the **START** button to move to the minute setting.
6. Press the **RESET** button to adjust the minutes.
7. Continue pressing **START** to cycle through year, month, and day settings, adjusting each with the **RESET** button.
8. Once all settings are complete, press the **MODE** button to return to normal time display.

OPERATING INSTRUCTIONS

Using the Backlight

Press the **LIGHT** button to illuminate the display for a few seconds. This is useful in low-light conditions.

Using the Stopwatch

1. From normal time display, press the **MODE** button once to enter stopwatch mode. The display will show "00:00:00".
2. Press the **START** button to begin timing.
3. Press the **START** button again to pause timing.
4. Press the **RESET** button to clear the stopwatch to "00:00:00".
5. To resume timing after pausing, press the **START** button.
6. To exit stopwatch mode, press the **MODE** button.

Setting and Using the Alarm

1. From normal time display, press the **MODE** button twice to enter alarm setting mode. The hour digits will flash.
2. Press the **RESET** button to adjust the alarm hour.
3. Press the **START** button to move to the minute setting.
4. Press the **RESET** button to adjust the alarm minutes.
5. Press the **MODE** button to confirm the alarm setting and return to normal time display.
6. To activate/deactivate the alarm, in normal time display, press and hold the **RESET** button, then press the **START** button. An alarm icon will appear/disappear on the display.

MAINTENANCE

Water Resistance

This watch is water resistant to 50 meters (5 ATM / 165 feet). This means it is suitable for short periods of recreational swimming and showering. It is **not** suitable for diving or snorkeling. Do not operate buttons while the watch is wet or submerged, as this can compromise the water resistance.

Cleaning

To clean your watch, wipe it with a soft, dry cloth. For silicone bands, a damp cloth with mild soap can be used, followed by thorough drying. Avoid using harsh chemicals or abrasive materials.

Battery Replacement

The watch uses 1 Lithium Ion battery (included). When the display becomes dim or functions become erratic, the battery may need replacement. Battery replacement should ideally be performed by a qualified watch technician to ensure proper sealing and maintain water resistance.

TROUBLESHOOTING

- **Display is blank or dim:** The battery may be low or depleted. Replace the battery.
- **Buttons are unresponsive:** Ensure the watch is not in a locked mode (if applicable, though not specified for this model). If the issue persists, the battery may be low, or there could be an internal malfunction.
- **Time is incorrect:** Re-set the time following the "Setting Time and Date" instructions. Ensure AM/PM is correctly set.
- **Water inside the watch:** Immediately cease use and take the watch to a qualified technician. Water damage is typically not covered under warranty.

SPECIFICATIONS

Feature	Detail
Model Number	SR2132
Case Size	42mm
Band Size	18mm
Movement	Digital

Water Resistance	50m (5 ATM / 165ft)
Battery Type	1 Lithium Ion (included)
Case Material	Polyurethane
Band Material	Silicone
Manufacturer	Skechers

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Skechers website. You can also visit the [Skechers Store on Amazon](#) for more product details and support resources.



Figure 3: Skechers product packaging.

© 2023 Skechers. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question