

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Honda](#) /
- › [2005 Honda Civic Sedan Owner's Manual](#)

Honda M02B15007

2005 Honda Civic Sedan Owner's Manual

Model: M02B15007

INTRODUCTION

This owner's manual is an essential guide for understanding the operation and maintenance of your 2005 Honda Civic Sedan. It contains important information regarding safety, vehicle features, driving procedures, and routine care to ensure a safe and enjoyable driving experience. Please read this manual thoroughly to familiarize yourself with your vehicle's capabilities and requirements.



Front cover of the 2005 Honda Civic Sedan Owner's Manual. The cover features the Honda logo, the text '2005 Owner's Manual', and 'Civic Sedan'.

GETTING STARTED

Before operating your vehicle, it is recommended to review the basic controls and indicators. This section provides an overview of key components and their functions, helping you to quickly become acquainted with your Civic Sedan.


- **Dashboard Indicators:** Understand the meaning of warning lights and indicators on your instrument panel.
- **Ignition Switch:** Learn the positions of the ignition switch (LOCK, ACCESSORY, ON, START) and their corresponding functions.
- **Seat and Mirror Adjustments:** Proper adjustment of seats and mirrors is crucial for comfort and visibility.

OPERATING YOUR VEHICLE

This section details the procedures for operating various features of your 2005 Honda Civic Sedan, from basic driving controls to convenience features.

Power Windows and Moonroof

Your vehicle is equipped with power windows and, depending on the model, a power moonroof. Always ensure clear operation and be aware of surroundings when using these features.

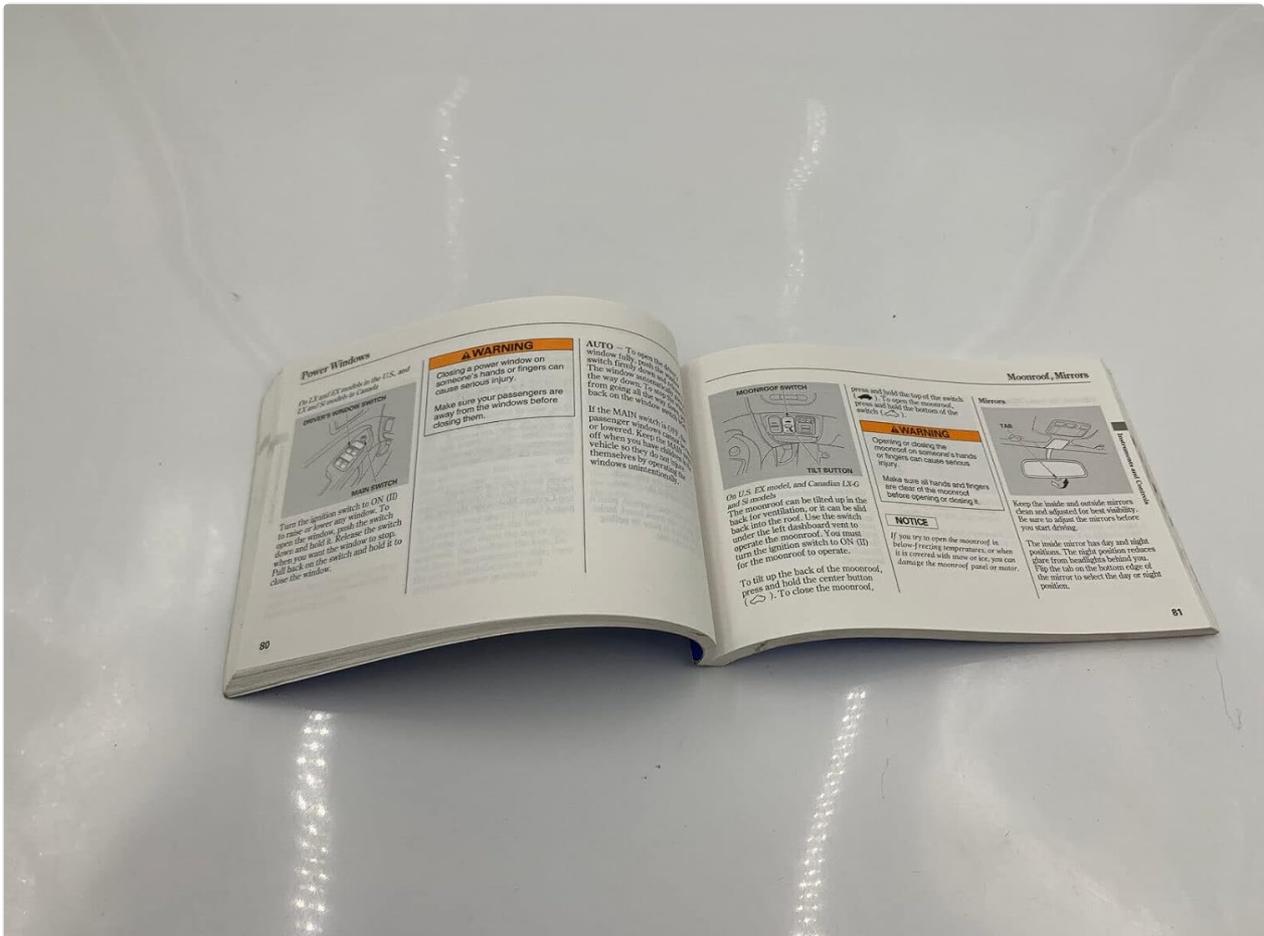


An open page from the owner's manual illustrating the controls for power windows and the moonroof. It includes diagrams of the switches and instructions for operation, along with safety warnings regarding entrapment.

- **Power Window Operation:** Use the switches on the driver's door to control all windows. The driver's window may have an auto-up/down feature.

- **Moonroof Operation:** If equipped, use the moonroof switch to open, close, or tilt the moonroof.
- **Mirrors:** Adjust the side mirrors using the control switch located on the driver's side.

Automatic Transmission

Understanding the automatic transmission and gear selector is crucial for smooth and safe driving.

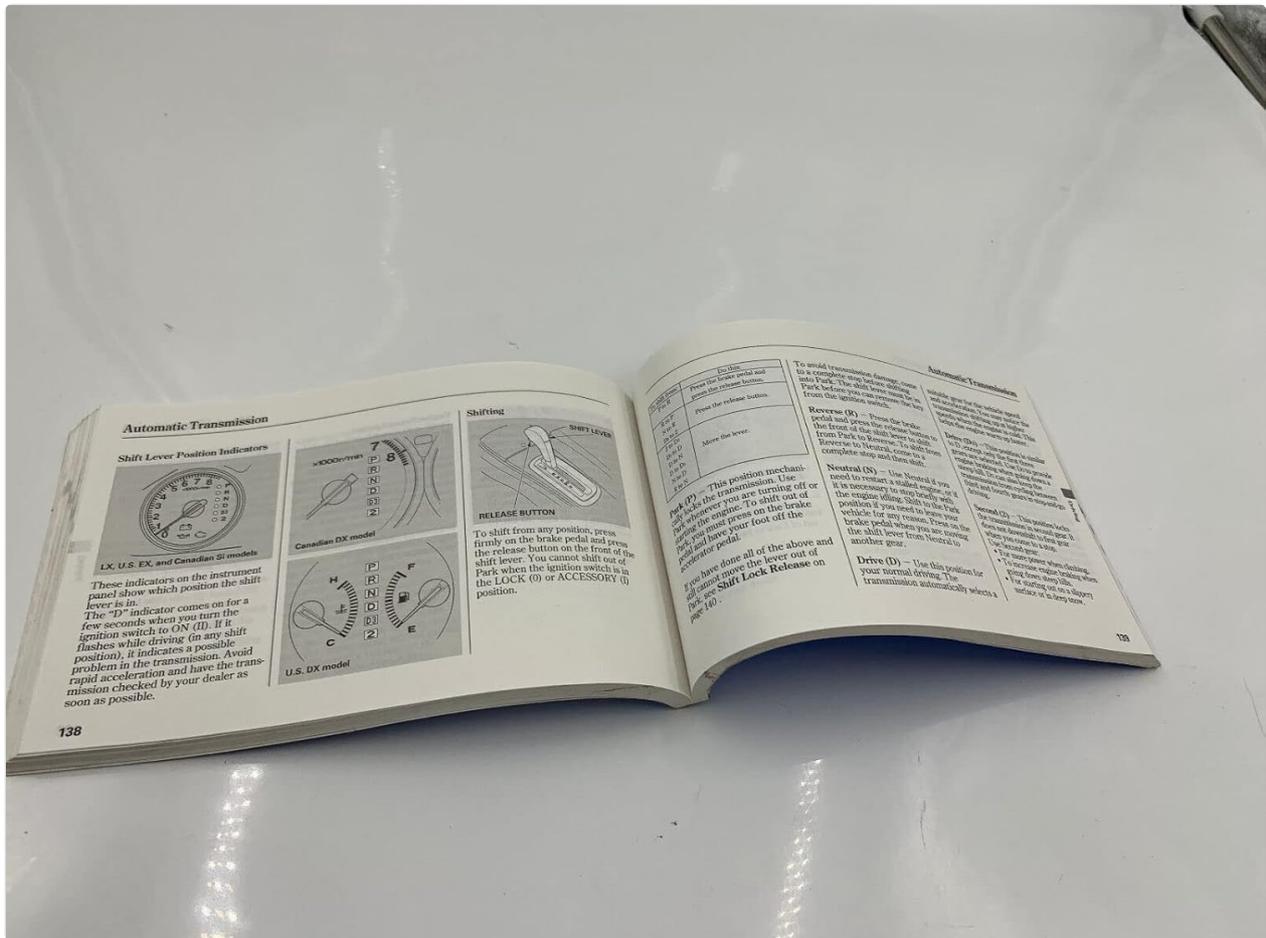

An open page from the owner's manual detailing the automatic transmission. It shows diagrams of the gear selector, shift lever position indicators, and provides instructions for shifting, including the release button.


- **Shift Lever Positions:** Familiarize yourself with P (Park), R (Reverse), N (Neutral), D (Drive), D3 (Drive 3), 2 (Second), and 1 (First) positions.
- **Shifting:** Always press the brake pedal when shifting from Park or Neutral to a drive gear. Use the shift lever release button as instructed.
- **Shift Lever Position Indicators:** Observe the indicators on the instrument panel to confirm the current gear.

MAINTENANCE

Regular maintenance is vital for the longevity and performance of your 2005 Honda Civic Sedan. This section outlines key maintenance procedures.

Changing a Flat Tire

In the event of a flat tire, follow these steps carefully to safely replace it with your spare tire.

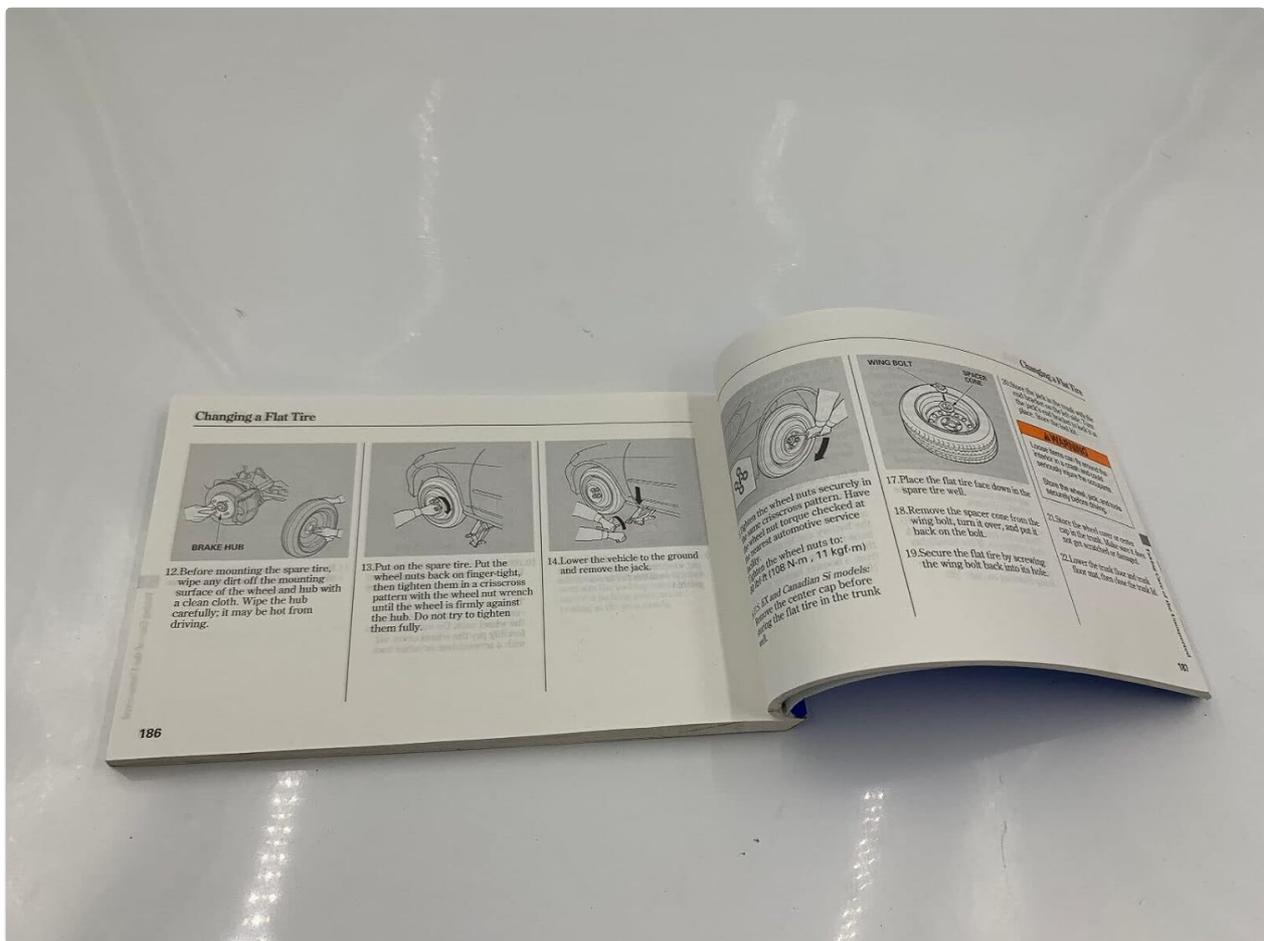

An open page from the owner's manual illustrating the procedure for changing a flat tire. It includes sequential diagrams and numbered instructions for removing the flat tire and installing the spare.

1. **Prepare the Vehicle:** Park on a firm, level surface, engage the parking brake, and turn on hazard lights.
2. **Locate Tools:** Retrieve the jack, lug wrench, and spare tire from their storage locations.
3. **Loosen Lug Nuts:** Slightly loosen the lug nuts on the flat tire before jacking up the vehicle.
4. **Jack Up Vehicle:** Place the jack securely under the vehicle's designated jacking point and raise the vehicle until the tire is off the ground.
5. **Remove Flat Tire:** Fully remove the lug nuts and carefully take off the flat tire.
6. **Install Spare Tire:** Mount the spare tire, hand-tighten the lug nuts, then lower the vehicle and fully tighten the lug nuts in a crisscross pattern.
7. **Store Equipment:** Securely store the flat tire and tools.

For other maintenance tasks such as oil changes, fluid checks, and tire rotations, please refer to the detailed maintenance schedule provided within this manual.

TROUBLESHOOTING

This section addresses common issues you might encounter with your 2005 Honda Civic Sedan and provides basic troubleshooting steps.

- **Engine Not Starting:** Check battery terminals, ensure the gear selector is in Park (P) or Neutral (N), and verify fuel level.
- **Warning Lights On:** Consult the instrument panel section of this manual to identify the specific warning light and its recommended action.
- **Brake Issues:** If you experience reduced braking performance or unusual noises, have your vehicle inspected by a qualified technician immediately.

For more complex issues, it is always recommended to consult a certified Honda service technician.

SPECIFICATIONS

Detailed technical specifications for the 2005 Honda Civic Sedan, including engine type, dimensions, capacities, and performance data, are provided within the comprehensive pages of this owner's manual. Please refer to the dedicated 'Specifications' chapter for precise figures and information relevant to your vehicle's configuration.

- **Engine:** Type, displacement, horsepower, torque.
- **Dimensions:** Length, width, height, wheelbase.
- **Capacities:** Fuel tank, engine oil, coolant.
- **Tire Information:** Recommended tire sizes and pressures.

WARRANTY INFORMATION

Information regarding the vehicle's warranty coverage, terms, and conditions is typically included in a separate warranty booklet or within a dedicated section of this owner's manual. Please consult those resources for details on your vehicle's specific warranty.

CUSTOMER SUPPORT

For further assistance, service inquiries, or to locate an authorized Honda dealer, please refer to the contact information provided within this manual or visit the official Honda website. Always ensure that any service or repairs are performed by qualified technicians using genuine Honda parts.

© 2005 Honda Motor Co., Ltd. All Rights Reserved.

This manual is for informational purposes only.