

Azwok AU-AXD7661-PE002

Azwok AXD7661 Replacement Remote Control for Pioneer AV Receivers

User Manual

INTRODUCTION

This manual provides instructions for the Azwok AXD7661 replacement remote control, designed for use with various Pioneer AV receiver models. This remote offers full functionality without the need for programming, ensuring a straightforward user experience.

SETUP

Battery Installation

The Azwok AXD7661 remote control requires two AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.





Figure 1: Battery compartment with cover open, showing where to insert two AAA batteries.

Once batteries are installed, the remote is ready for immediate use with compatible Pioneer AV receivers; no programming is required.

OPERATING INSTRUCTIONS

Basic Operation

This replacement remote control is designed to function identically to the original Pioneer AXD7661 remote. Simply point the remote at your Pioneer AV receiver and press the desired function button.



Figure 2: Front view of the Azwok AXD7661 remote control, displaying all control buttons.

Compatible Models

This remote control is compatible with a wide range of Pioneer AV receiver models, including but not limited to:

- VSX-422-K, HTP-071, VSX-321-K-P, VSX-827, VSX42, VSX819VK, VSX921, VSX527, VSX827, VSX-422, VSX-521, VSX-1019, VSX521, VSX1019, VSX822, VSX1022, VSX-824-K
- HTP-070, VSX-421-K, VSX-421, VSX-422-S, VSX-529-K, VSX-529-S, VSX-424-K, VSX-329-K
- VSX-42, VSX-819V-K, VSX-921, VSX-527, VSX-822, VSX-1022
- AXD7662, AXD7621, AXD7622, AXD7624, AXD7660

If your specific model is not listed, or if you are unsure about compatibility, please refer to the support section for assistance.

MAINTENANCE

Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials, as these can damage the remote's surface or internal components.

Battery Care

- Replace batteries when the remote's performance diminishes or stops working.
- Remove batteries if the remote will not be used for an extended period to prevent leakage and potential damage.
- Dispose of used batteries responsibly according to local regulations.

TROUBLESHOOTING

Remote Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-) and are not depleted. Replace with fresh AAA batteries if necessary.
- **Line of Sight:** Make sure there is a clear line of sight between the remote control and the AV receiver. Obstructions can block the infrared signal.
- **Distance:** Operate the remote within its effective range (up to 10 meters).
- **Receiver Power:** Confirm that your Pioneer AV receiver is powered on.

Specific Functions Not Working

- **Compatibility:** While this remote is broadly compatible, some highly specific functions might vary slightly depending on your exact receiver model. Refer to your receiver's original manual for detailed function mapping.
- **Button Malfunction:** If only one or a few buttons are unresponsive, gently clean around the buttons. If the issue persists, contact support.

SPECIFICATIONS

Brand: Azwok

Model Number: AU-AXD7661-PE002

Special Feature: No Programming Required

Max Number of Supported Devices: 1

Compatible Devices: Home Theater (Pioneer AV Receivers)

Connectivity Technology: Infrared (IR)

Controller Type: Button Control

Maximum Range: 10 Meters (approx. 33 feet)

Batteries Required: 2 x AAA (Alkaline recommended)

Item Weight: 77 Grams

WARRANTY INFORMATION

This Azwok AXD7661 replacement remote control comes with a **12-month warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. For warranty claims or further details, please contact customer support.

CUSTOMER SUPPORT

If you encounter any issues not covered in this manual, or if you require further assistance with your Azwok AXD7661 remote control, please contact the seller or manufacturer directly through your purchase platform. When contacting support, please provide your product model number (AU-AXD7661-PE002) and a detailed description of the issue.