

Azwok QT1F

Azwok QT1F Replacement Remote Control User Manual

For Soniq TV Models: SPF50FV17A003, F40FV17B-AU, F40FV17C-AU, F50FV17A-AU, F60FV17A-AU, F40FV17BAU, F40FV17CAU, F50FV17AAU, F60FV17AAU

INTRODUCTION

This manual provides instructions for the Azwok QT1F replacement remote control, designed for use with various Soniq TV models. This remote control is a direct replacement and requires no programming for immediate use. Please read this manual carefully to ensure proper operation and longevity of your remote control.

SETUP

1. Battery Installation

The Azwok QT1F remote control operates on two AAA batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





Image: Back view of the Azwok QT1F remote control with the battery compartment open, illustrating the correct placement for two AAA batteries. The compartment cover is shown detached next to the remote.

2. Initial Use

This replacement remote control is designed to be ready for use immediately after battery installation. No programming or pairing is required. Simply point the remote control towards your Soniq TV and begin operation.

OPERATING INSTRUCTIONS

The Azwok QT1F remote control provides full functionality for your compatible Soniq TV. Below is a general overview of the buttons and their functions:





Image: Front view of the Azwok QT1F remote control, displaying all buttons. Key buttons include Power (red), Mute (green), Aspect, P.Mode, S.Mode, Subtitle, I-II/Audio, Info, number pad (0-9), Sleep, Apps, Home, Source, Menu, EPG, navigation arrows (up, down, left, right), OK, Exit, Return, Volume Up/Down, Channel Up/Down, Setup, Repeat, Title/PBC, PVR.L, Rec, Cancel, Text, D/A, Reveal, Hold, Index, Sub.Page, Txt.Size, USB/SD, T/RD.DIS, and colored function buttons (red, green, yellow, blue).

- **POWER (Red Button):** Turns the TV on or off.
- **MUTE (Green Button):** Mutes or unmutes the TV audio.
- **ASPECT:** Changes the screen aspect ratio.
- **P.MODE:** Selects picture modes (e.g., Standard, Dynamic, Movie).
- **S.MODE:** Selects sound modes (e.g., Standard, Music, Movie).
- **SUBTITLE:** Activates or deactivates subtitles.
- **I-II/AUDIO:** Selects audio language or mode.
- **INFO:** Displays current program information.
- **Number Buttons (0-9):** Directly select TV channels.
- **SLEEP:** Sets the sleep timer.
- **APPS:** Accesses smart TV applications.
- **HOME:** Returns to the TV's home screen.
- **SOURCE:** Selects input sources (e.g., HDMI, AV).
- **MENU:** Opens the main TV menu.
- **EPG:** Displays the Electronic Program Guide.
- **Navigation Arrows (Up, Down, Left, Right):** Navigate through menus and options.
- **OK:** Confirms selections in menus.
- **EXIT:** Exits the current menu or function.
- **RETURN:** Returns to the previous screen or channel.
- **VOL +/-:** Adjusts the volume level.

- **CH +/-:** Changes the TV channel.
- **SETUP:** Accesses setup options.
- **REC:** Initiates recording (if supported by TV and connected device).
- **YouTube:** Direct access to the YouTube application.
- **Colored Buttons (Red, Green, Yellow, Blue):** Perform specific functions as indicated on the TV screen or in specific applications.

MAINTENANCE

Cleaning

To clean your remote control, use a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials, as these can damage the remote's surface or internal components.

Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA). Do not mix old and new batteries, or different types of batteries, as this can lead to leakage or damage.

Storage

If the remote control will not be used for an extended period, remove the batteries to prevent potential leakage and damage. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

- **Remote Control Not Responding:**
 - Ensure batteries are installed correctly with the correct polarity.
 - Replace old batteries with new ones.
 - Check for any obstructions between the remote control and the TV's infrared sensor.
 - Ensure you are within the effective range of the TV's infrared receiver.
- **Specific Buttons Not Working:**
 - Clean the remote control, especially around the non-functional buttons, to remove any dirt or debris that might be preventing proper contact.
 - If only a few buttons are unresponsive after checking batteries and cleaning, the remote may be damaged and require replacement.
- **TV Model Compatibility:**
 - This remote is specifically designed for the listed Soniq TV models. If your TV model is not listed, functionality may vary or be absent.

SPECIFICATIONS

Brand	Azwok
-------	-------

Model	QT1F
Compatible Devices	Soniq Televisions (Specific models listed in header)
Connectivity Technology	Infrared (IR)
Special Feature	No Programming Required
Power Source	2 x AAA Batteries (not included)

WARRANTY AND SUPPORT

This Azwok QT1F remote control comes with a 12-month warranty from the date of purchase. This warranty covers manufacturing defects under normal use.

If you encounter any issues with your remote control, or if you are unsure about its compatibility with your specific Soniq TV model, please contact the seller or manufacturer's support channel for assistance. Providing your TV model number will help expedite support.